

Configuring Windows 11 Pro for Maccor use.

This document provides instructions for configuring a Windows 11 PC for use with MacTest32 Software.

** It is suggested the user have Full Administrative Rights to the PC during setup.*

*** 64-bit Pro recommended*

Table of Contents

I. Initial Preparation of PC - Hardware:	2
II. Preparing Windows	3
A. Initial Setup	3
B. Complete All Windows Updates	12
C. Turn off UAC (User Account Control)	14
D. Install Maccor Software	15
E. Configure Windows Security	16
F. Remove unnecessary entertainment programs/apps/desktop icons from Pinned area at Start menu	19
G. Remove Windows 11 “Copilot”	20
H. Uninstall or disable additional bloatware	21
I. Set Desktop background to solid blue	23
J. Modify additional Personalization Settings	25
K. Disable data logging/tracking	29
L. Set Maccor Program (MacTest32.exe) to <i>Run as Administrator</i>	50
M. Set Maccor Calibration program (MaccorCalibration) to <i>Run as Administrator</i>	52
N. Change Maccor icon	54
O. Adjust PC clock	55
P. Change User Account Picture	56
Q. Network Adapter Settings	57
R. Windows Firewall	64
S. Local Group Policy Editor – Disable Windows Automatic Updates	68
T. PC Performance Settings	72
U. Disable System Protection	76
V. Modify “File Extensions and Hidden File” settings	78
W. Disable Windows Auto-Defragmentation	81
X. Appendix A – Installing Support for ParStat, Solartron, or Modulab EIS	83

I. Initial Preparation of PC - Hardware:

1. Carefully remove PC, Monitor, keyboard, mouse, and save all packing material/boxes.


** Be careful not to damage packing material or boxes (this can be used to repack the computer).*

2. Install PCIe Network Card (NIC) in appropriate motherboard expansion slot (PCIe "x1" shown).


** Place instructions, disc, and box aside until PC has been validated – then discard.*

**** Currently, Maccor is using the Intel I210-T1 network card – part# EOX95AA**

***** This card will be used for connection to Maccor Tester.**

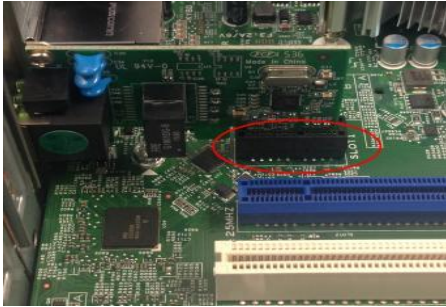

** To prevent static damage, do not touch "gold-fingers" while handling card.*

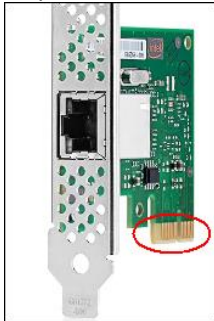

3. Assemble PC workstation (desktop, monitor, keyboard, mouse).


4. Connect onboard integrated network adapter to network for internet connectivity.

5. Turn PC and monitor on.


II. Preparing Windows

A. Initial Setup

1. Confirm correct Country.

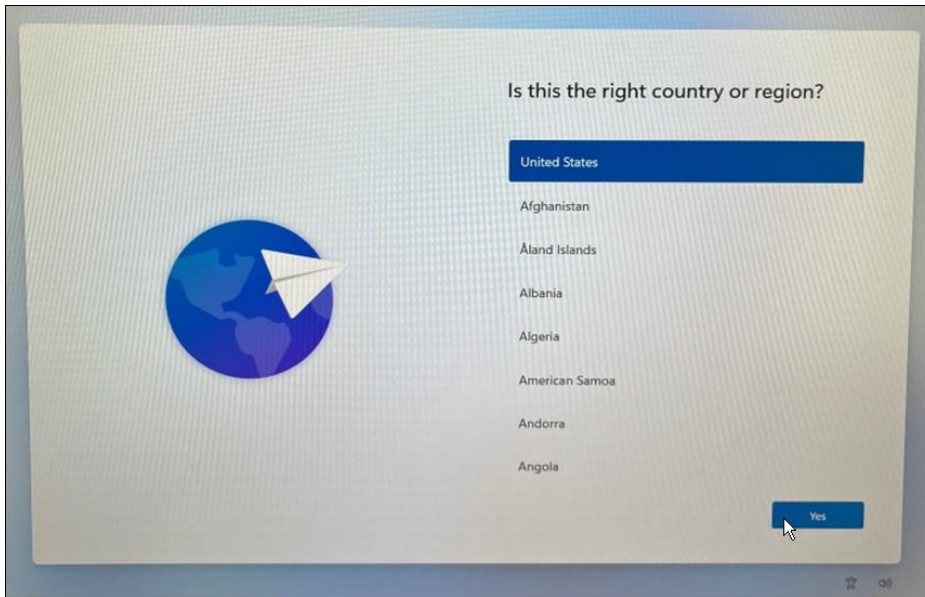


2. Keyboard selection

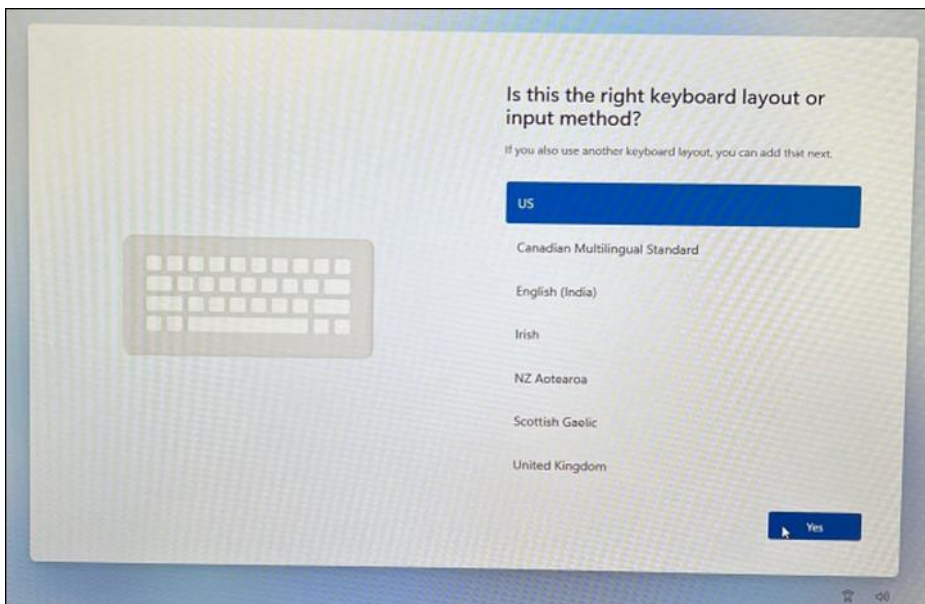


3. Second keyboard option

* If second keyboard layout is desired, click “Add layout”. Otherwise, click [Skip].

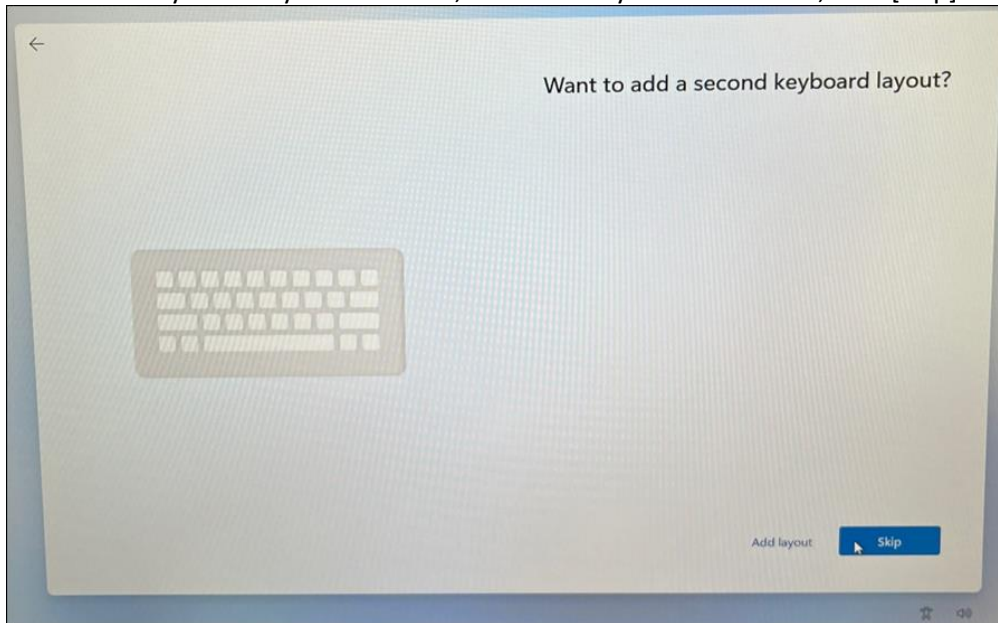


4. Windows “Keep PC on” screen

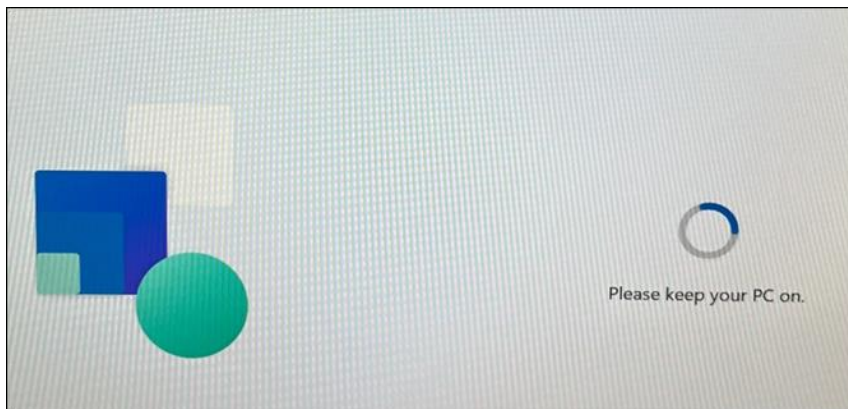


5. Create the Computer name

** For example, "MaccorPC-J12345" (MaccorPC-Job Order # of Maccor tester)*

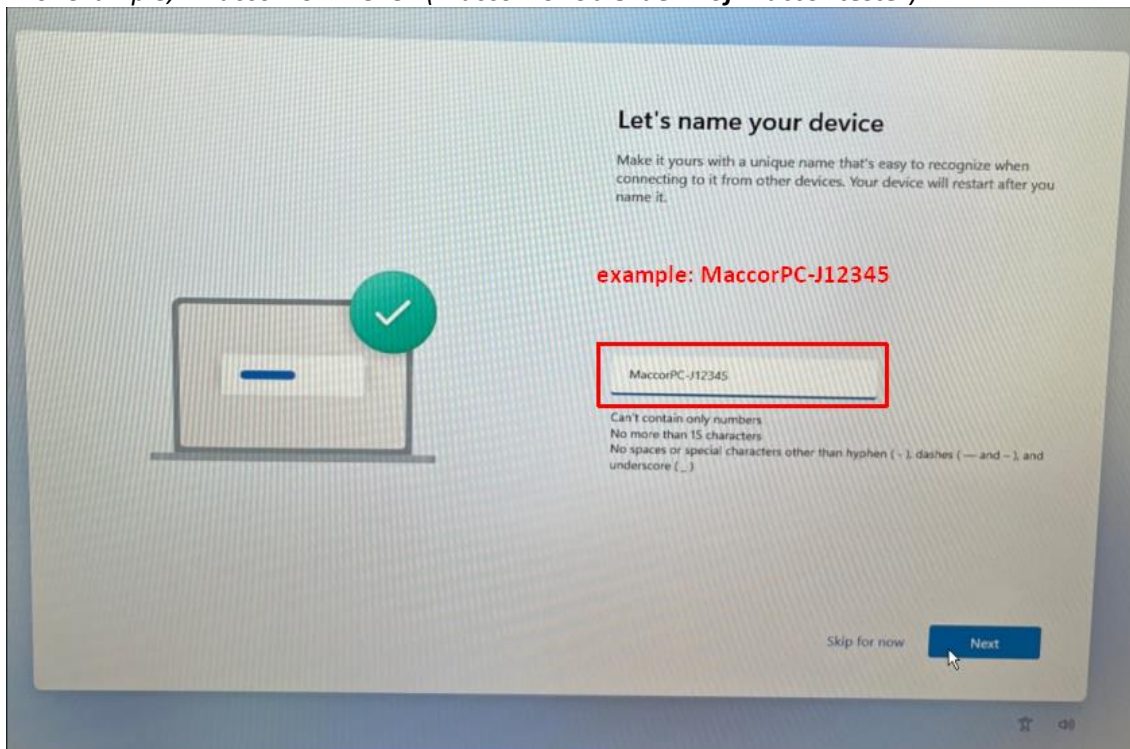


6. "Set up device" screen – Personal Use

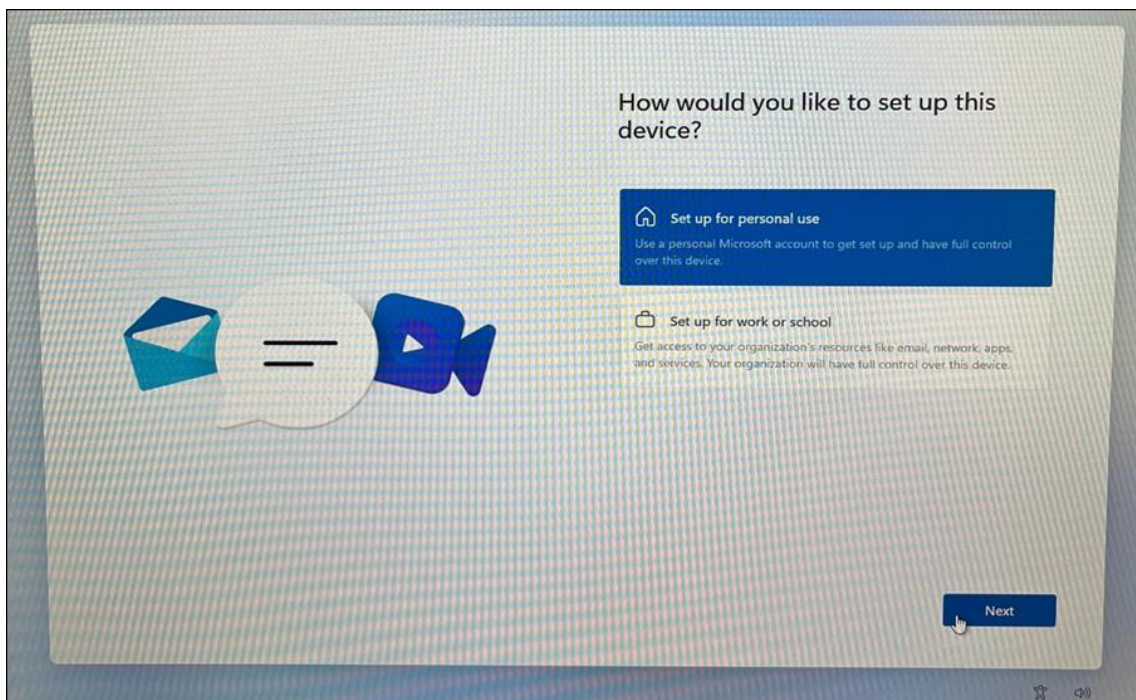


7. Set PC as Local Account Administrator

a. "Unlock Microsoft experience" screen

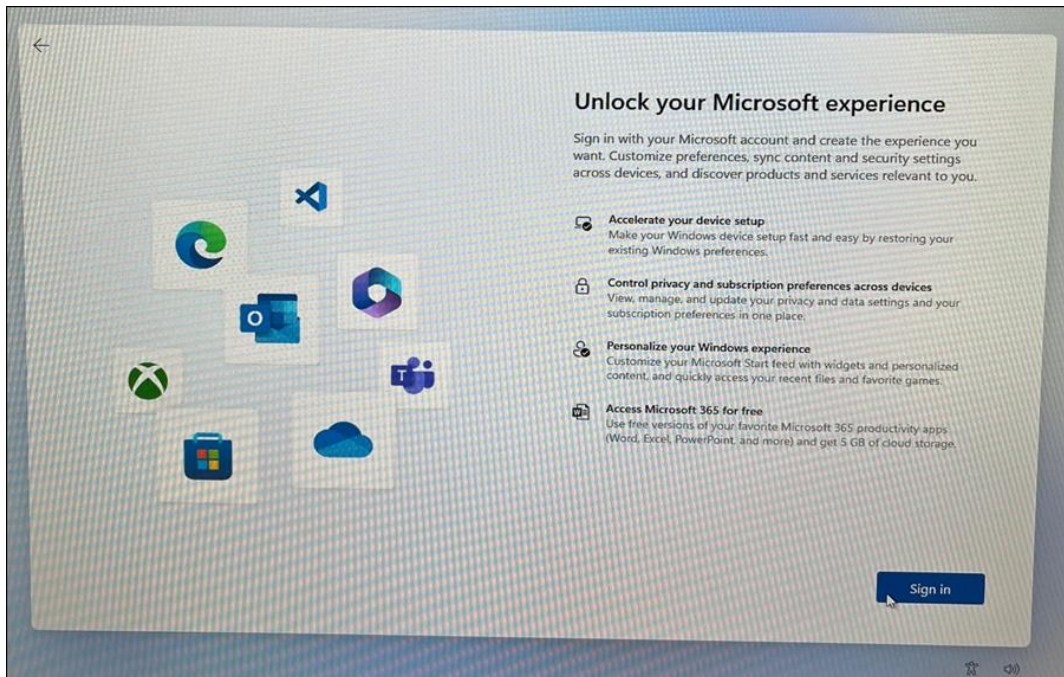


b. "Add Microsoft account" screen

* Type "no@thankyou.com"

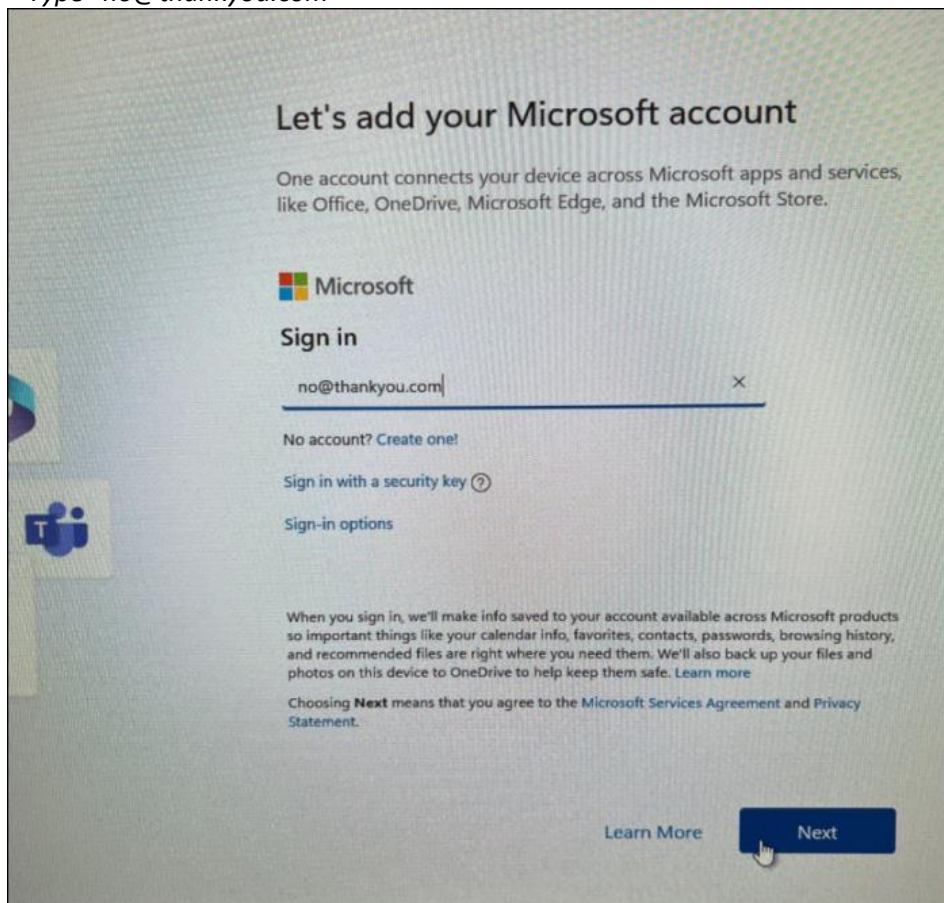


- c. Enter Microsoft password

** Type any password, and note the one used*

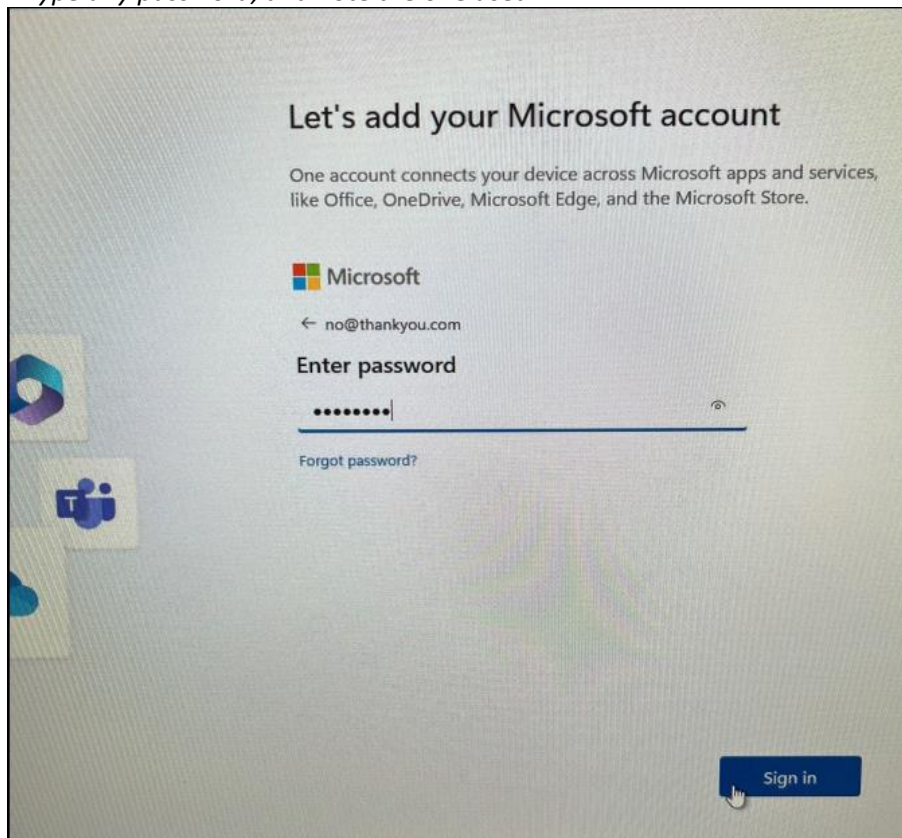


- d. At “something went wrong” screen, click [Next].

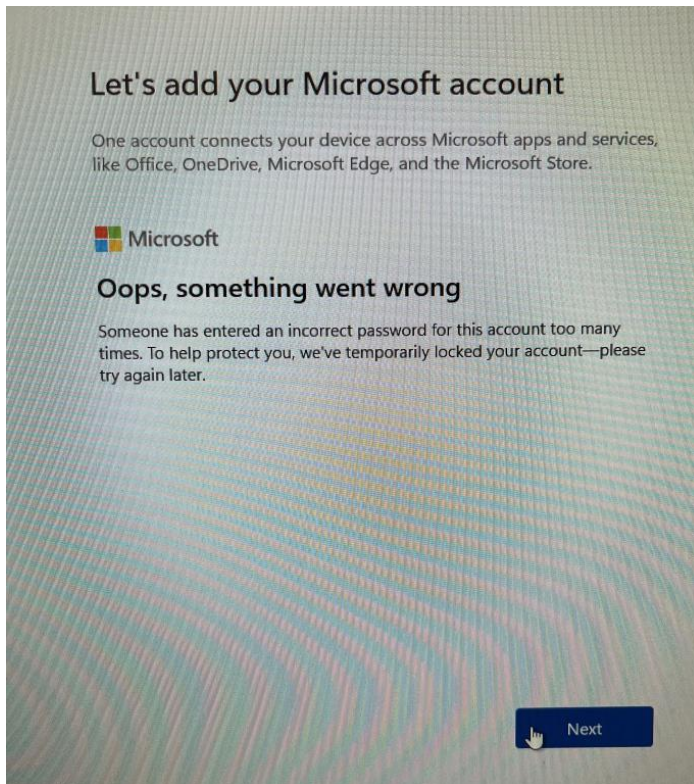


- e. Define Windows User Name

(type “Maccor Tester User” or desired username)

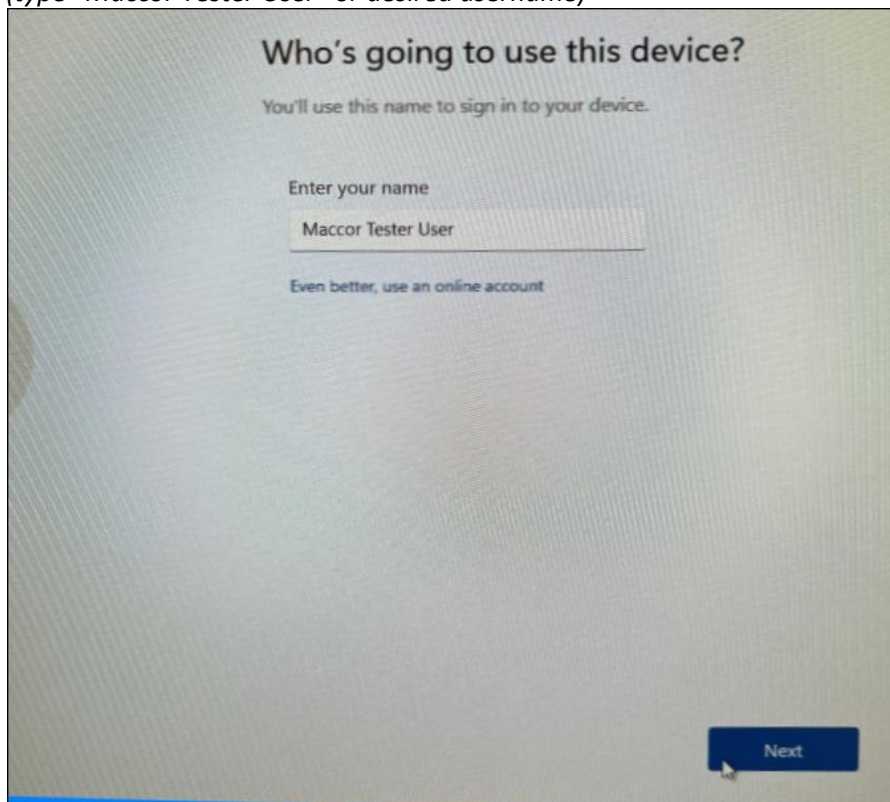

f. Create Windows Password

** Note password used*

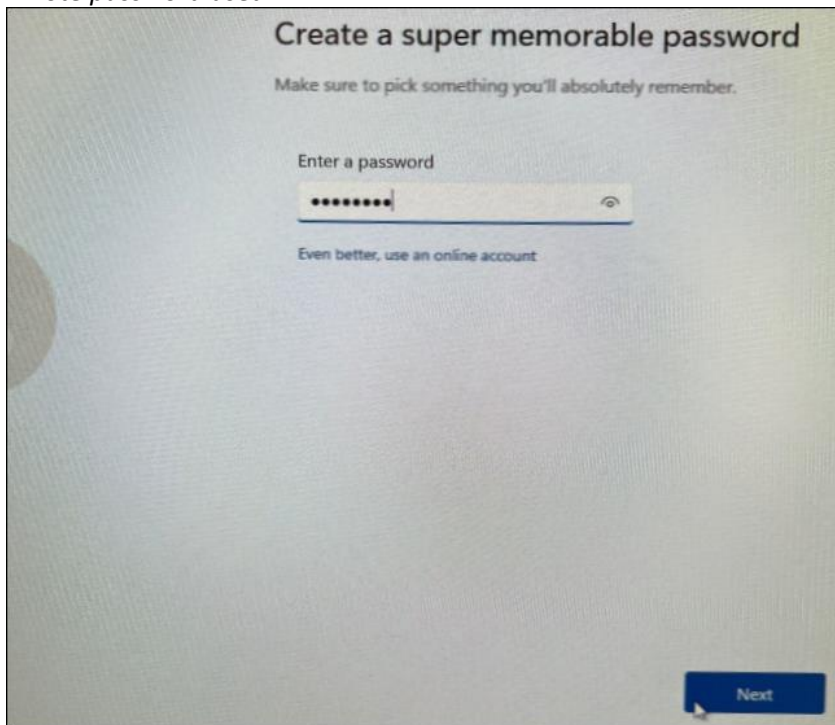

Create a super memorable password

Make sure to pick something you'll absolutely remember.


Enter a password

.....

Even better, use an online account

Next

g. Confirm password

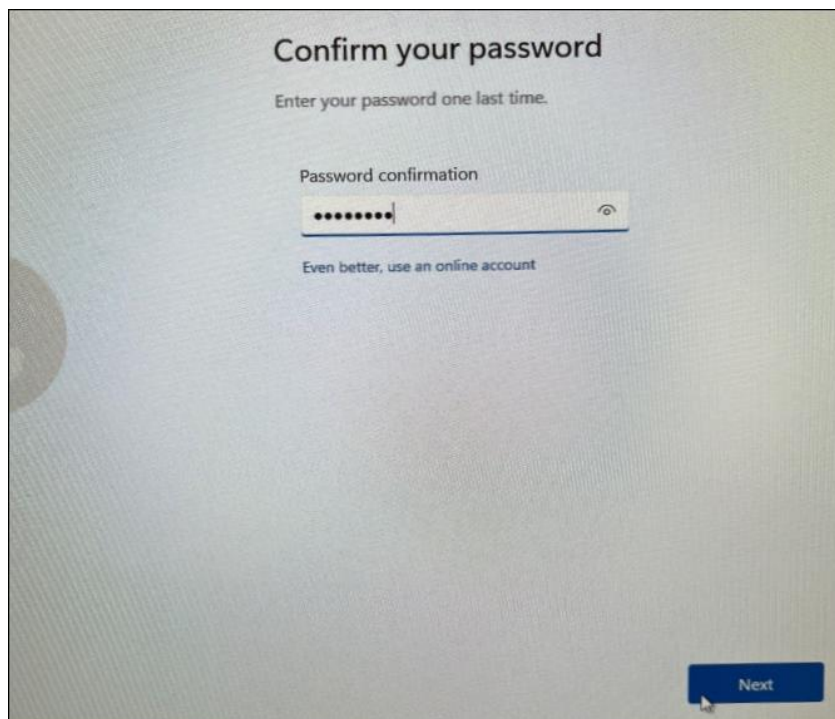

Confirm your password

Enter your password one last time.


Password confirmation

.....

Even better, use an online account

Next

- h. Complete three security questions

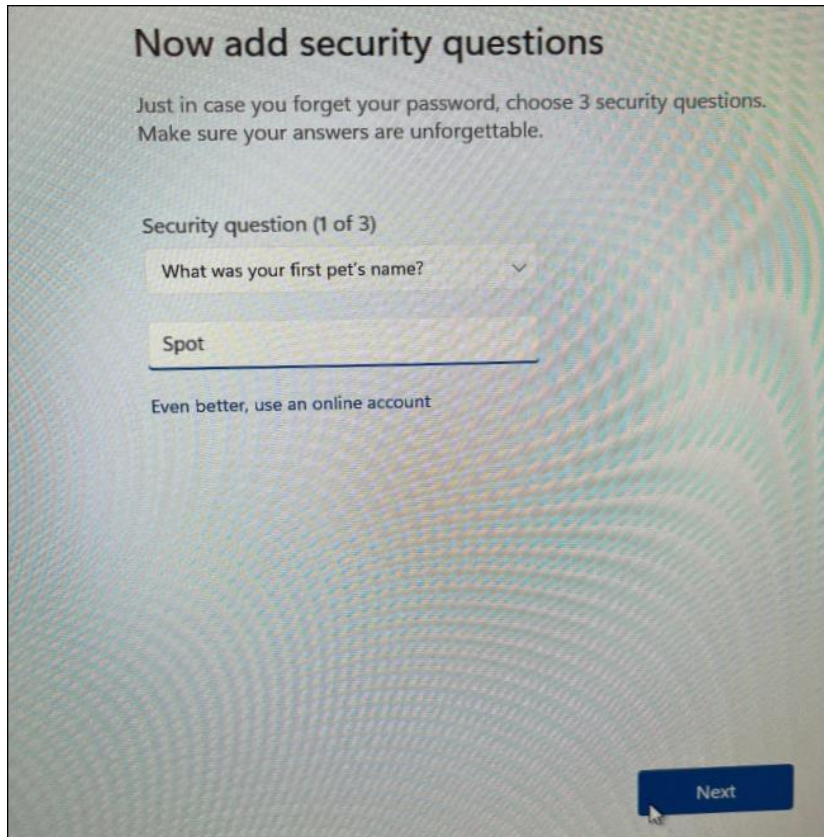

The screenshot shows the Windows 11 setup screen for adding security questions. The title is "Now add security questions". Below it, a message says: "Just in case you forget your password, choose 3 security questions. Make sure your answers are unforgettable." The first question is "Security question (1 of 3)" with a dropdown menu showing "What was your first pet's name?". Below the dropdown is a text input field containing the word "Spot". At the bottom of the screen, there is a blue button labeled "Next".

Now add security questions

Just in case you forget your password, choose 3 security questions.
Make sure your answers are unforgettable.

Security question (1 of 3)

What was your first pet's name? ▼


Spot

Even better, use an online account


Next

i. Disable Initial Privacy Settings

(turn all switches to No)

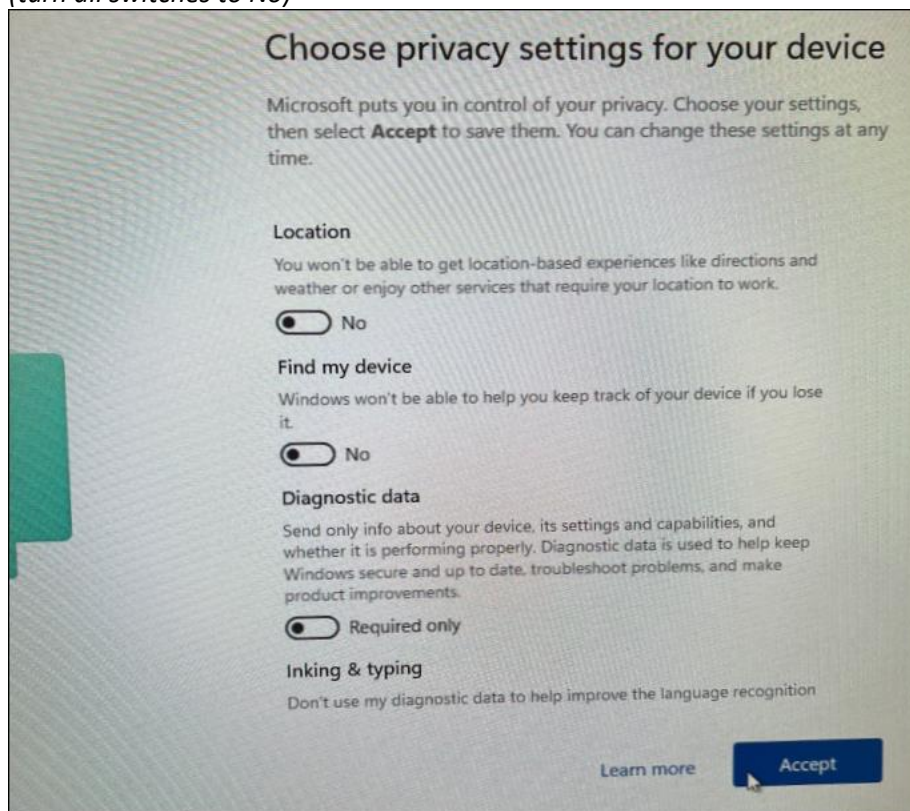


j. Allow Windows to update settings

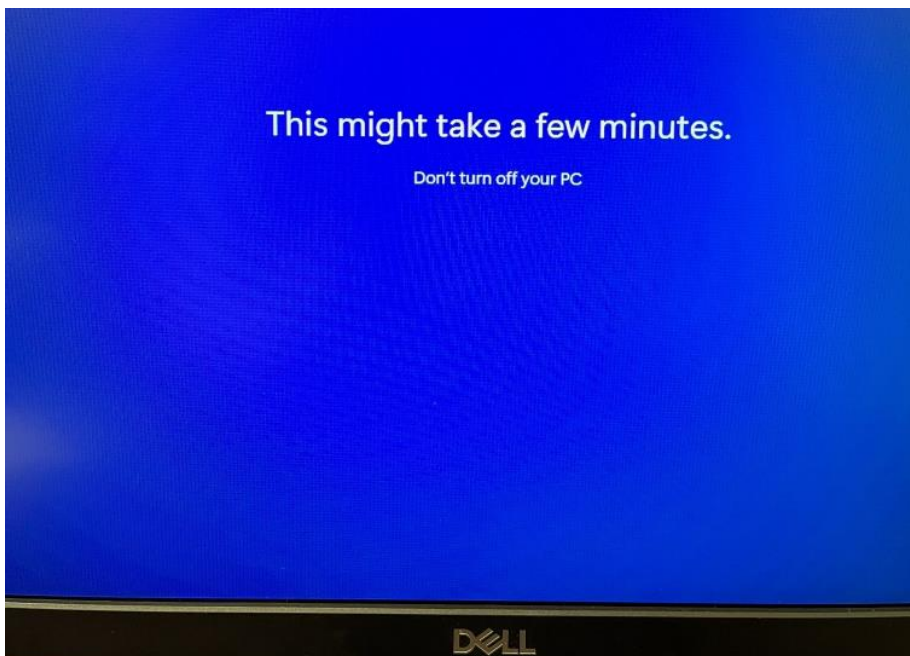


* Windows will now bring you to the main desktop and function as a Local Administrator account under the defined username

B. Complete All Windows Updates


1. Left-click start button, select "Settings"

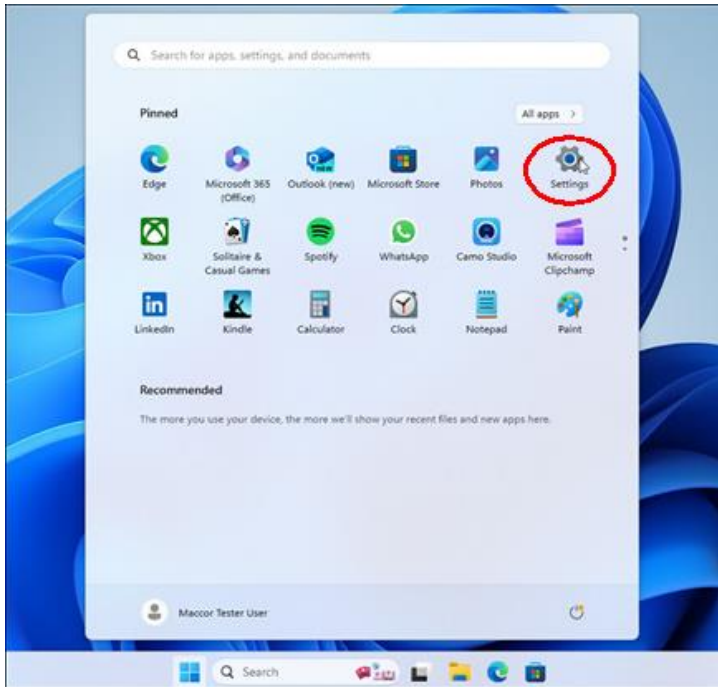


2. Click Windows Update

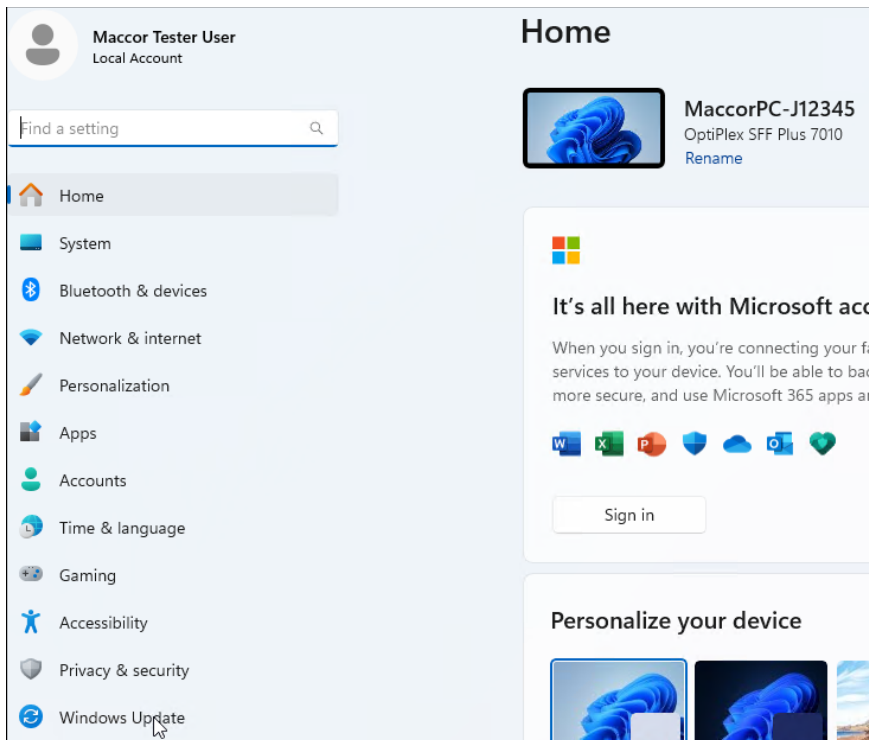


3. Select “Advanced options”

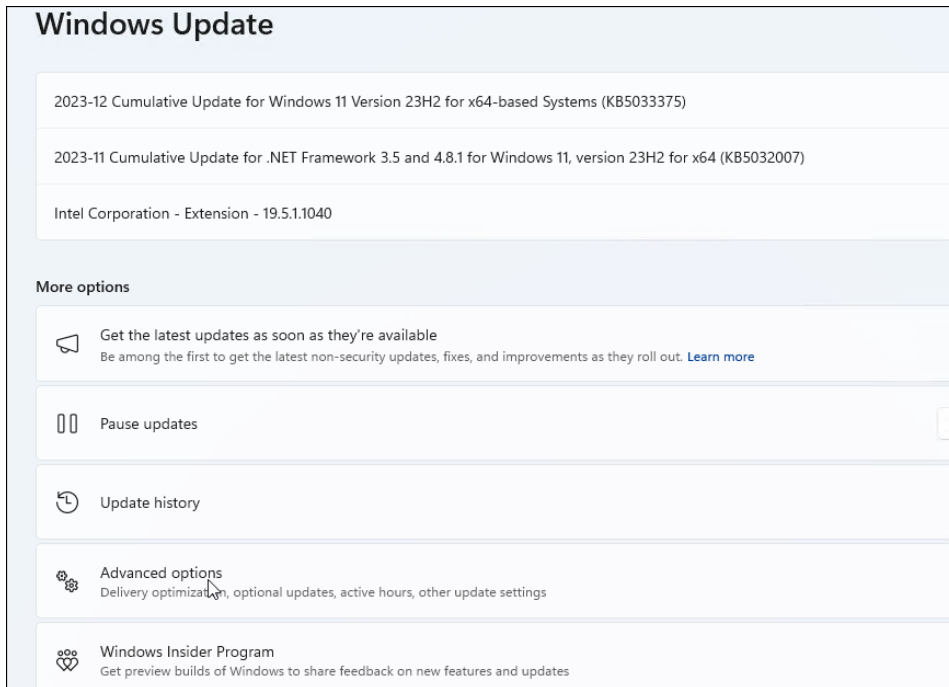

4. Verify selections are as shown:

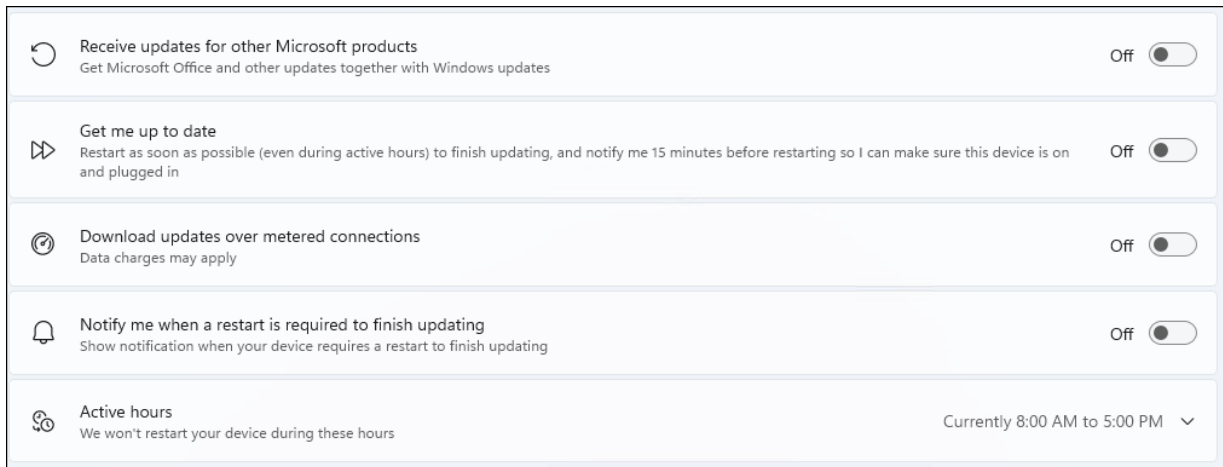


5. Return to Windows Update screen

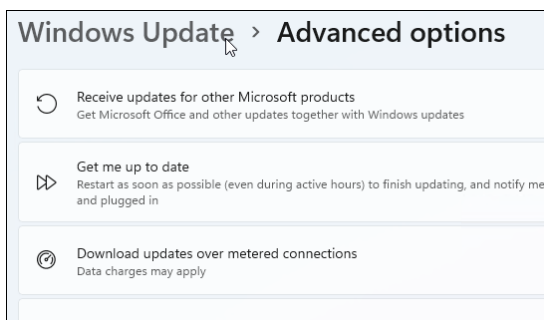

6. Restart as required.




7. Close Windows Update screen after updates have been completed.

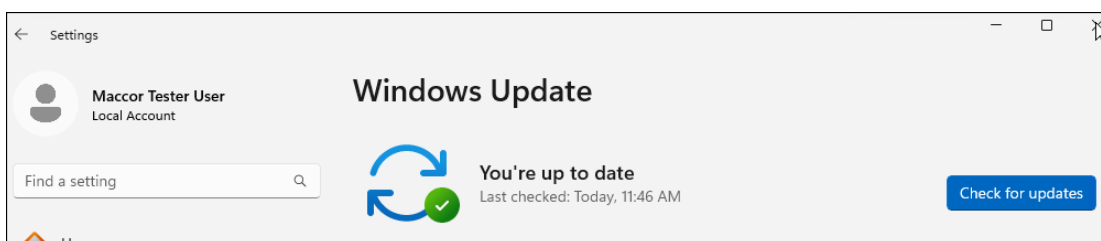


C. Turn off UAC (User Account Control)


1. At Windows task bar search, type "uac", press [Enter]

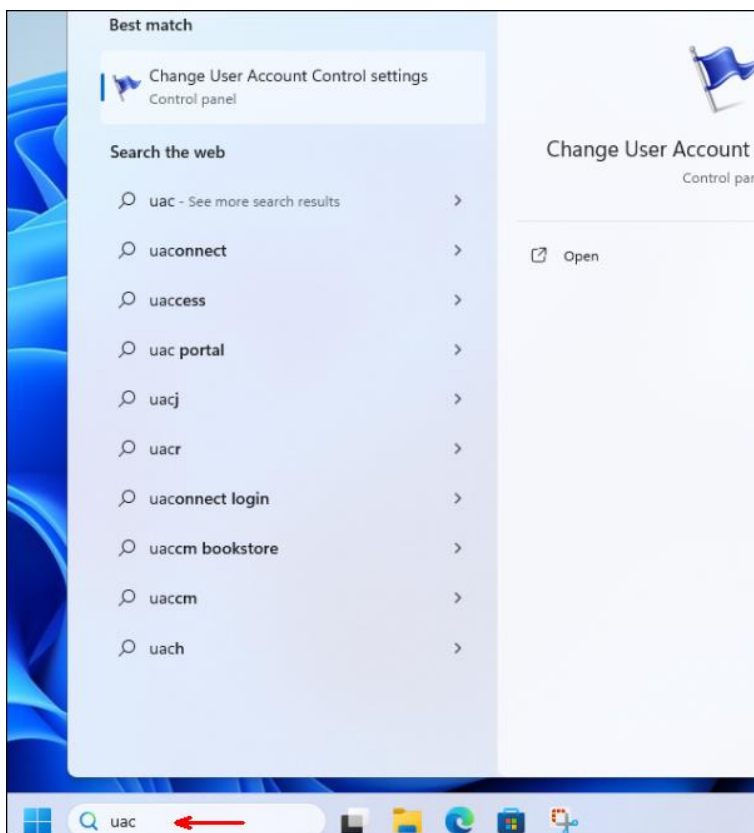

2. Move slider to “Never notify”, click OK.

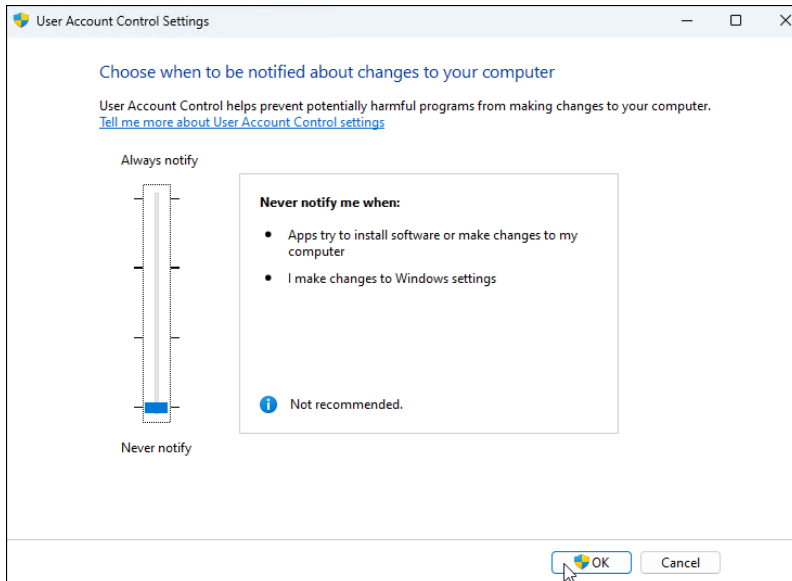

3. Click [Yes]

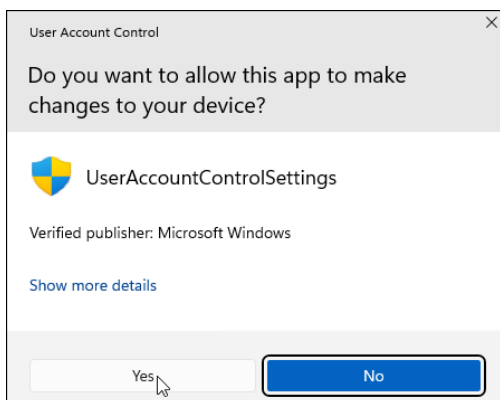


D. Install Maccor Software.

** If installing support for PARSTAT or EIS device, see Appendix A before continuing (Pg 75)*


*** Contact [Maccor Customer Service](#) if assistance is needed.*

E. Configure Windows Security


1. Click Windows start button, then Settings.

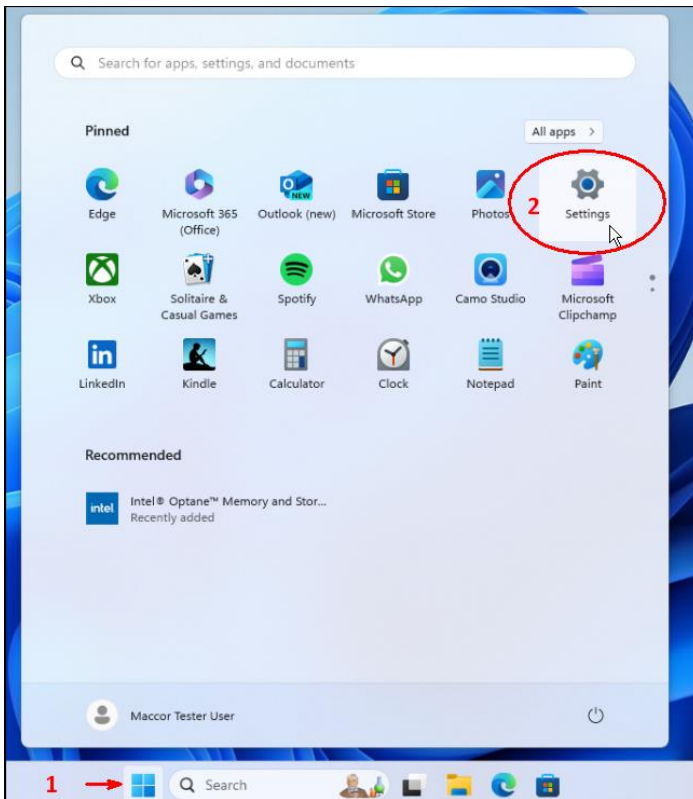

2. Select "Privacy & Security".

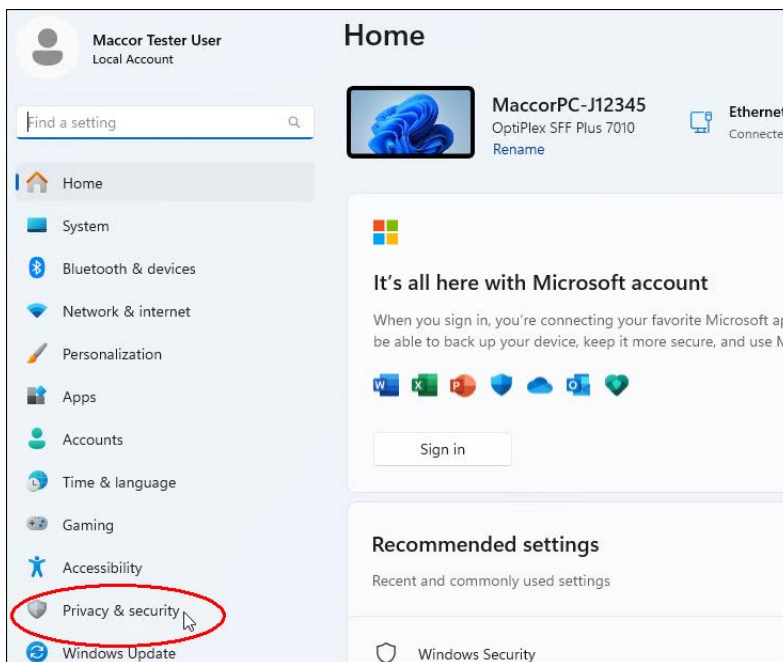


3. Click [Windows Security]

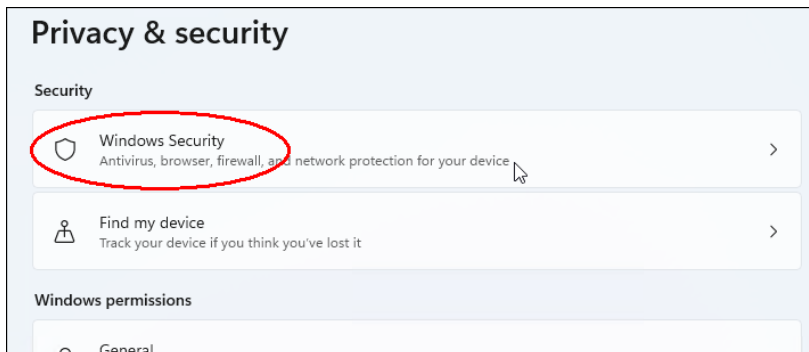


4. Click "Virus & threat protection"




5. Scroll down, select "Manage Settings"

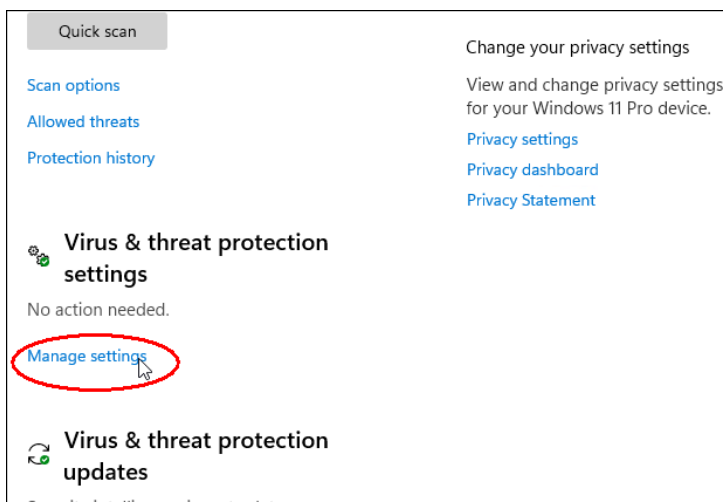


6. Scroll down, click “Add or remove exclusions”

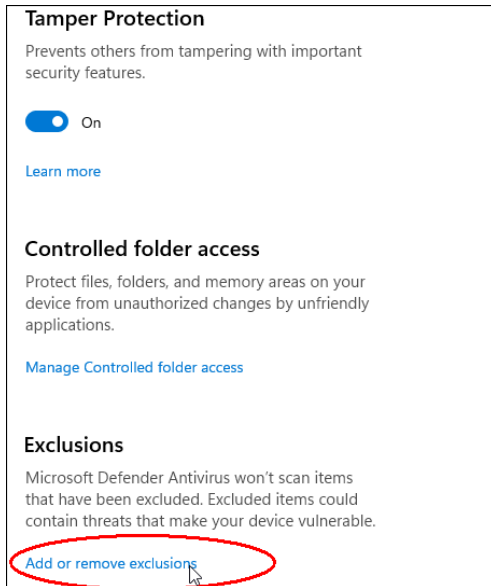


7. Click “Add an exclusion, then “Folder”.

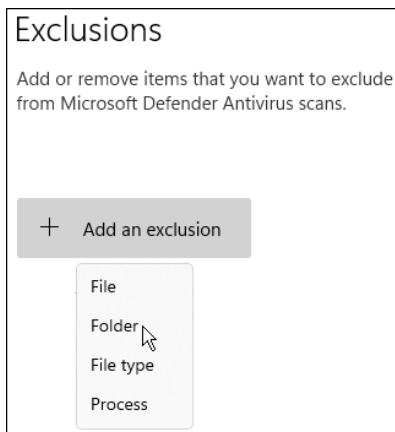

8. Browse to Maccor folder, click [Select folder].

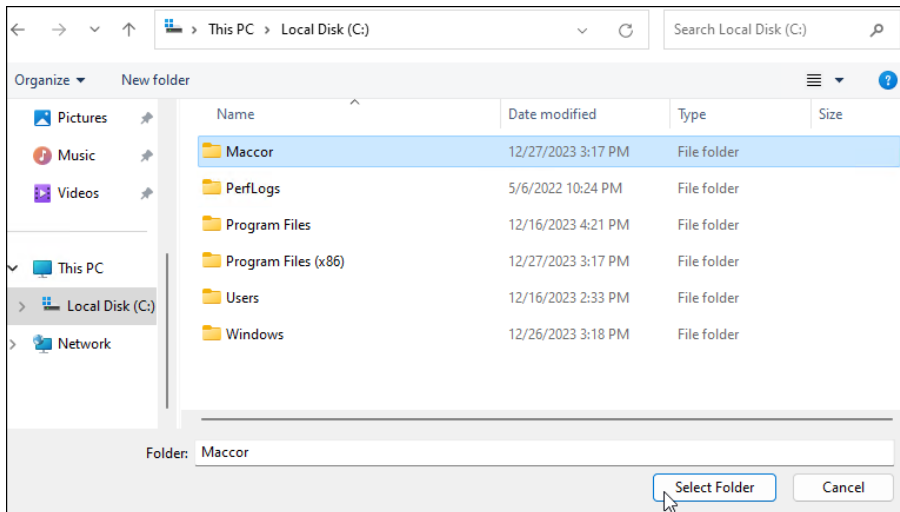

9. Close all dialogue screens

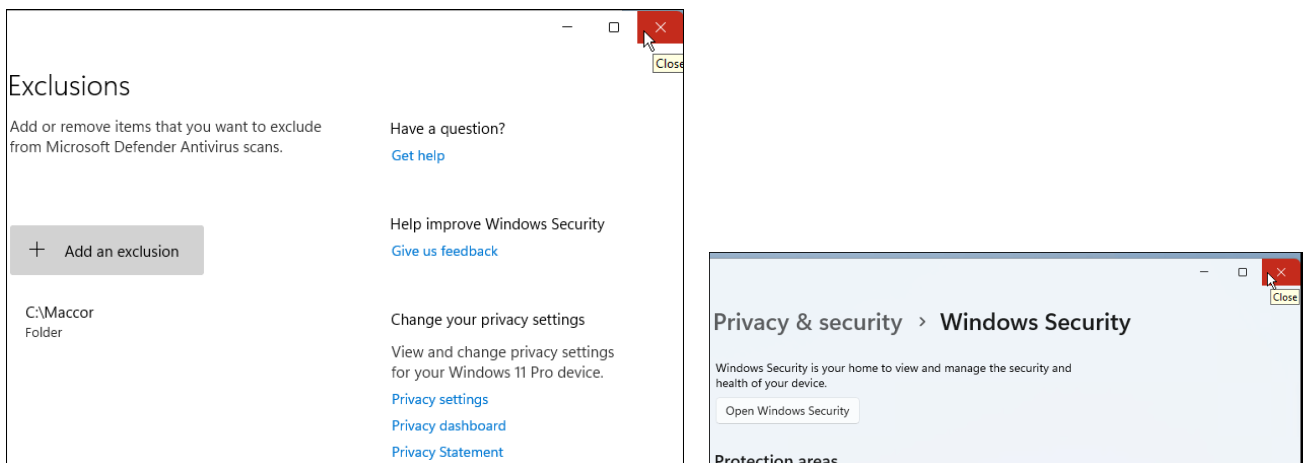

F. Remove unnecessary entertainment programs/apps/desktop icons from Pinned area at Start menu.




** Some programs will have the ability to directly uninstall via right-click, other programs can only be un-pinned.*

- Linkedin - uninstall
- Xbox - uninstall
- Spotify - uninstall
- WhatsApp - uninstall
- Movies & TV - uninstall
- Microsoft 365 (Office) - uninstall
- Outlook - uninstall
- Microsoft Store – unpin from Start, unpin from Taskbar
- Paint – unpin from Start
- Solitaire & Casual Games – uninstall


G. Remove Windows 11 “Copilot”

** Copilot is Microsoft’s new AI feature intended to replace Cortana and do things Cortana could not. It is a feature that is not necessary or desired on a Maccor PC in the lab.*

1. Enter “gpedit.msc” in Windows Search field.
2. Expand **User Configuration > Administrative Templates > Windows Components**

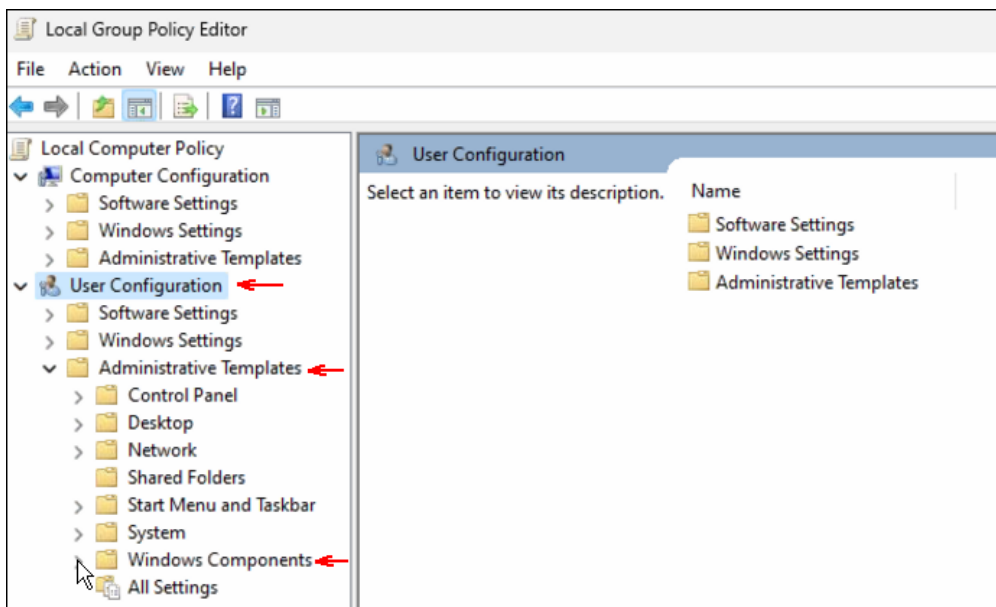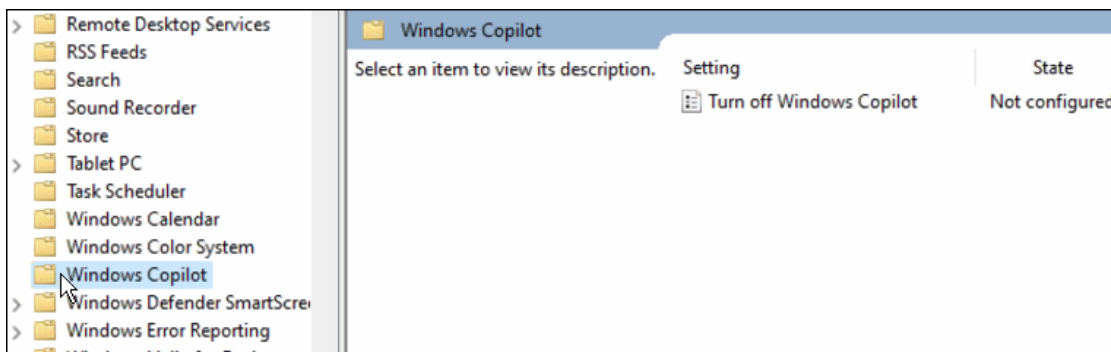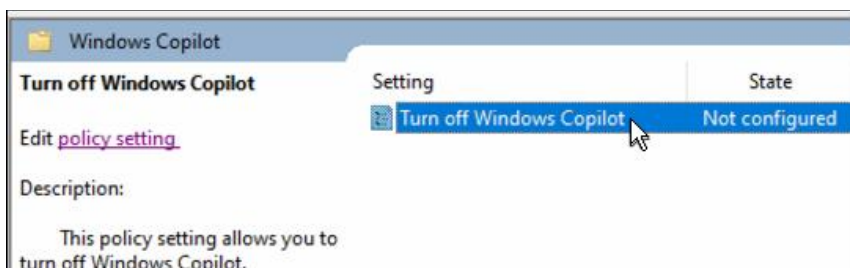
3. Select Windows Copilot

4. Double-click Turn off Windows Copilot

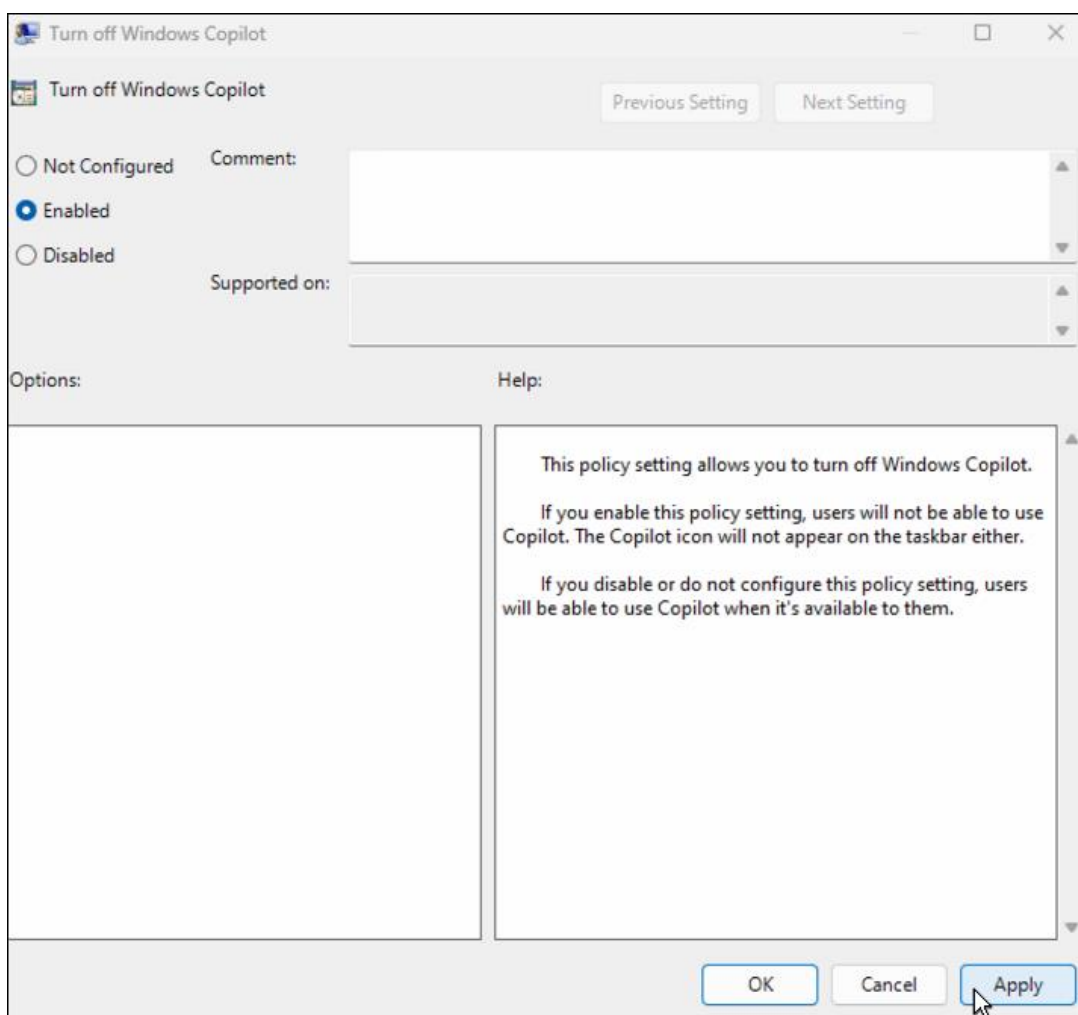
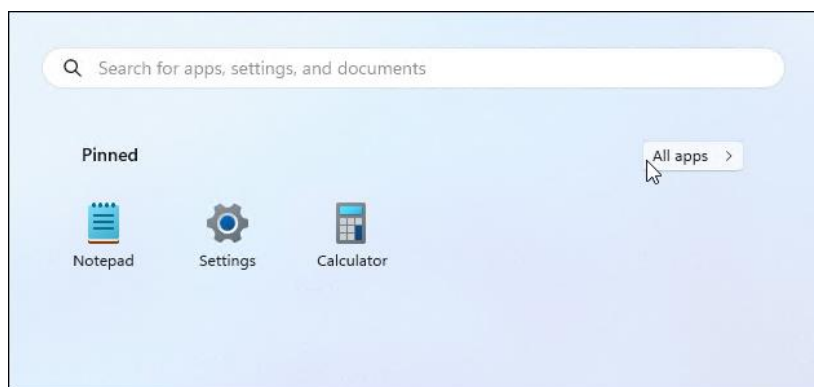
5. Select **Enabled**, click [Apply], [OK]



6. Restart PC for changes to take effect.

H. Uninstall or disable additional bloatware

1. Click on "All apps"




- Uninstall the following apps via right-click:

Cortana
 Feedback Hub
 Mail
 Maps
 Media Player
 News
 Weather

- Right-click Taskbar, select "Taskbar settings"




- Click visible switches to OFF position, close dialogue screen.

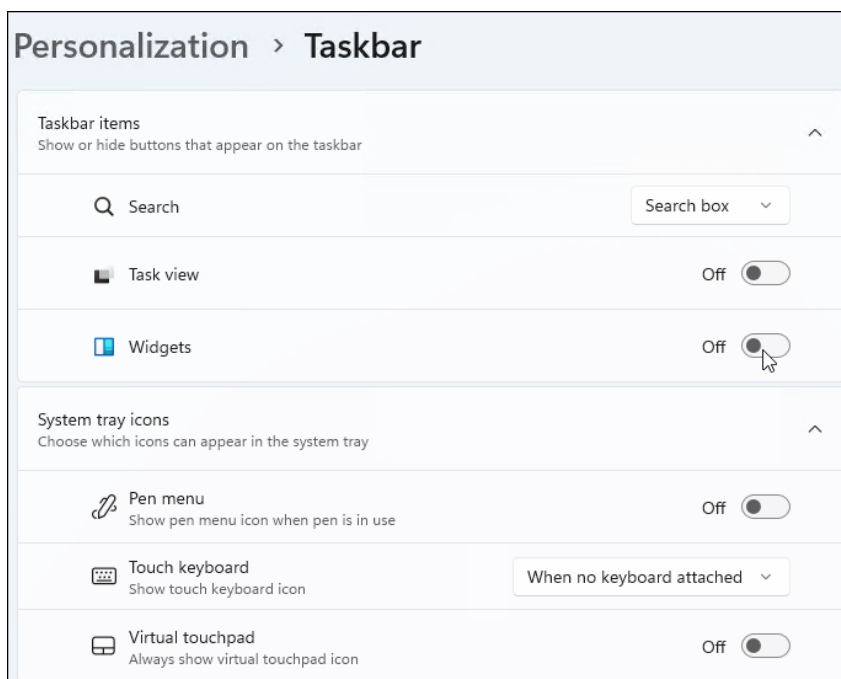


I. Set Desktop background to solid blue.


1. Position mouse over blank area on desktop. Right-click, select Personalize.

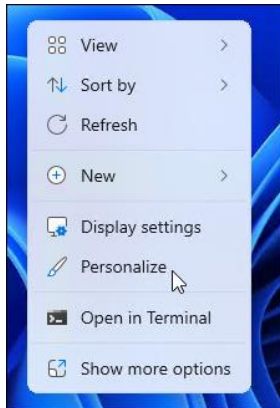


2. Select "Background"

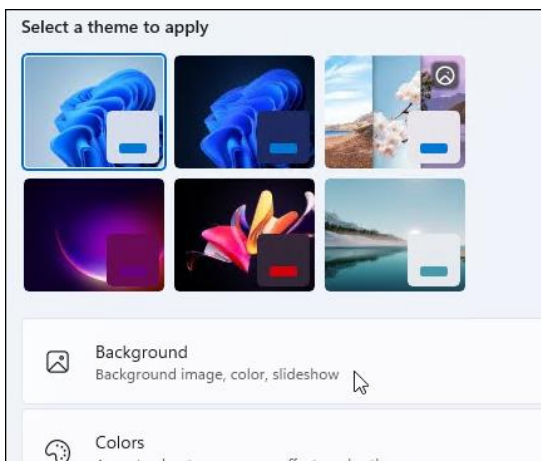


3. Select "Solid Color"

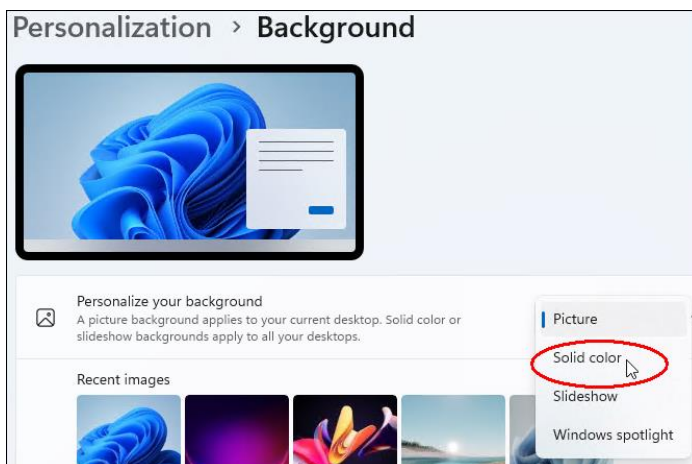

4. Select Navy Blue

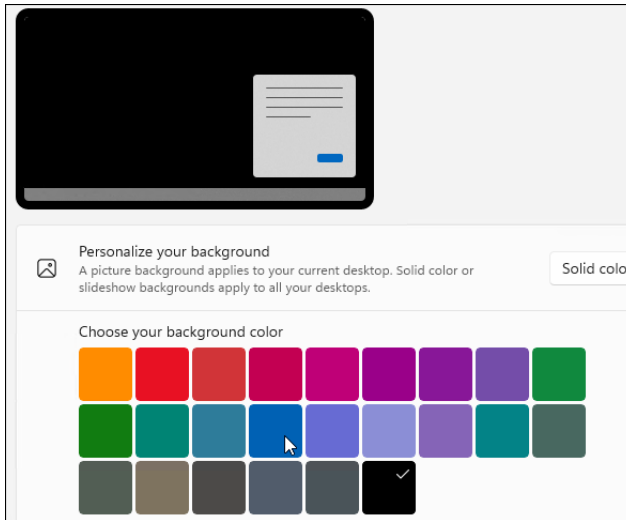


5. Close screen

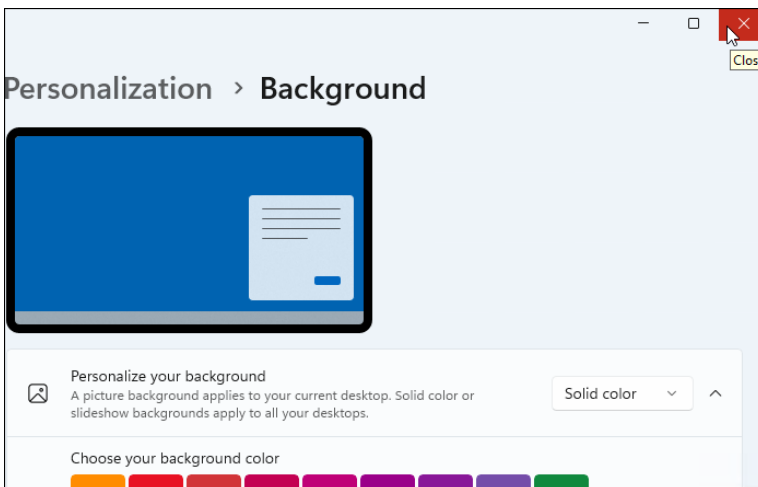


J. Modify additional Personalization Settings.

1. Start-Screen


- Right-click mouse on blank desktop area, select “Personalize”.

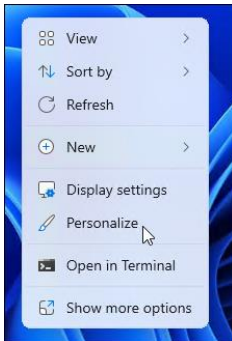

- Select “Start”

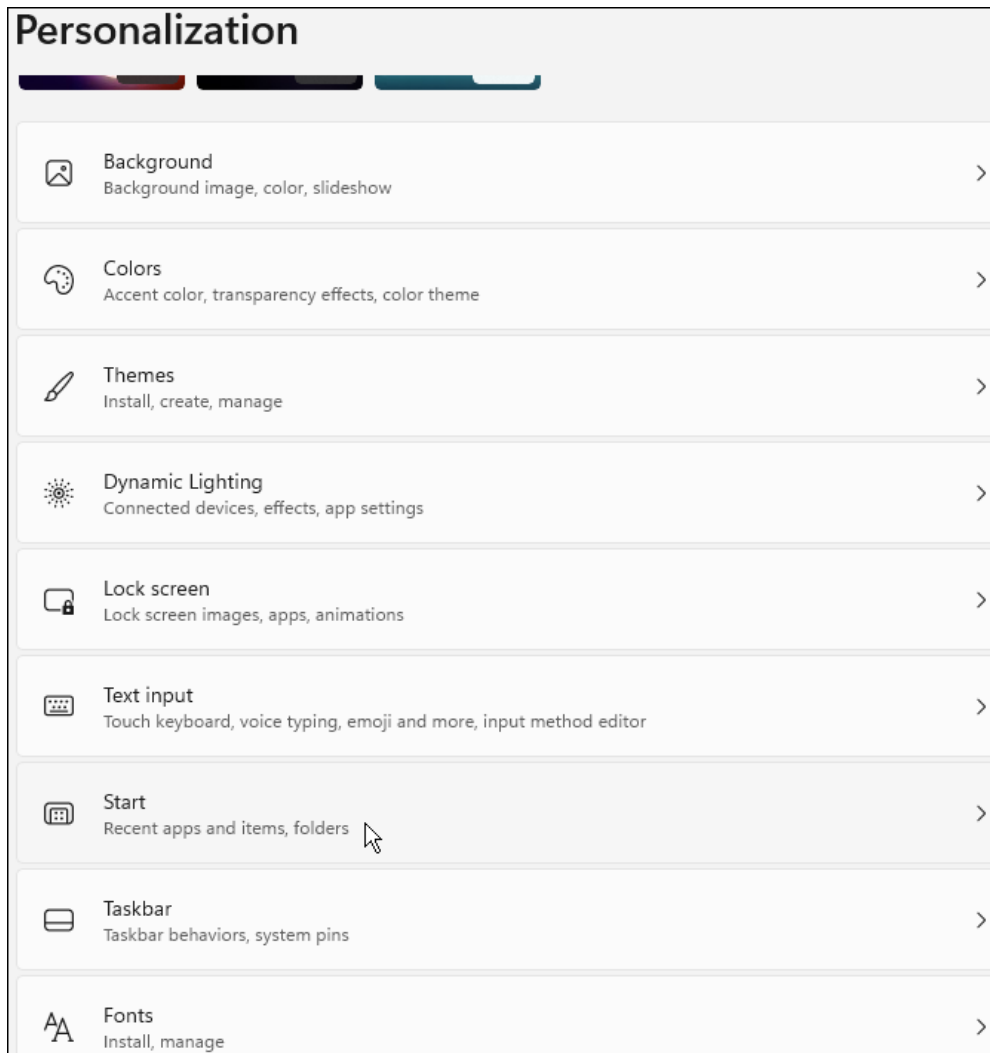


- c. Turn all switches to OFF position, close the settings screen.

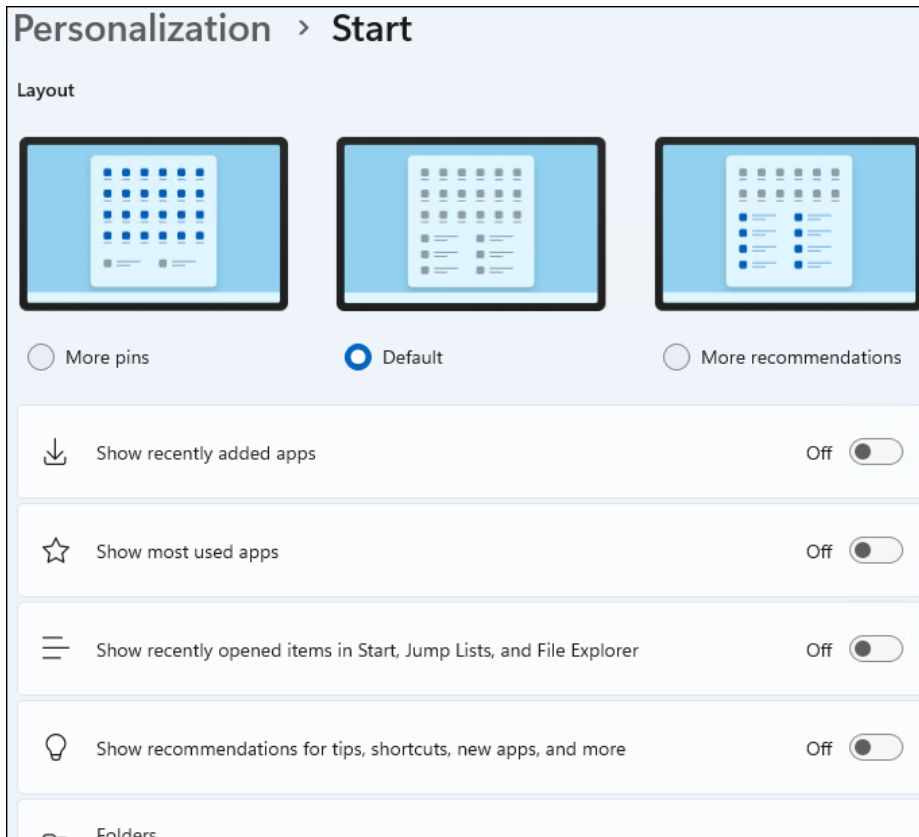


2. Set screen saver to MacScreen


- a. Right-click mouse on blank desktop area, select "Personalize".

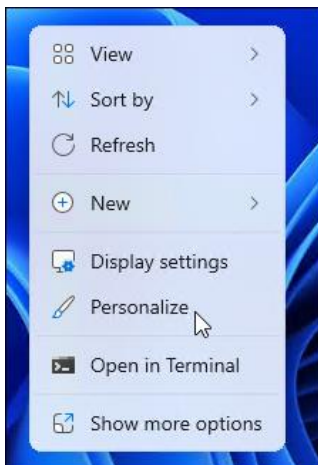


b. Select “Lock screen”

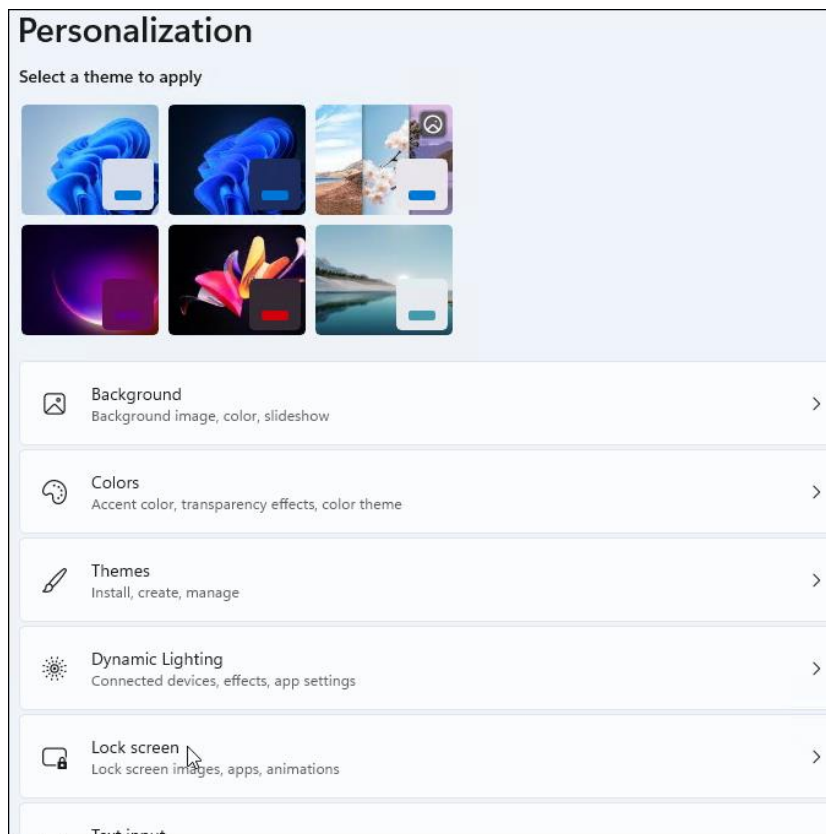


c. Select “Screen saver”

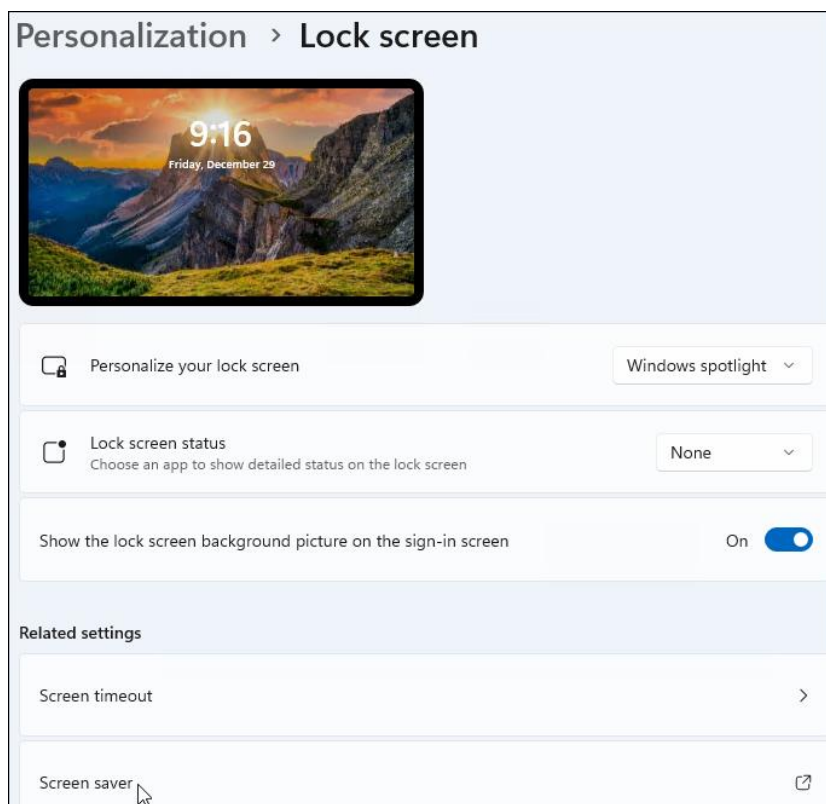

- d. At dropdown, select “MacScreen”, click [Apply], [Ok].

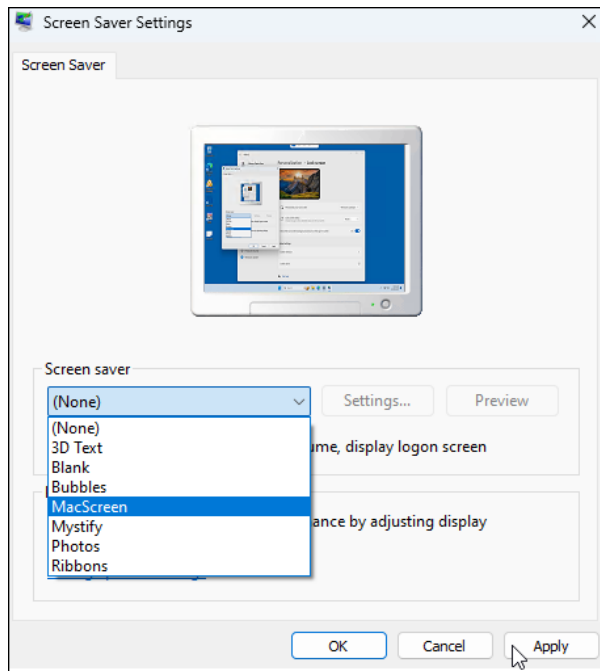


- e. Adjust Wait value to desired delay (i.e., 5 minutes), click [Apply], [OK], then close setting screens.

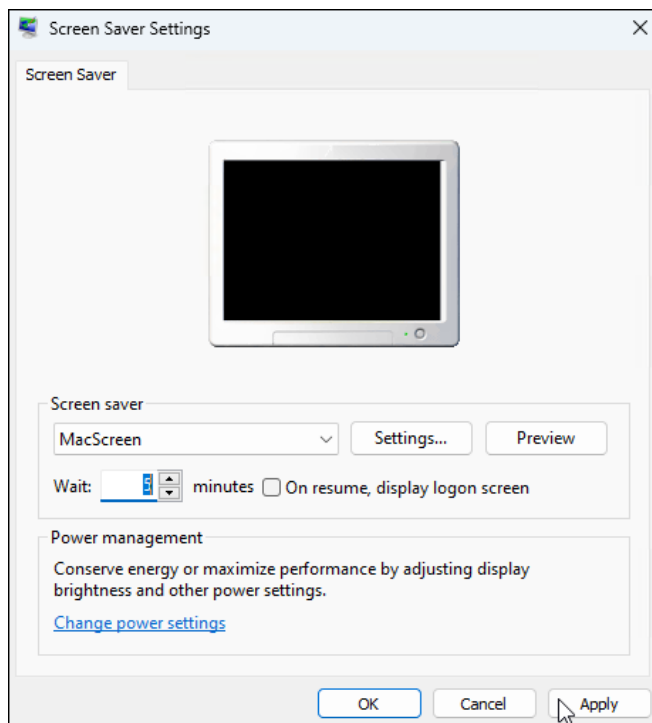


K. Disable data logging/tracking.

1. Click Windows start button, then “Settings”.

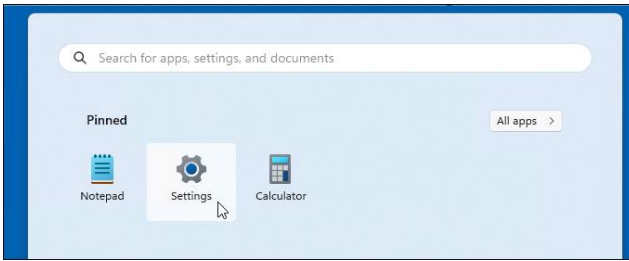


2. Select “Privacy & security”

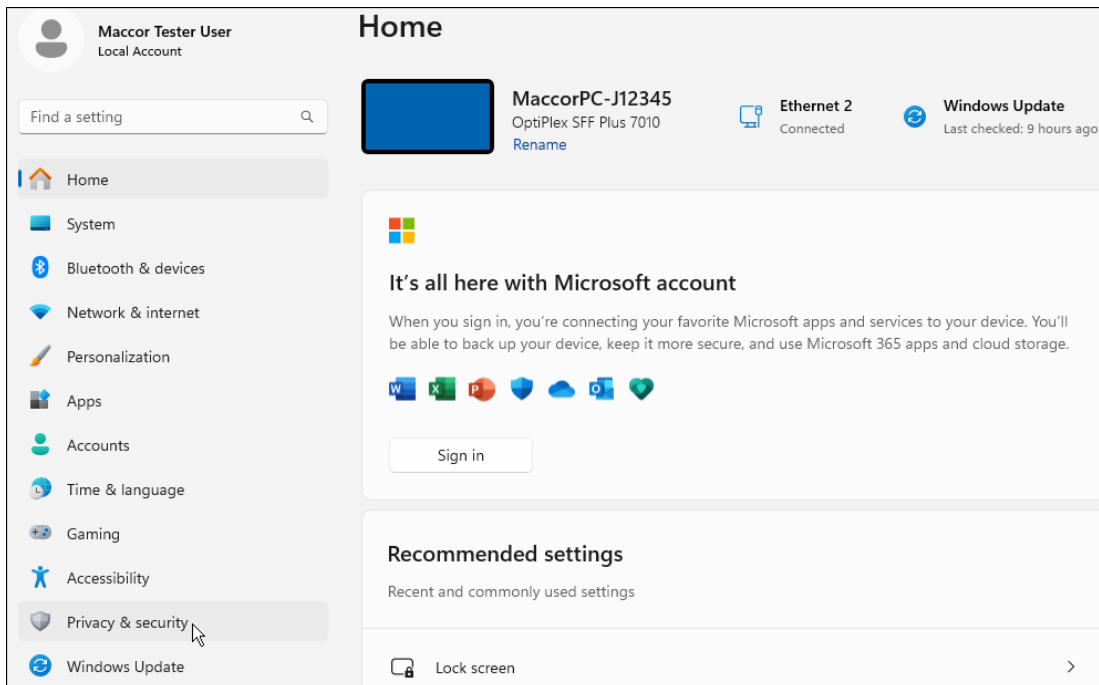


3. Windows Permissions

a. General


1. Select “General”

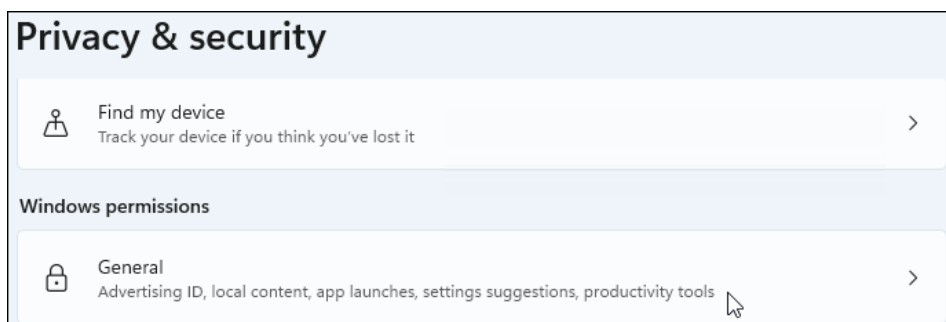

2. Turn all switches to OFF.

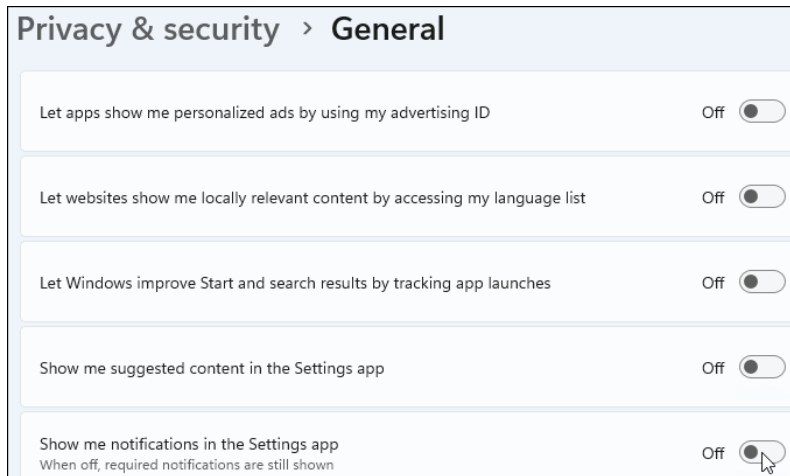


3. Return to Privacy & security screen.

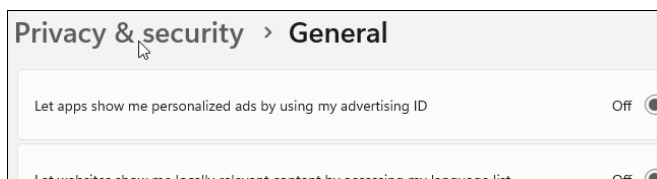

b. Speech

1. Select "Speech"

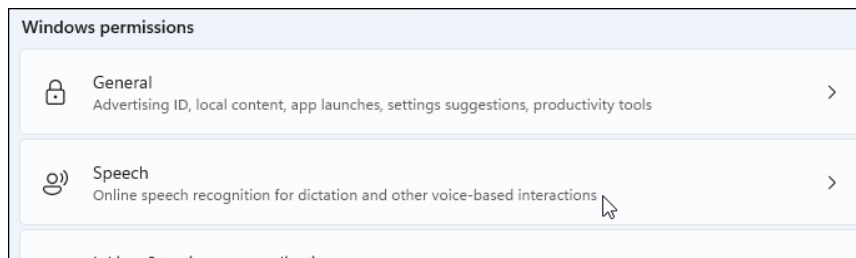


2. Verify switch is OFF, return to Privacy & security (as in 1c above).




c. Inking & typing personalization

1. Select "Inking & typing personalization"

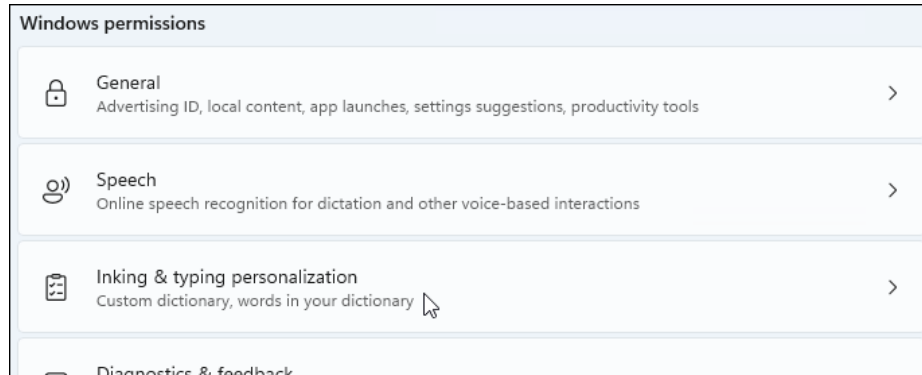


2. Switch to OFF position, return to Privacy & security screen




d. Diagnostics & feedback


1. Select Diagnostics & feedback

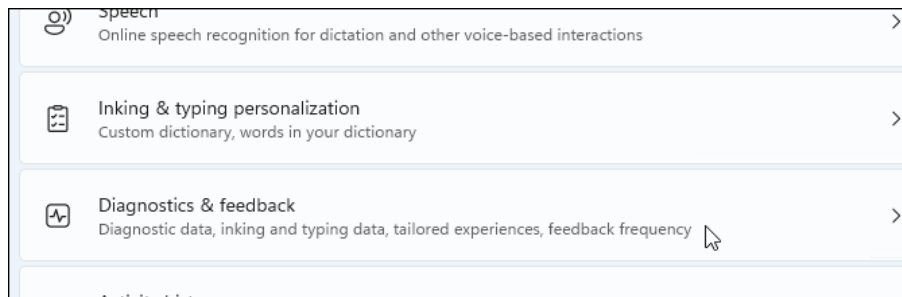

2. Verify settings and “optional diagnostic data” switch is set to OFF.

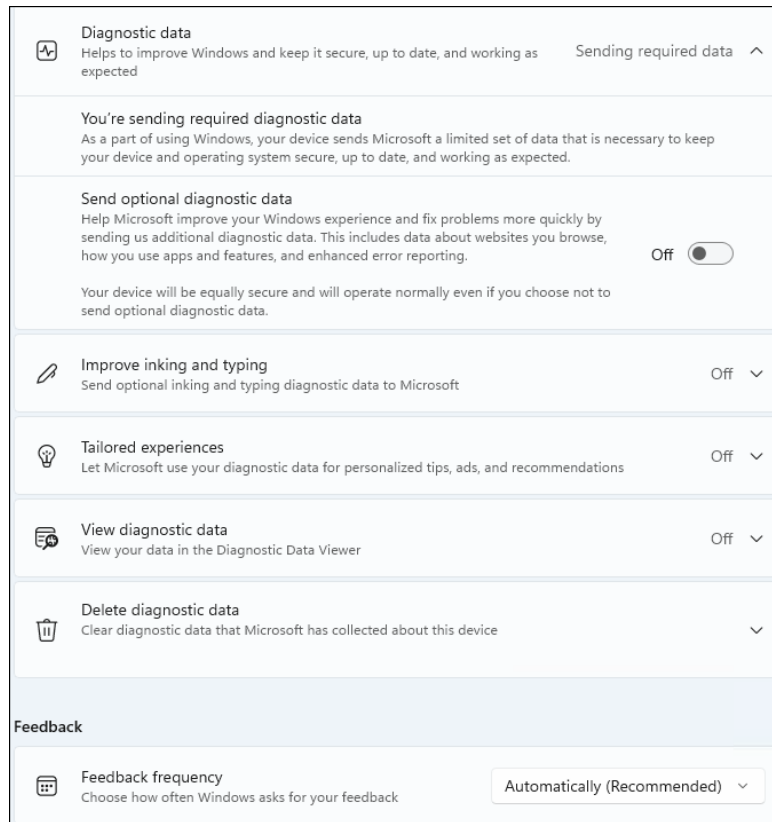


3. At Feedback frequency dropdown, set to “Never”, return to Privacy & security screen.

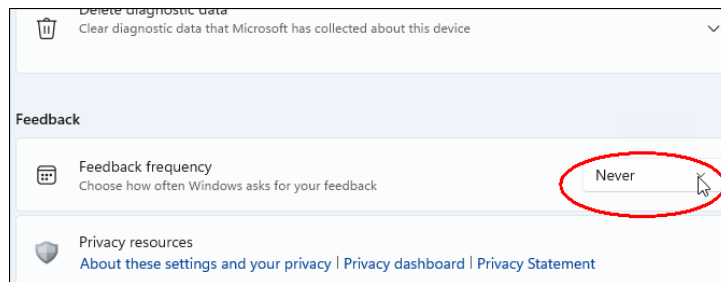


e. Activity history

1. Select “Activity history”

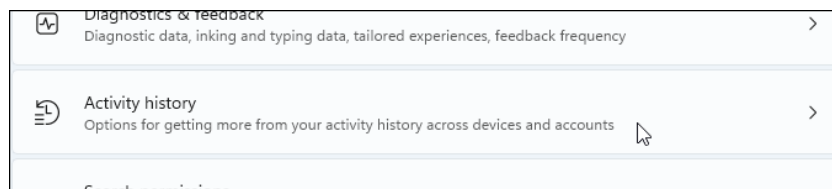


2. Verify both switches are set to OFF, return to Privacy & security screen.

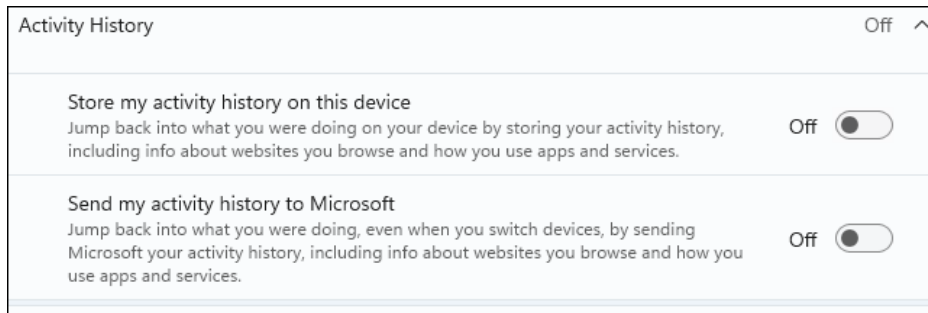

f. Search Permissions

1. Select "Search permissions"

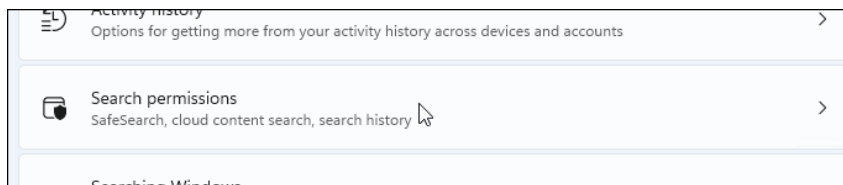

2. Verify settings are as shown, return to Privacy & security

Privacy & security > Search permissions

To give you relevant results, Windows Search will search the web, apps, settings, and files. To change which files on your device are searched, go to [Searching Windows](#)

SafeSearch

In Windows Search, web previews will not automatically load web results if they may contain adult content. If you choose to preview web results, we'll apply the following setting:

☒ Strict — Filter out adult text, images, and videos from my web results

☐ Moderate — Filter adult images and videos but not text from my web results

☐ Off — Don't filter adult content from my web results

Cloud content search

Windows Search can personalize your search results by including your content from OneDrive, SharePoint, Outlook, Bing, and other services.

Microsoft account
Allow Windows Search to provide results from the apps and services that you are signed in to with your Microsoft account.

☐ Off

Work or School account
Allow Windows Search to provide results from the apps and services that you are signed in to with your work or school account.

☐ Off

[Manage accounts used by other apps on this device](#)

History

Search history on this device
To improve your search suggestions, let Windows Search store your search history locally on this device.

☐ Off

[Clear device search history](#)

Search history in the cloud
View and delete your search history in the cloud
[Privacy dashboard](#)

Include or exclude your web searches from search suggestions
[Bing search history settings](#)


More settings

Show search highlights
See content suggestions in the search box and in search home


☐ Off

g. Searching Windows

1. Select “Searching Windows”

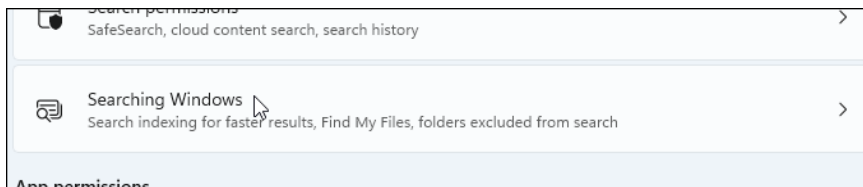


2. Under (Find my files), set selection to “Enhanced”, return to Privacy & security (App permissions).

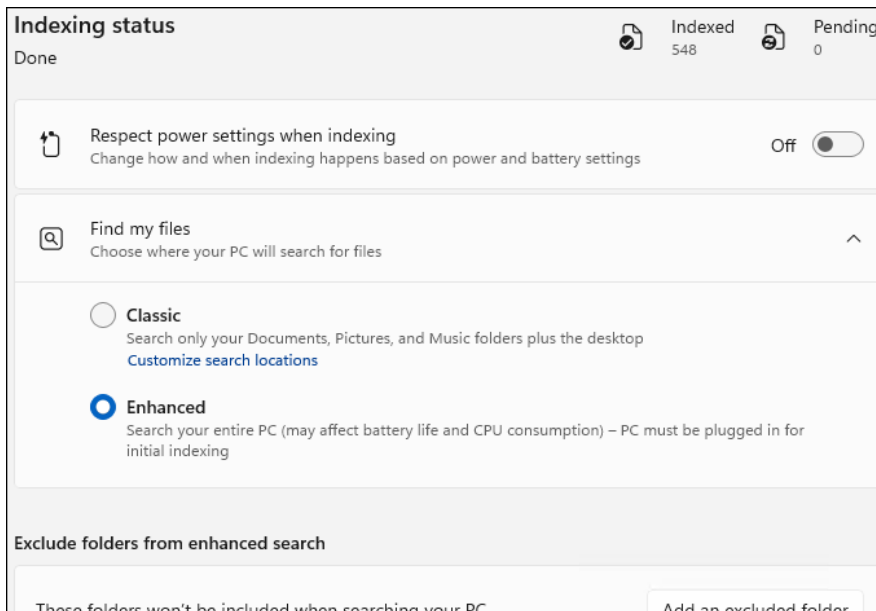


4. App permissions

a. Location

1. Scroll to [App permissions], select “Location”

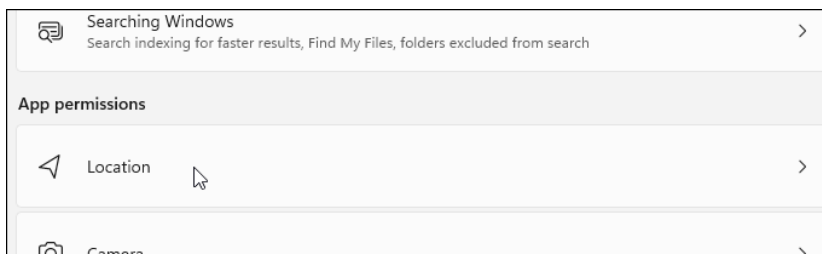


2. Verify all switches are set to OFF, return to Privacy & security (App permissions)

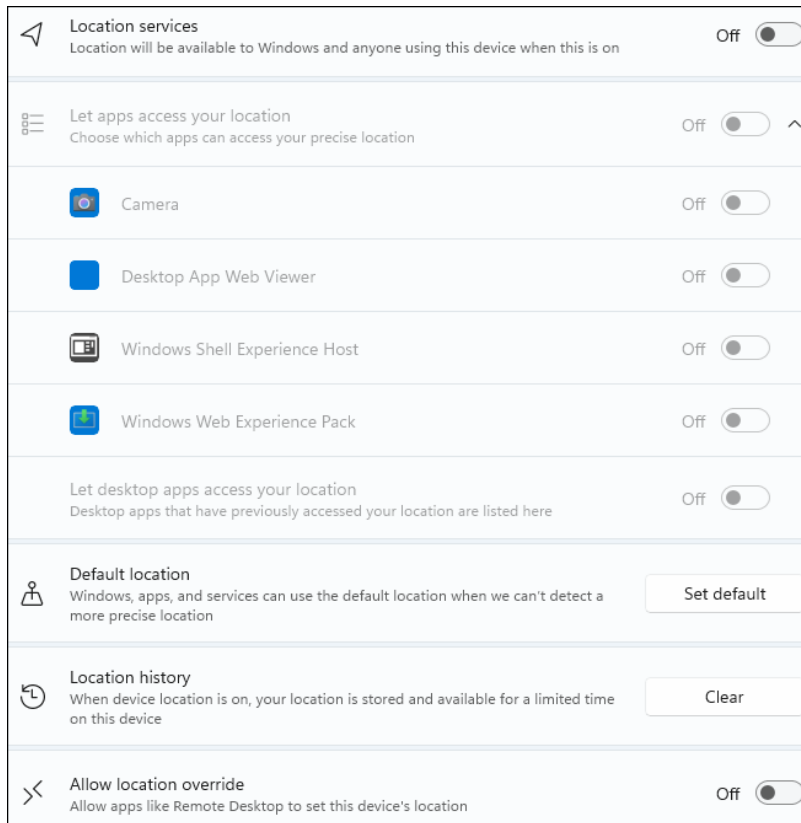


b. Camera

1. Select "Camera"

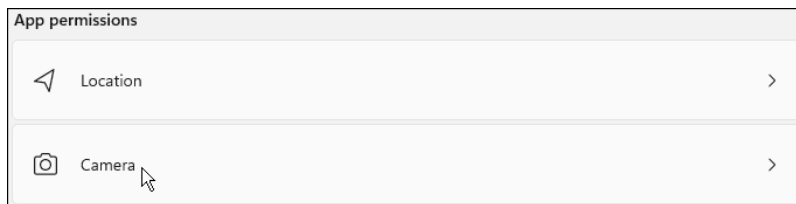

2. Turn main switch to OFF, return to Privacy & security (App permissions)

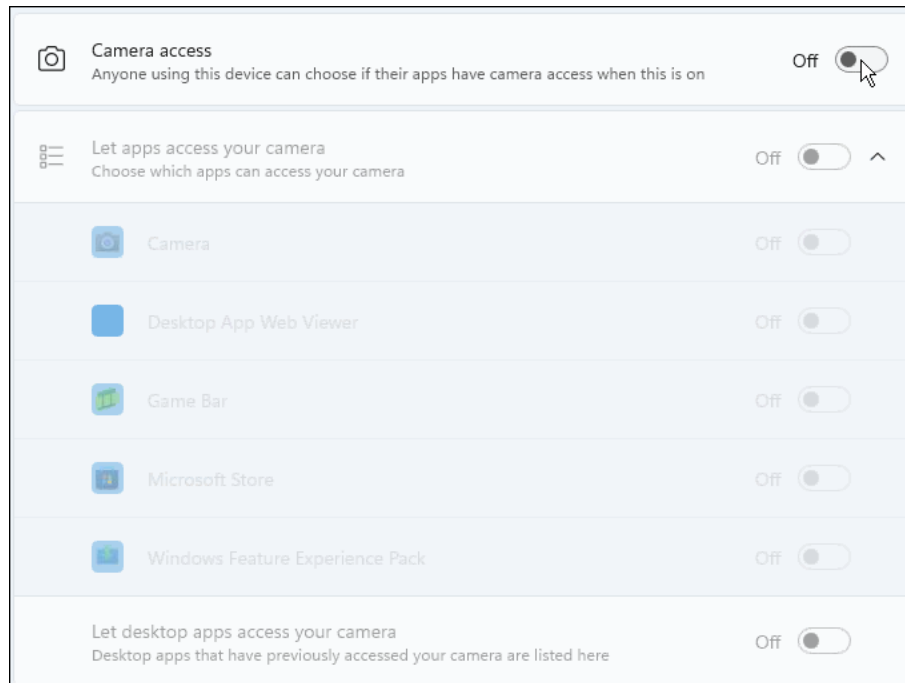


c. Microphone

1. Select "Microphone"




2. Turn main switch to OFF, return to Privacy & security (App permissions)

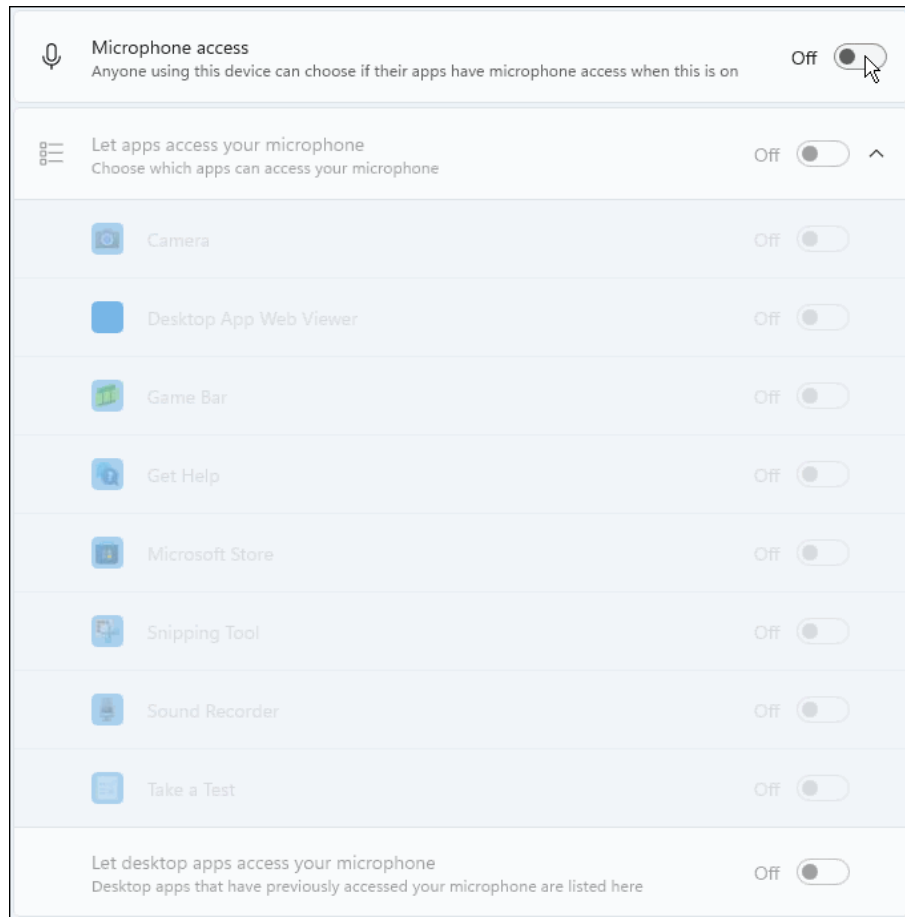


d. Voice activation

1. Select "Voice activation"

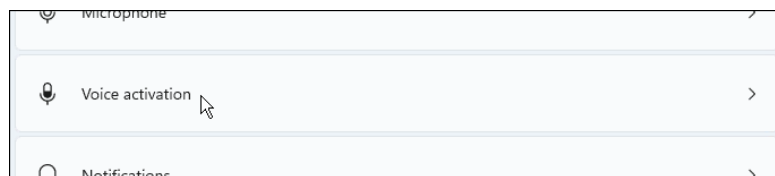

2. Verify settings are OFF, return to Privacy & security (App permissions)

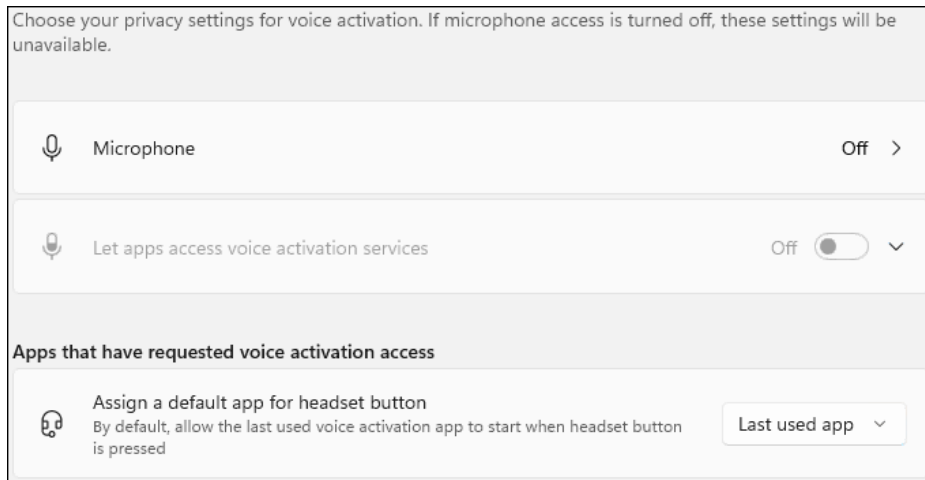


e. Notifications

1. Select “Notifications”



2. Turn main switch to OFF, return to Privacy & security (App permissions)

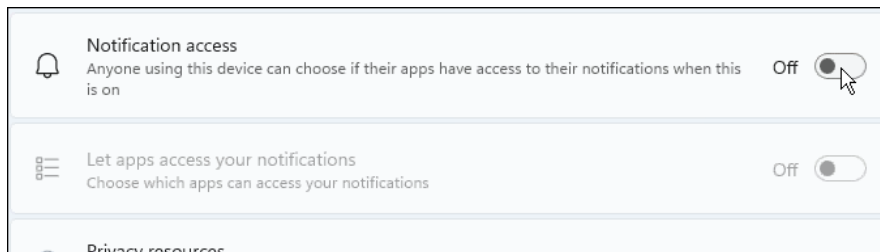


f. Account Info

1. Select “Account info”



2. Turn main switch to OFF, return to Privacy & security (App permissions)

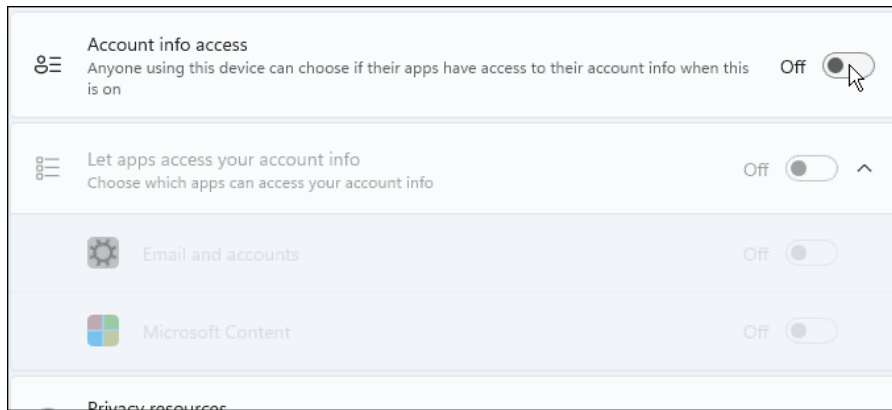


g. Contacts

1. Select "Contacts"



2. Turn main switch to OFF, return to Privacy & security (App permissions)

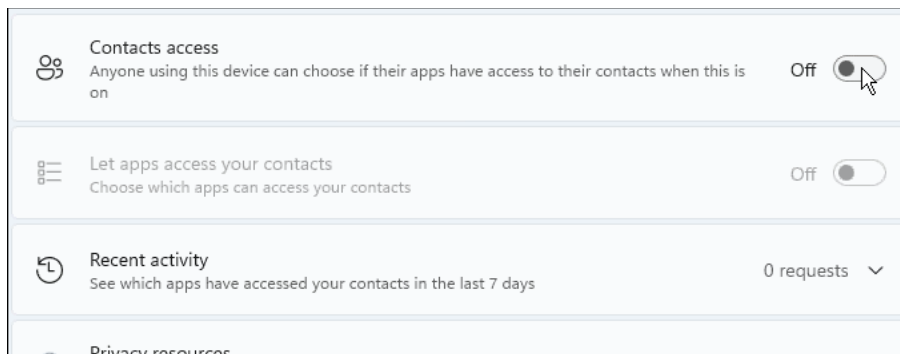


h. Calendar

1. Select "Calendar"



2. Turn main switch to OFF, return to Privacy & security (App permissions)

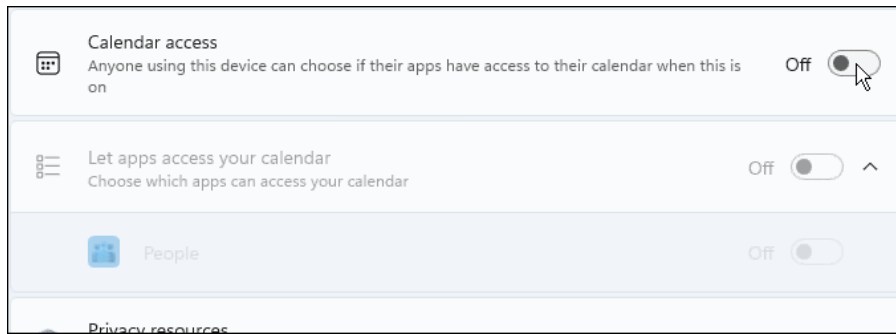


i. Phone calls

1. Select "Phone calls"



2. Turn main switch to OFF, return to Privacy & security (App permissions)

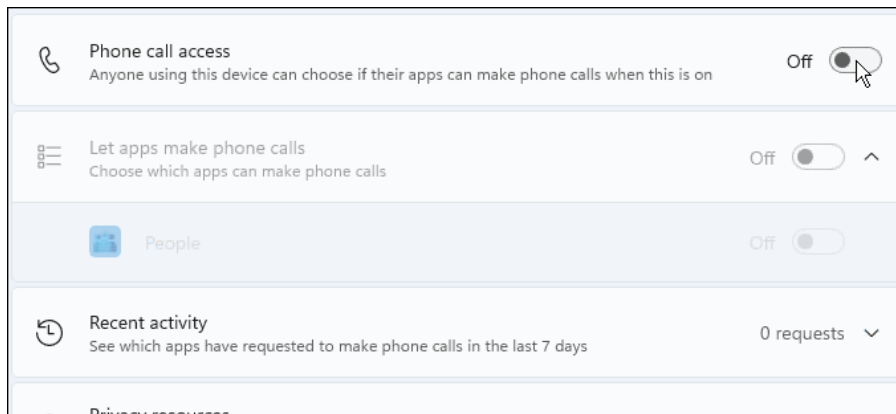


j. Call history

1. Select "Call history"



2. Turn main switch to OFF, return to Privacy & security (App permissions)

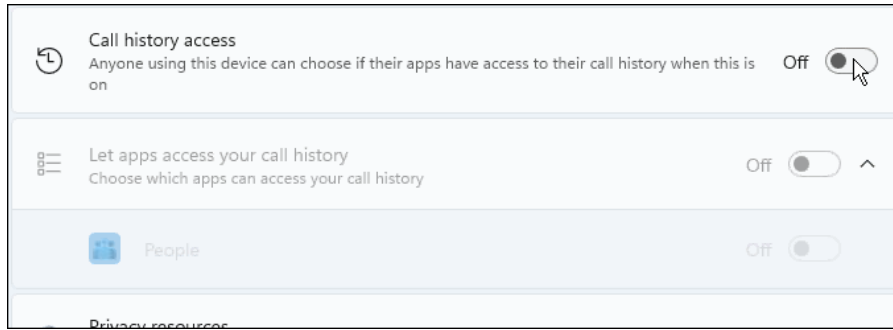


k. Email

1. Select "Email"



2. Turn main switch to OFF, return to Privacy & security (App permissions)

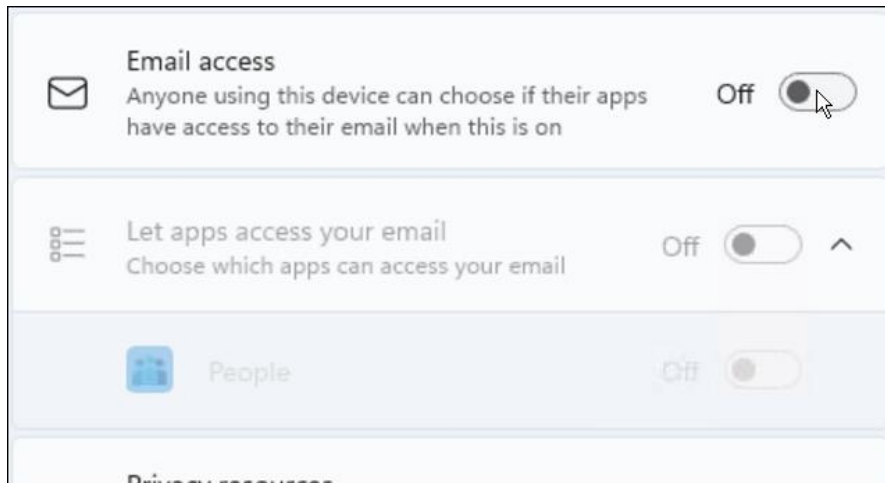


l. Tasks

1. Select "Tasks"



2. Turn main switch to OFF, return to Privacy & security (App permissions)

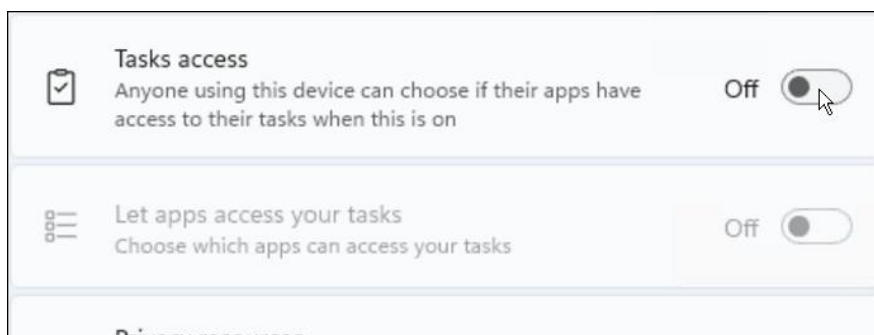


m. Messaging

1. Select "Messaging"




2. Turn main switch to OFF, return to Privacy & security (App permissions)

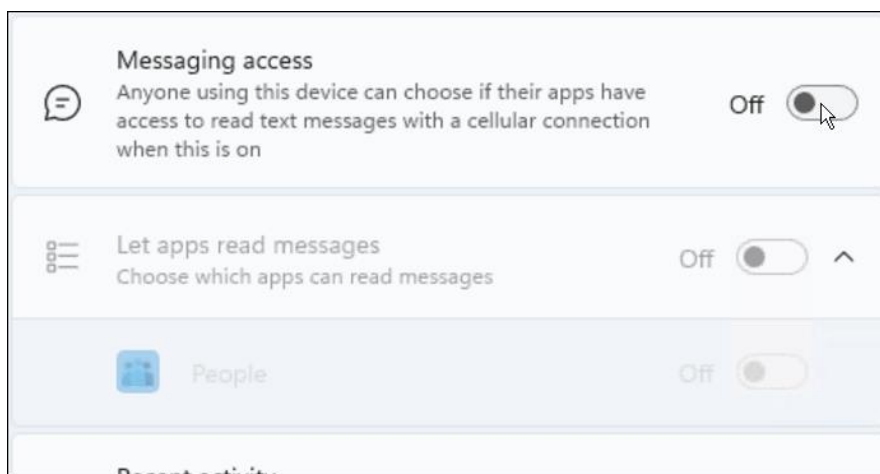


n. Radios

1. Select "Radios"

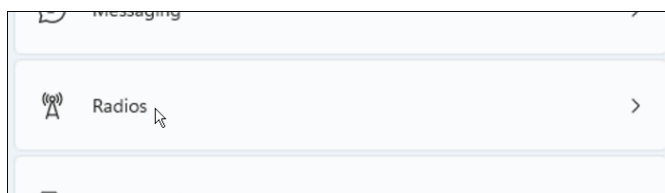

2. Turn main switch to OFF, return to Privacy & security (App permissions)

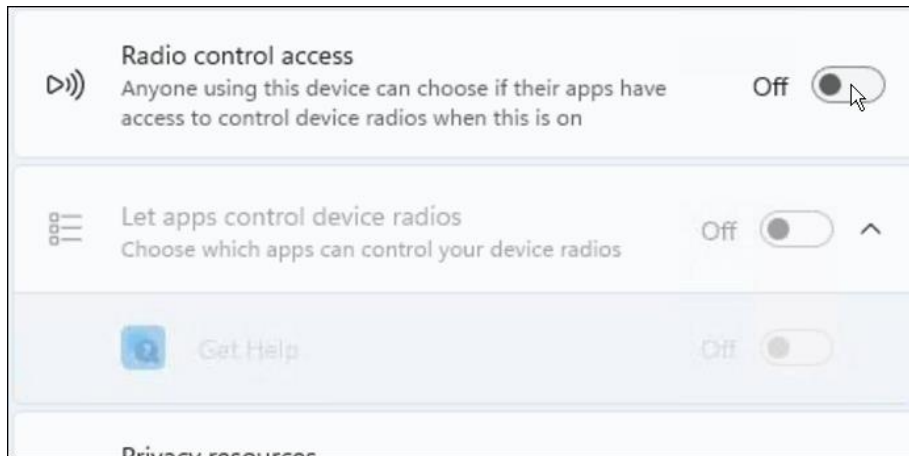

- o. Other devices

1. Select "Other devices"




2. Turn main switch to OFF, return to Privacy & security (App permissions)




- p. App diagnostics

1. Select "App diagnostics"

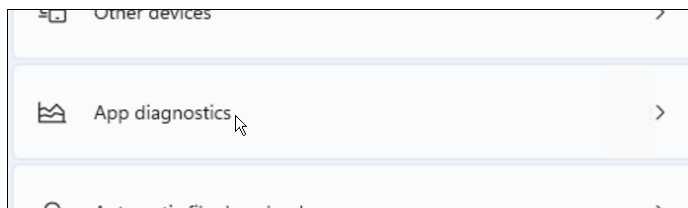


2. Turn main switch to OFF, return to Privacy & security (App permissions)

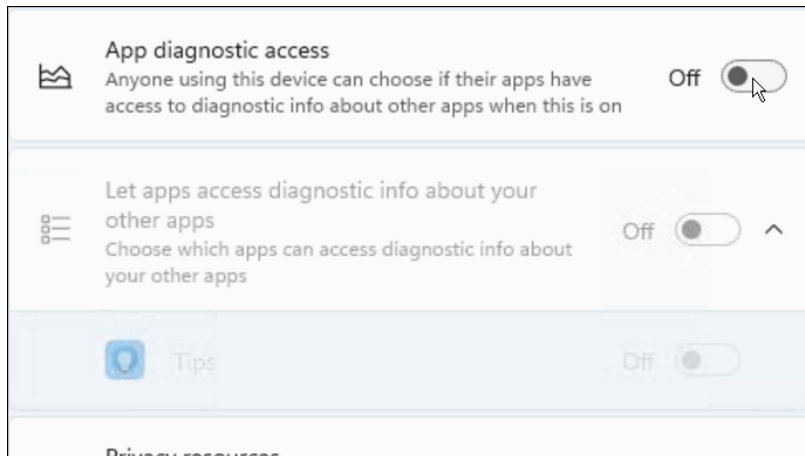


- q. Automatic file downloads

1. Select "Automatic file downloads"

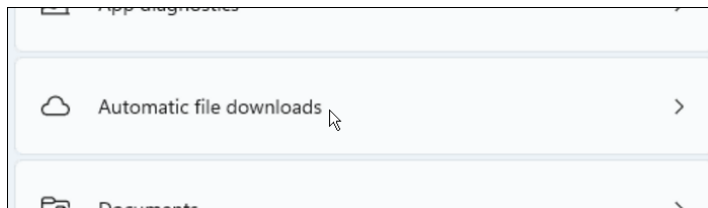

2. Verify "Allow" is grayed out, return to Privacy & security (App permissions)

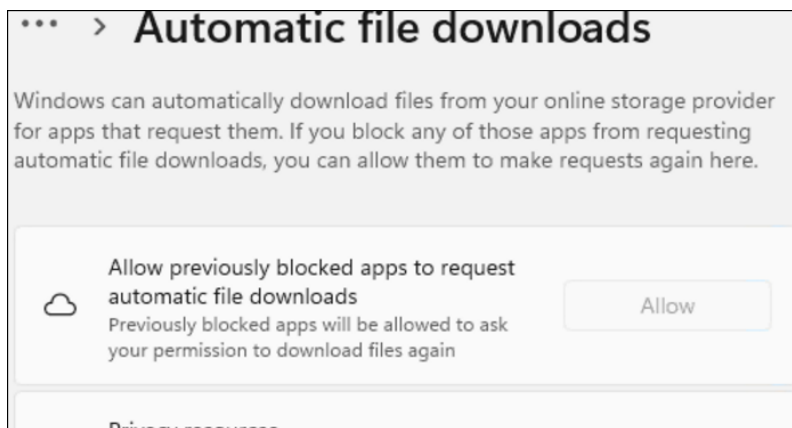


- r. Documents

1. Select "Documents"



2. Turn main switch to OFF, return to Privacy & security (App permissions)

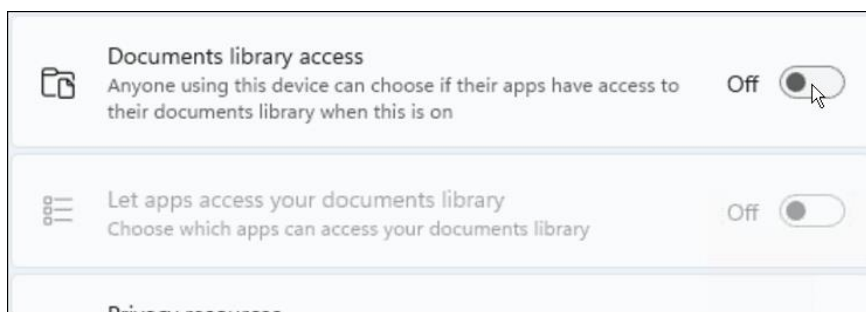


- s. Downloads folder

1. Select "Downloads folder"



2. Turn main switch to OFF, return to Privacy & security (App permissions)

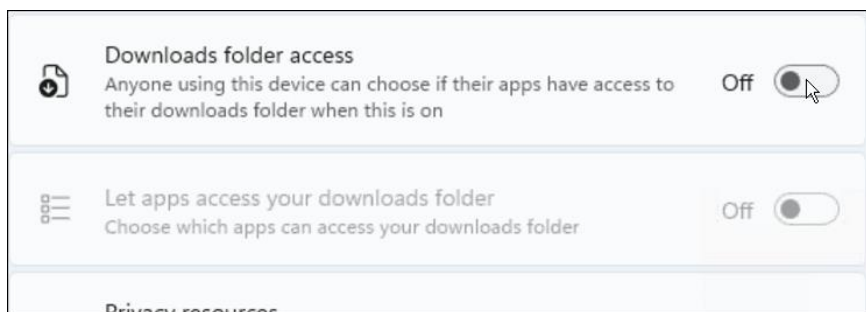


- t. Music library

1. Select "Music library"




2. Turn main switch to OFF, return to Privacy & security (App permissions)

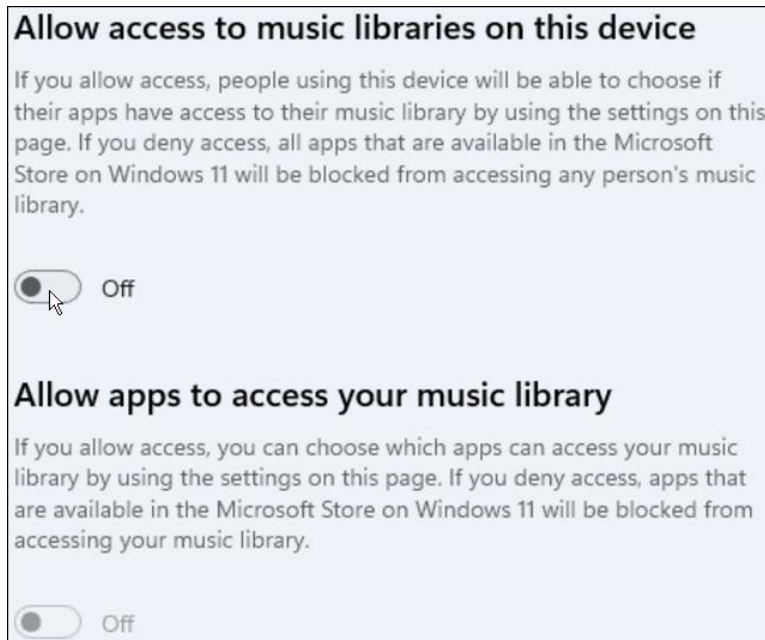


u. Pictures

1. Select "Pictures"

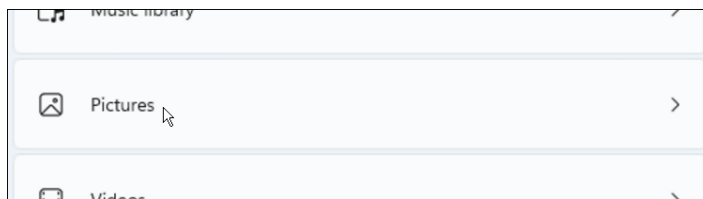


2. Turn main switch to OFF, return to Privacy & security (App permissions)

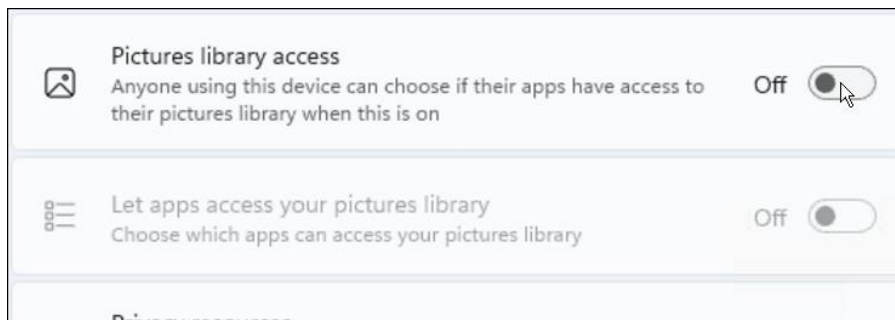


v. Videos

1. Select "Videos"

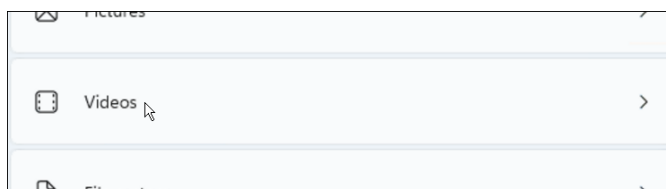

2. Turn main switch to OFF, return to Privacy & security (App permissions)

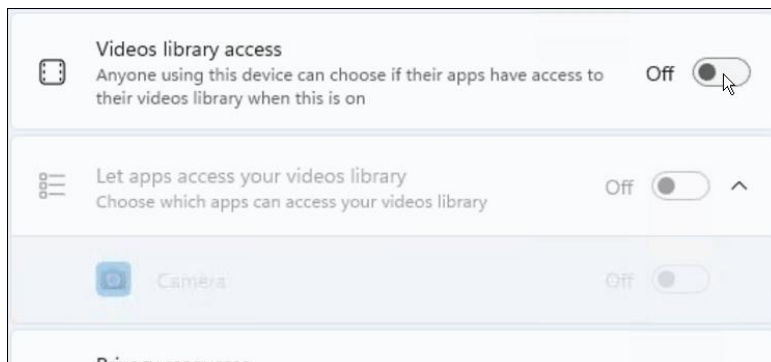


w. File system

1. Select "File system"



2. Turn main switch to OFF, return to Privacy & security (App permissions)

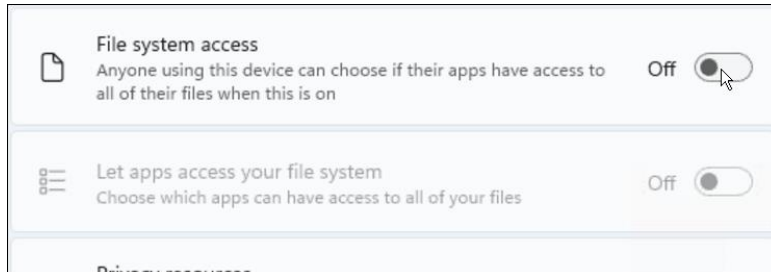


x. Screenshot borders

1. Select "Screenshot borders"



2. Turn main switch to OFF, return to Privacy & security (App permissions)

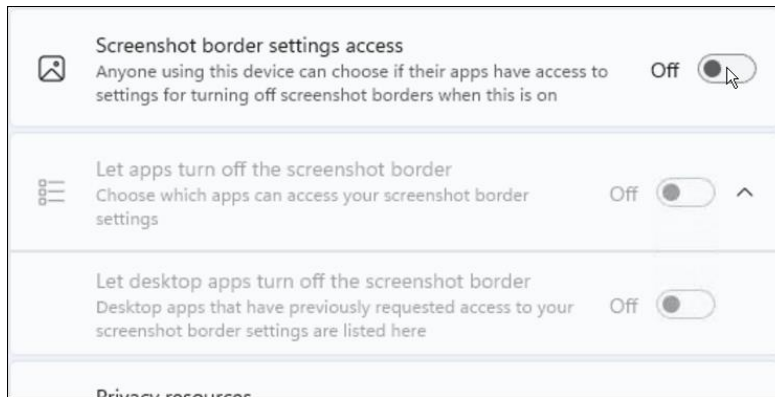


y. Screenshots and apps

1. Select "Screenshots and apps"



2. Turn main switch to OFF, return to Privacy & security (App permissions)

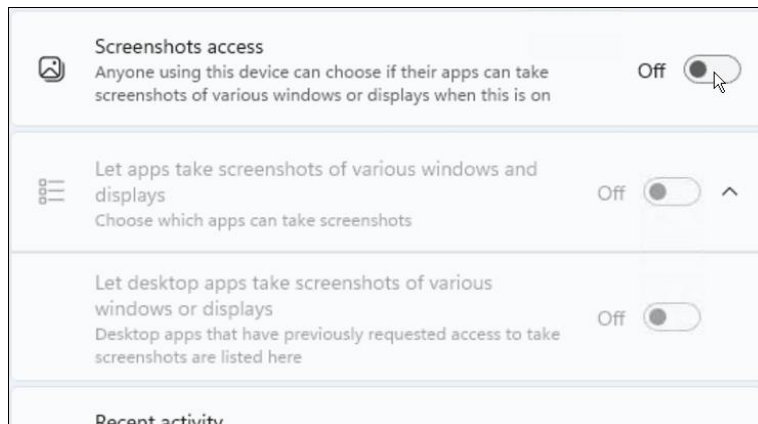


3. "X" out and close.




L. Set Maccor Program (MacTest32.exe) to *Run as Administrator*.


1. Locate MacTest32 program within C:\Maccor folder, bring MacTest32 into focus.

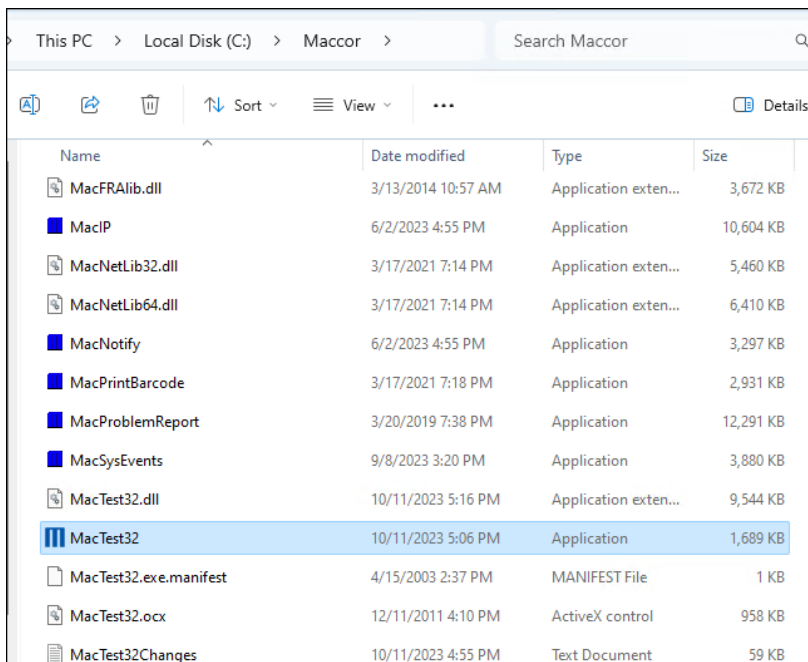

2. Right-click MacTest32, select Properties.

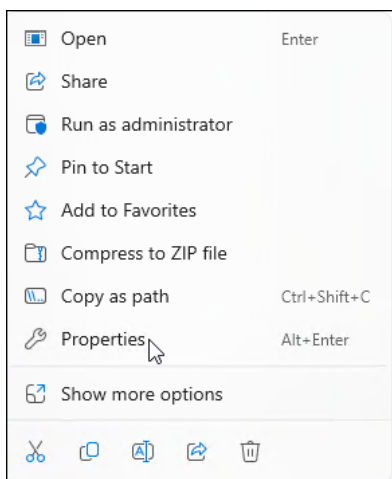


3. Select [Compatibility] tab, click [Change settings for all users]

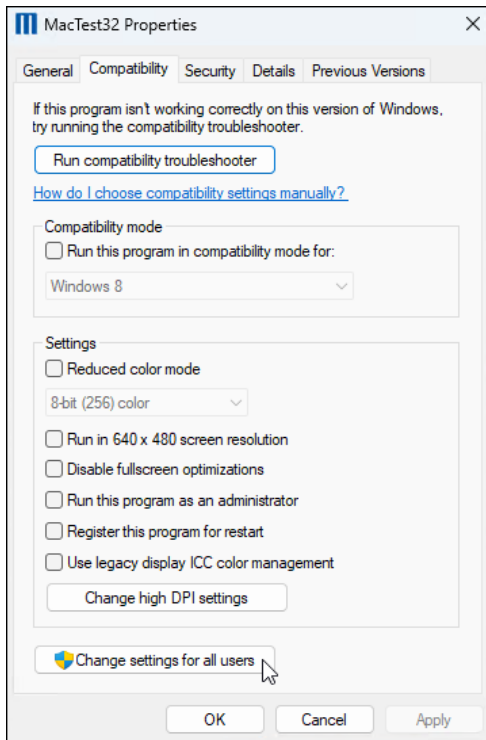

4. Set MacTest32 to run as Administrator


1. Check box "Run this program as an administrator".
2. Click [Apply], [OK].

3. Click [OK]

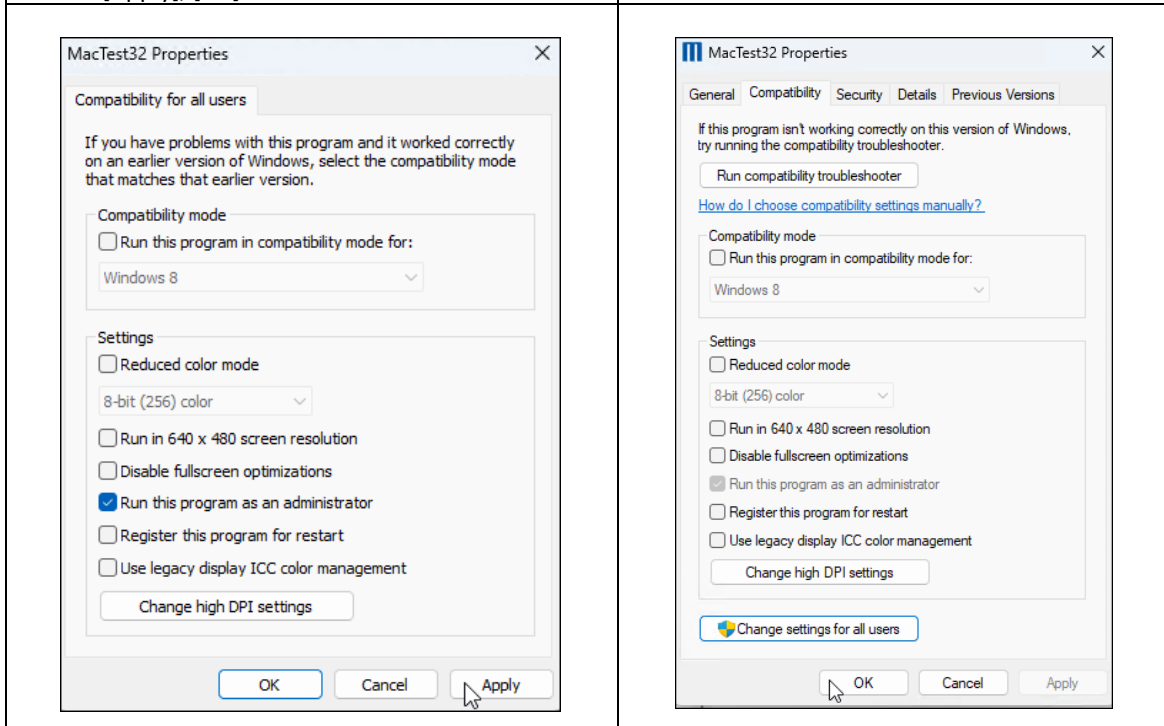


M. Set Maccor Calibration program (MaccorCalibration) to *Run as Administrator*.


1. Locate MaccorCalibration program within C:\Maccor folder, bring into focus.

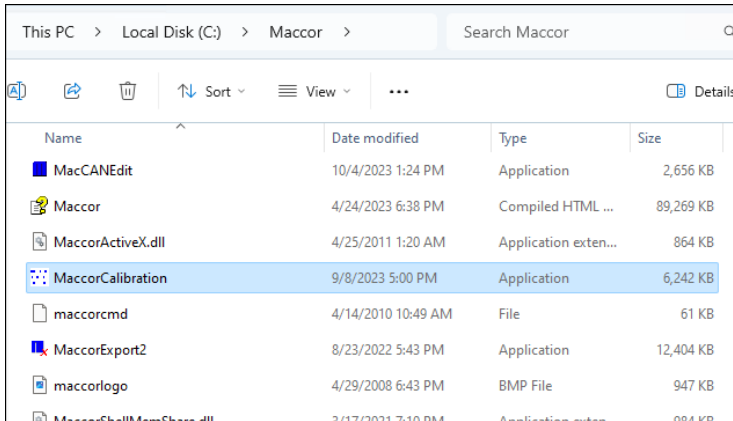

2. Right-click MaccorCalibration, select Properties.

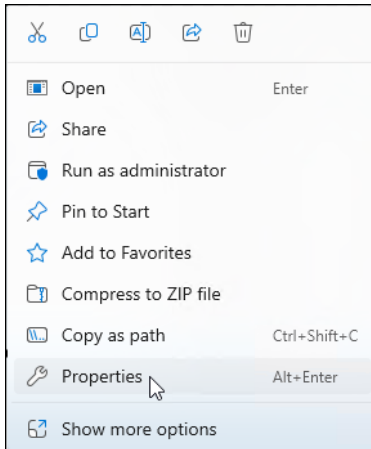


3. Select [Compatibility] tab, click [Change settings for all users]

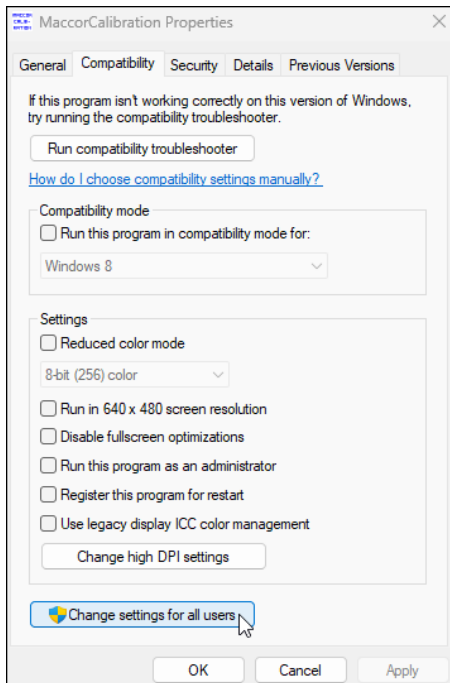

4. Set MaccorCalibration to run as Administrator


1. Check box "Run this program as an administrator"
2. Click [Apply], [OK].

3. Click [OK]

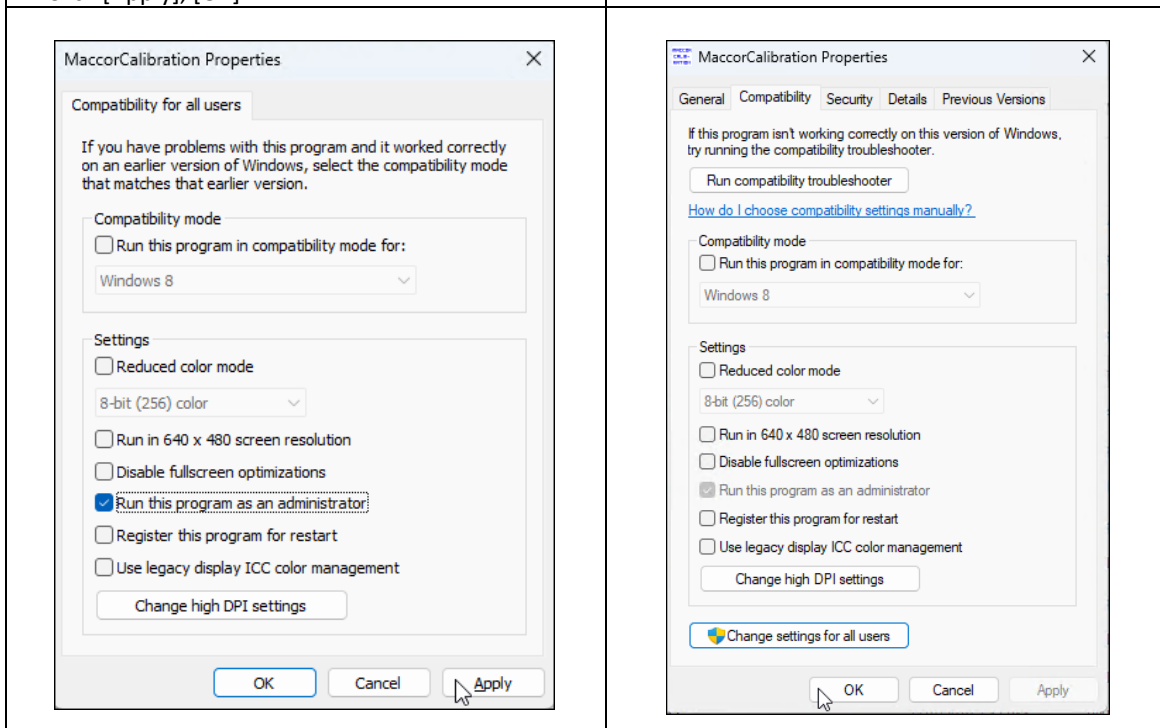


N. Change Maccor icon.


A. Right-click Maccor folder, select Properties

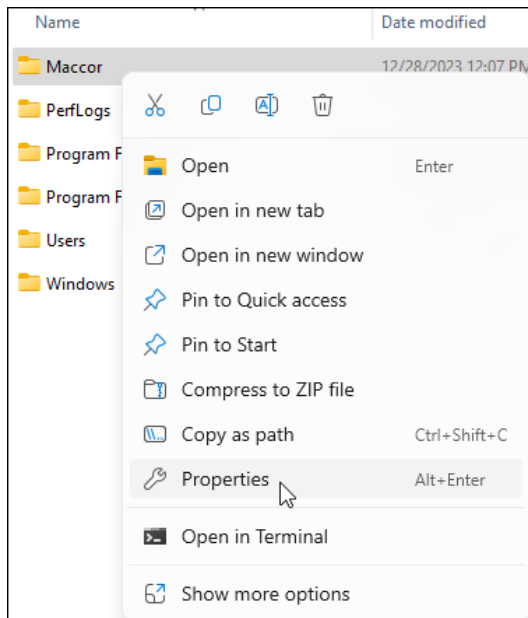


B. At [Customize] tab, click [Change Icon]

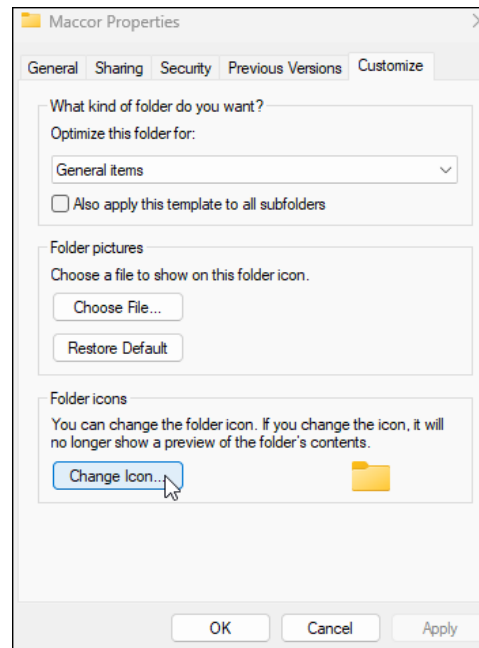


C. Click Browse

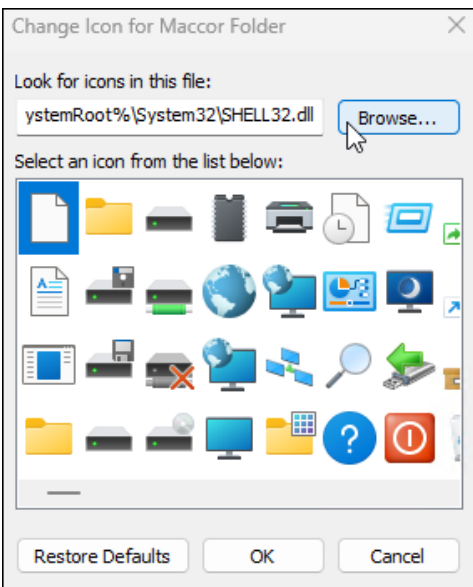


D. Browse to/select MacTest32, click [Open]

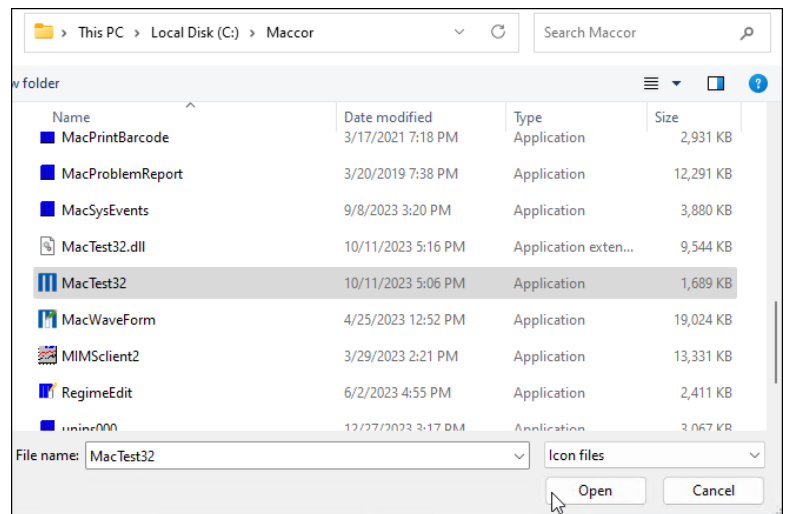

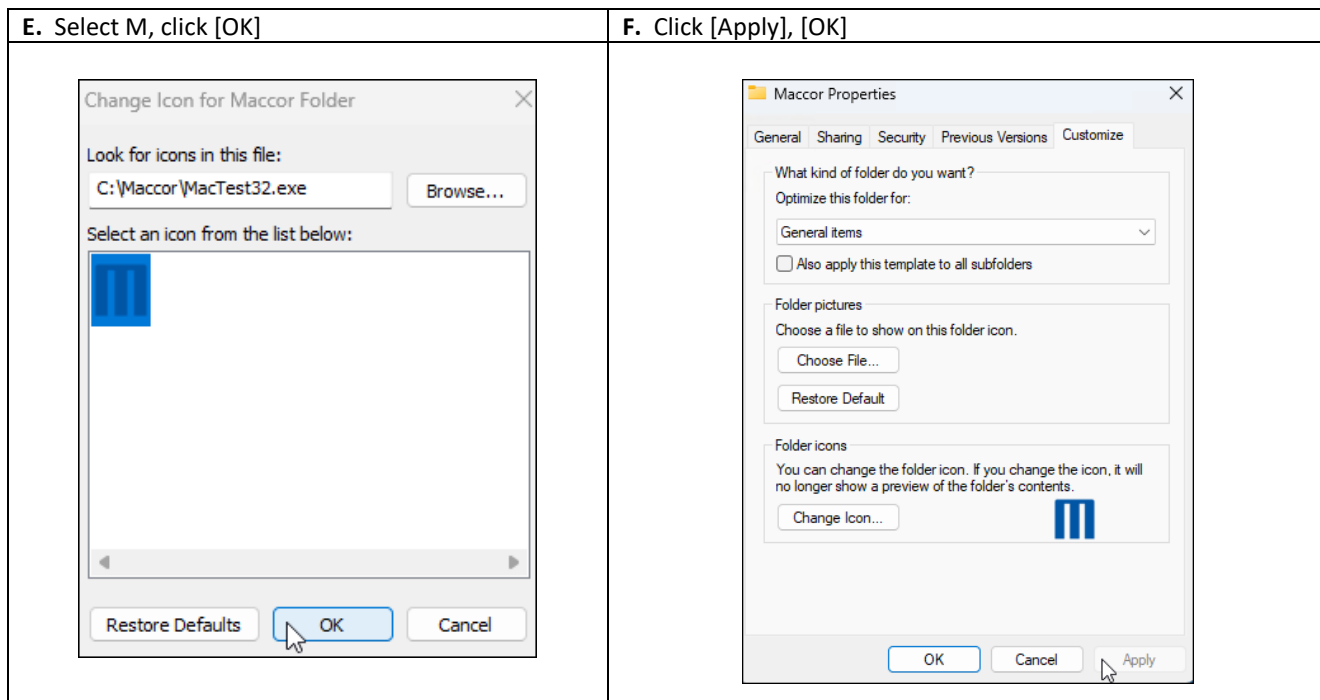


O. Adjust PC clock

1. Right-click on taskbar PC clock, select "Adjust date and time"

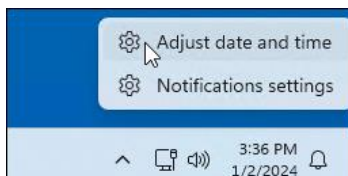


2. At Time zone dropdown, select appropriate time zone, then "X" out and close.

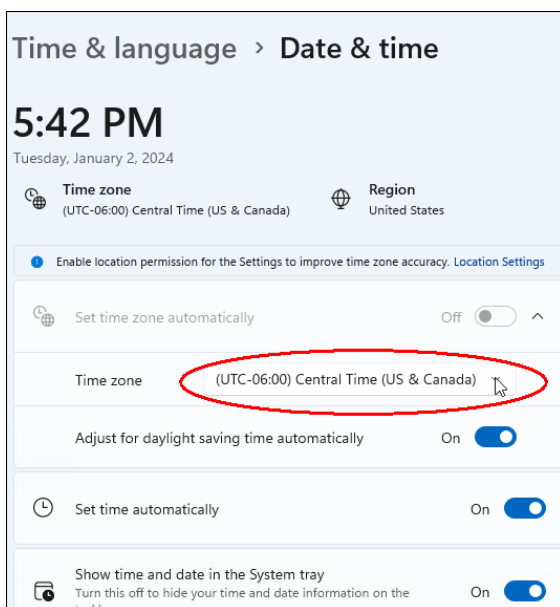


P. Change User Account Picture


1. Left-click Windows Start button, right-click "Maccor Tester User", select "Change account Settings".

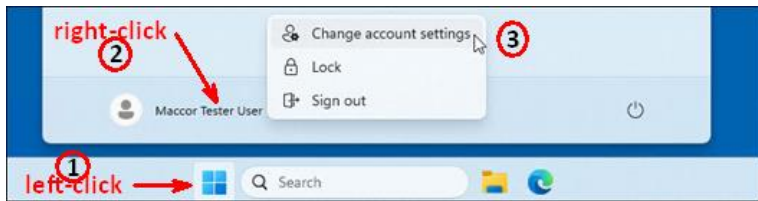


2. Click [Browse files] button

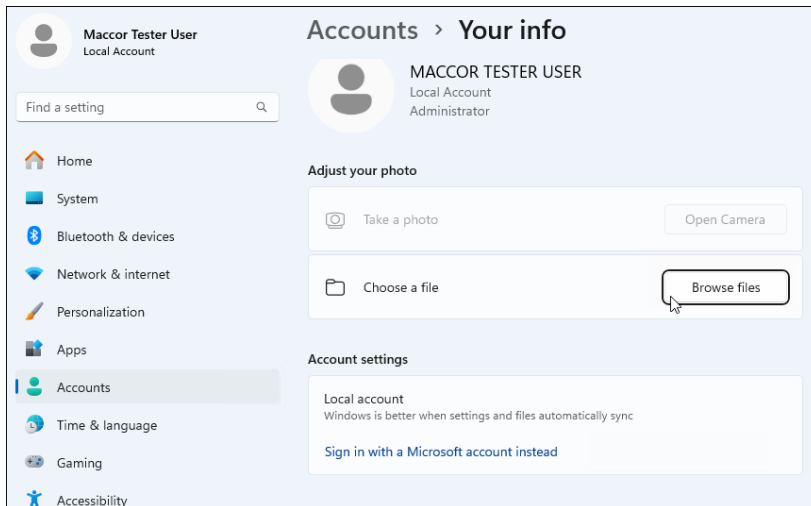

3. Browse to/open Maccor folder, select "maccorlogo", click [Choose picture].

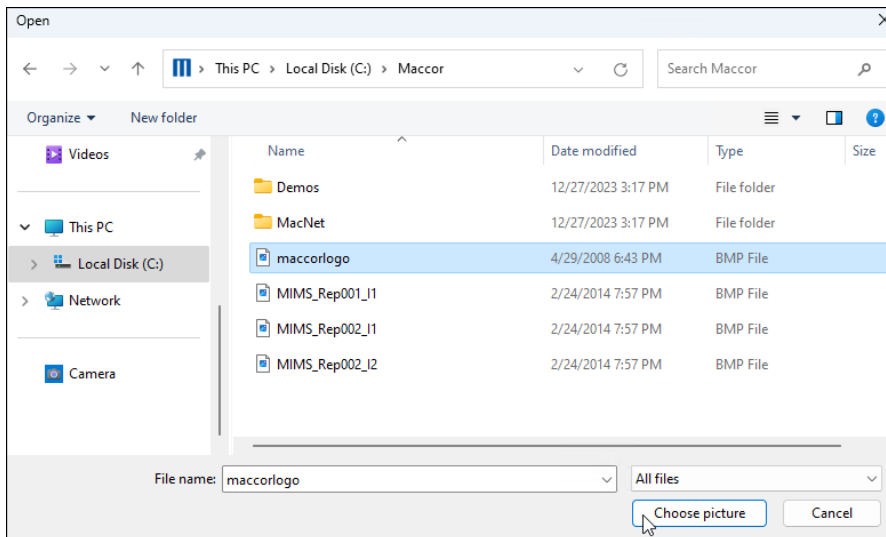

4. "X" out and close.

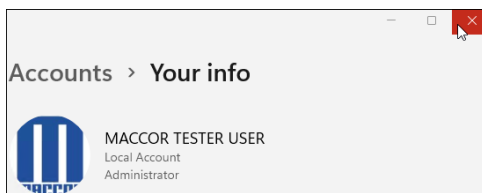


Q. Network Adapter Settings

1. Maccor Tester NIC – Rename


- At Windows taskbar, right-click network tray icon, select “Network and Internet settings”




- Select “Advanced network setting”

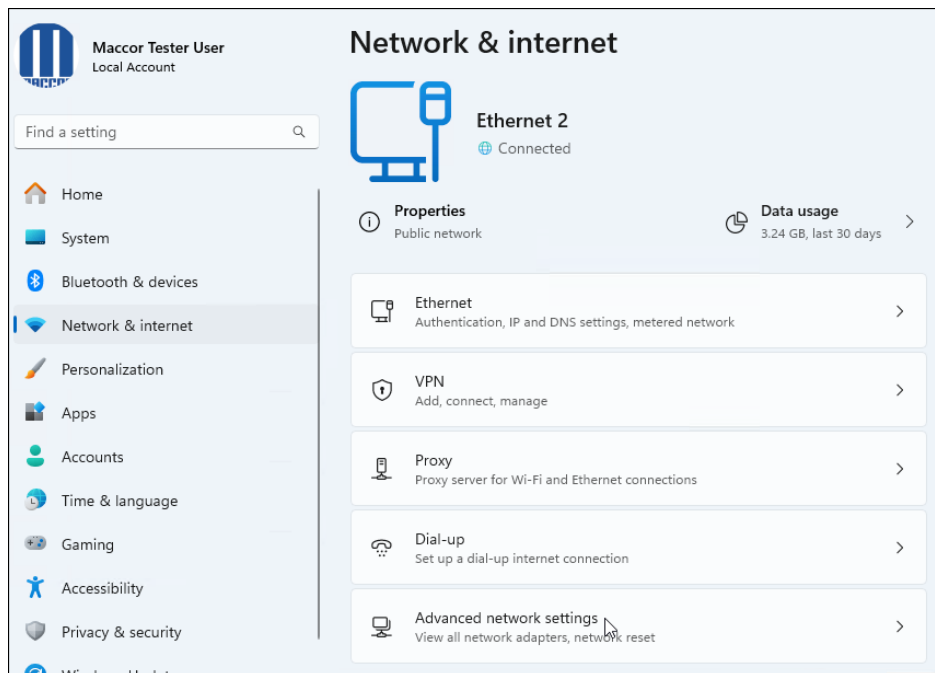


- Click “Ethernet”

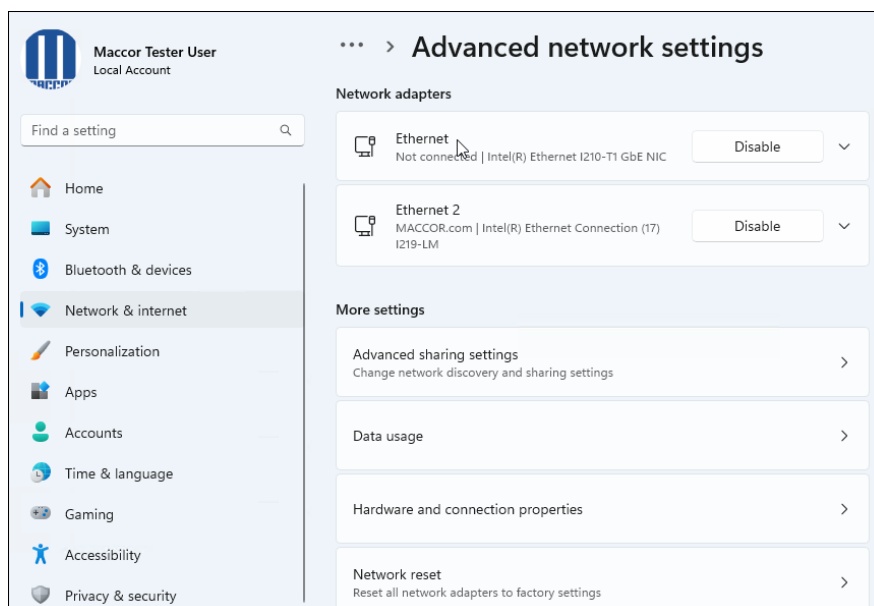

d. Click [Rename]

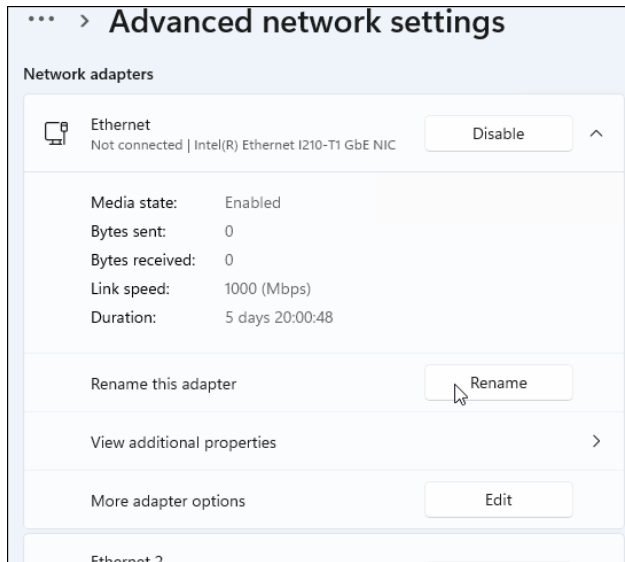


e. Type “Maccor Tester”, click [Save].

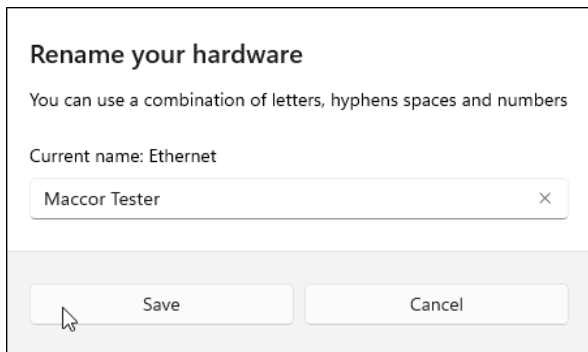


* The integrated NIC (Ethernet 2) can be optionally renamed using same method to i.e., “Network”, “Lab”, etc...

2. Maccor Tester NIC – Static IP address


- At “More adapter options”, click [Edit]

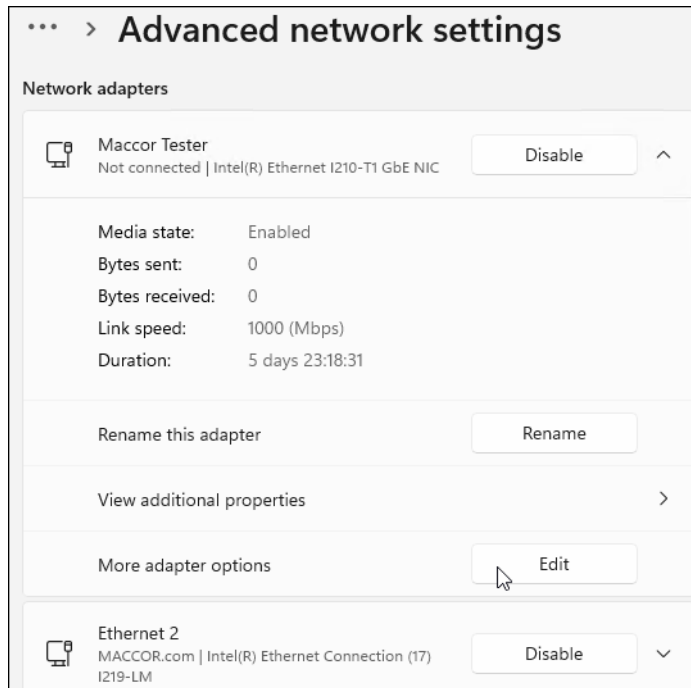


- Deselect all items except TCP/IPv4. With IPv4 in focus, click “Properties”.

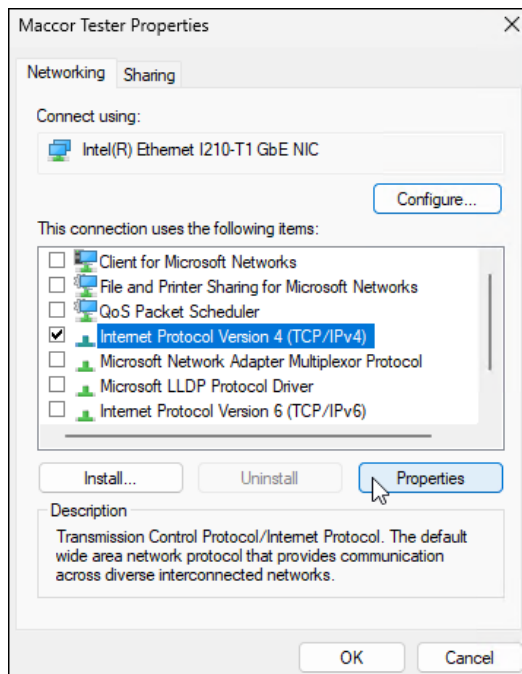

- c. Change to fixed IP address **192.168.127.239** and Subnet mask **255.255.254.0**, leave DNS fields blank, click [OK].

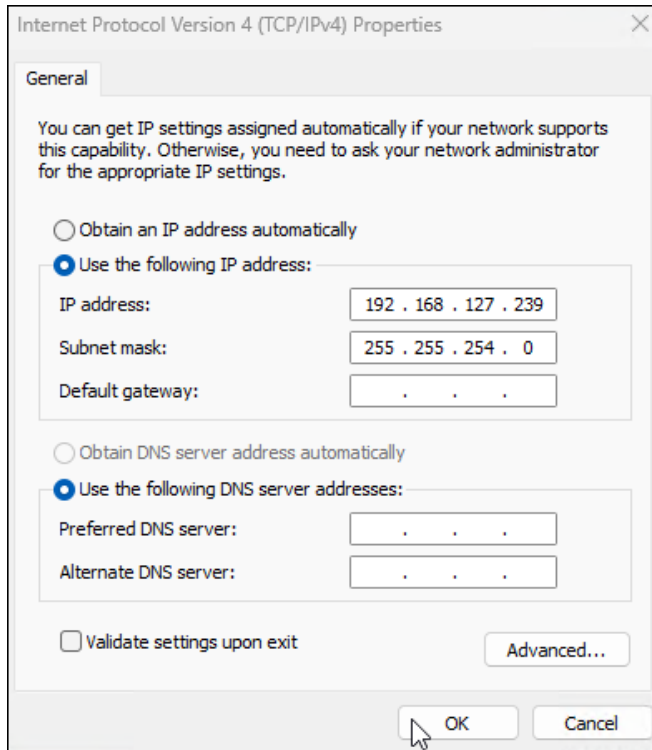


- d. Click [Close], then “X” out or close all dialogue windows.

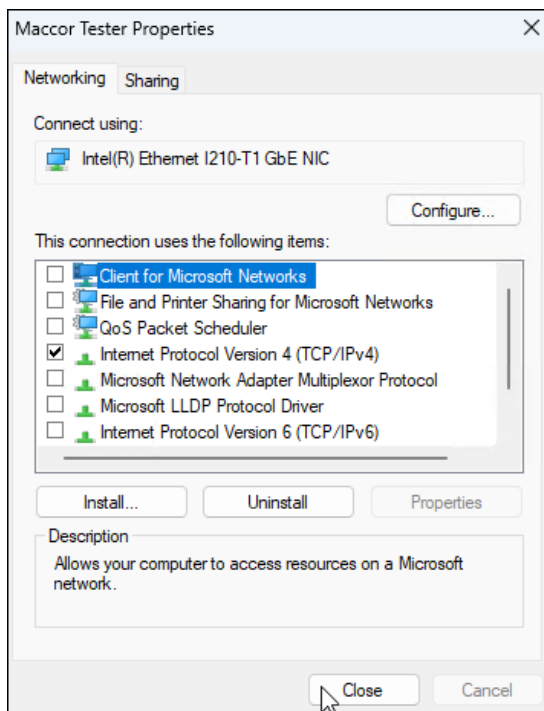


3. NIC Power-save settings


- a. At Windows Search, type in “device manager”, click Device Manager under “Best match”

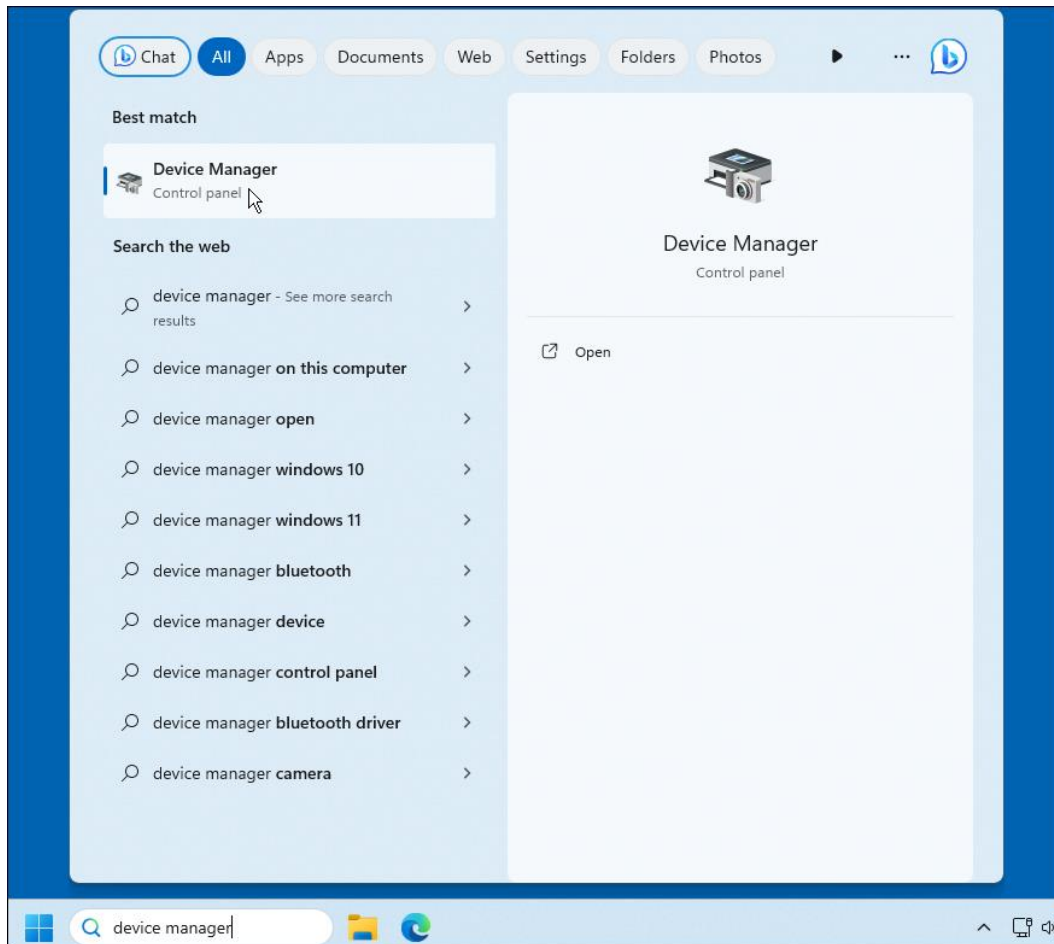


- b. Expand “Network adapters”, highlight integrated NIC, right-click, select Properties.

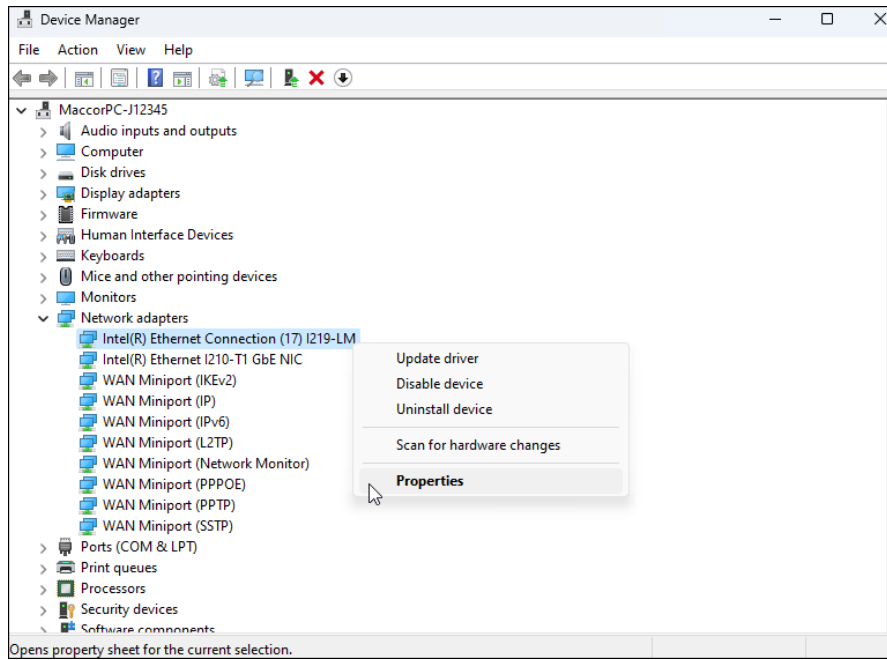


- c. Click [Power Management] tab

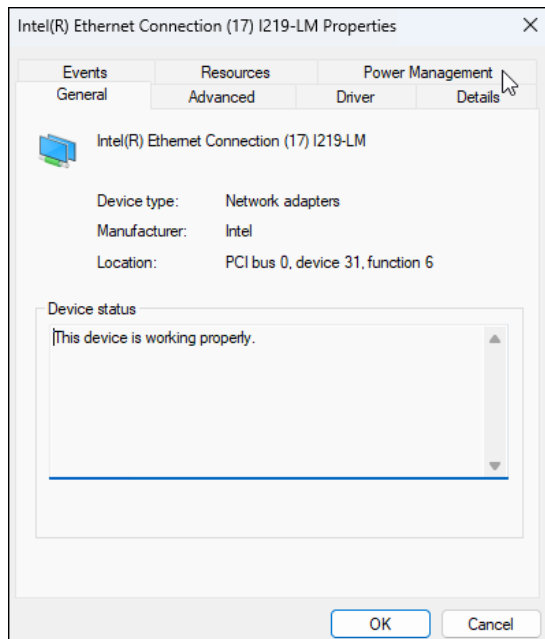

- d. Un-check box for “Allow the computer to turn off this device to save power”, click [OK]

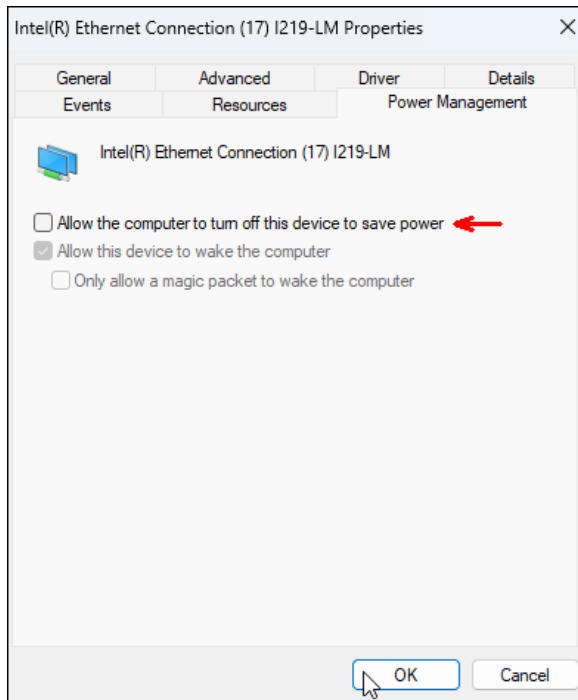


- e. Perform same steps with PCIe NIC as steps 2-4 above, then “X” out and close Device Manager.

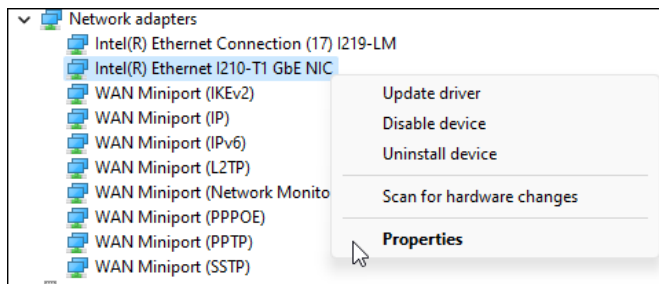


R. Windows Firewall

1. Exceptions for Maccor Software


- At Windows Search, type “firewall”, click (Windows Defender Firewall) under “Best match”.

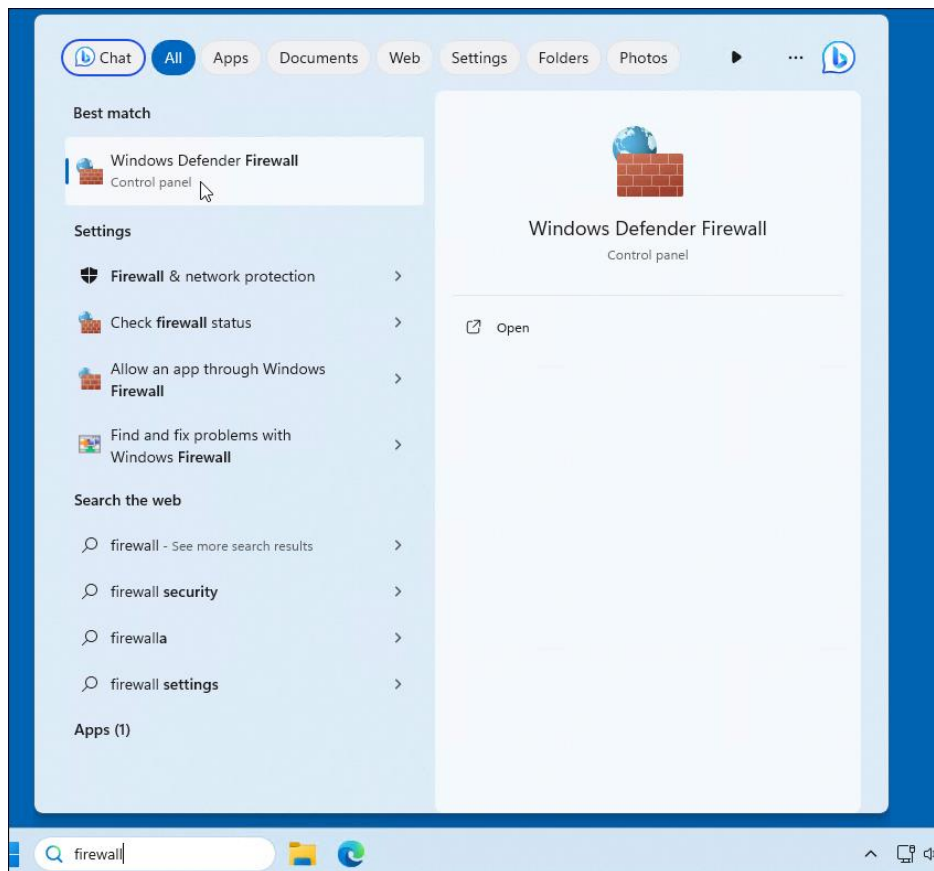


- At far left, click “Allow an app or feature...”

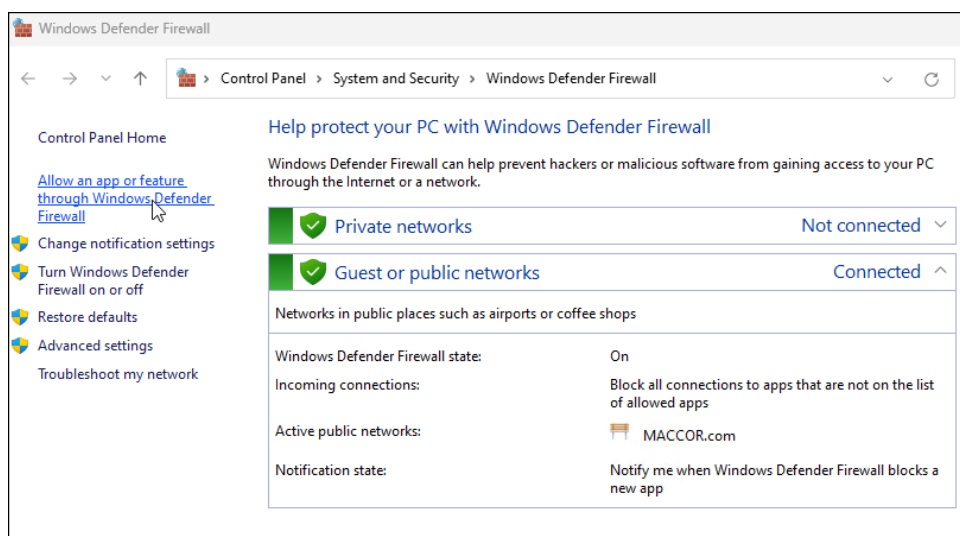


c. Click [Change settings] button

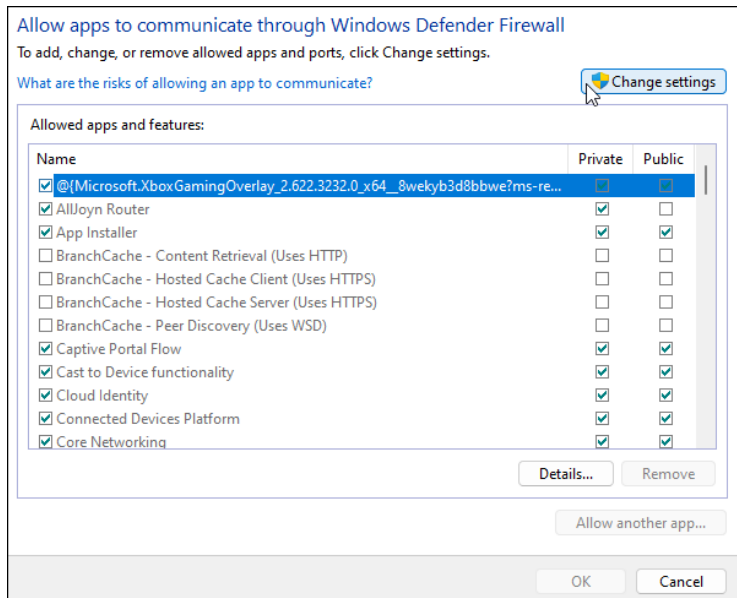


d. Click [Allow another app...]

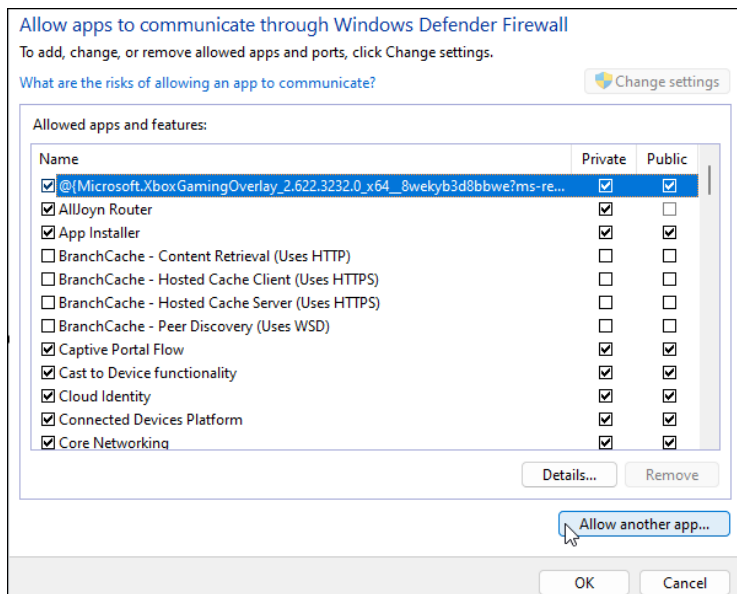


e. Click [Browse]

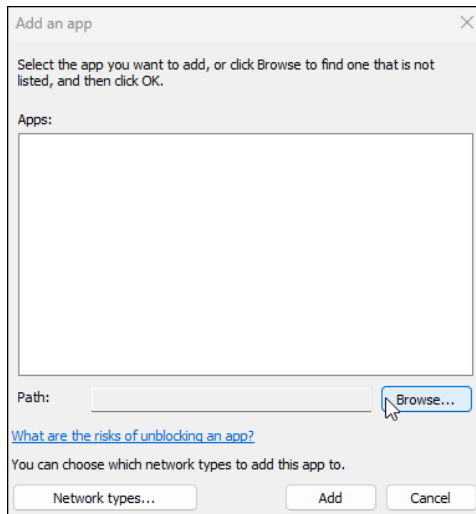


f. Browse to C:\Maccor folder, select MacTest32 application, click [Open]

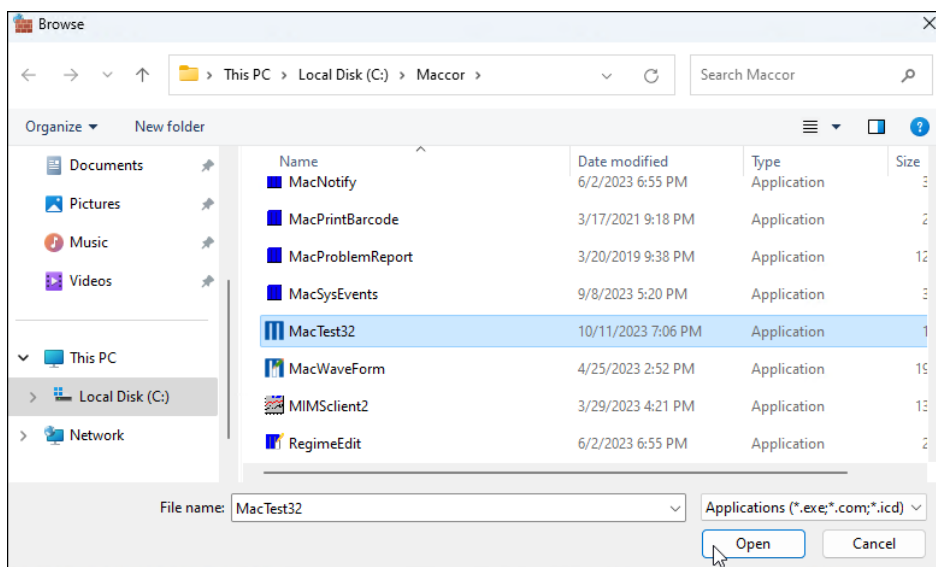


g. Click [Network types...]

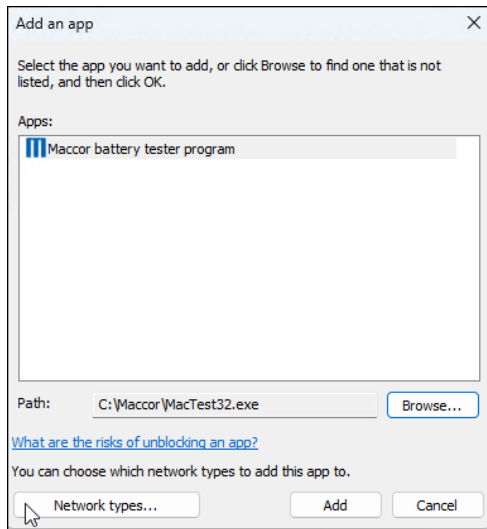


h. Verify both Private and Public are checked, click [OK]

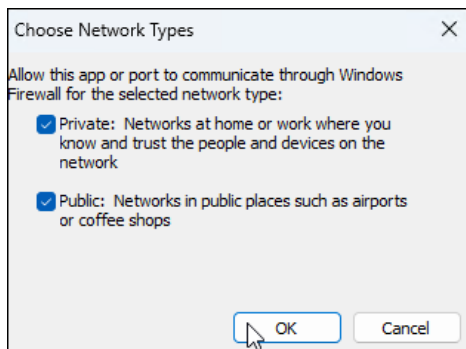

i. Click [Add]

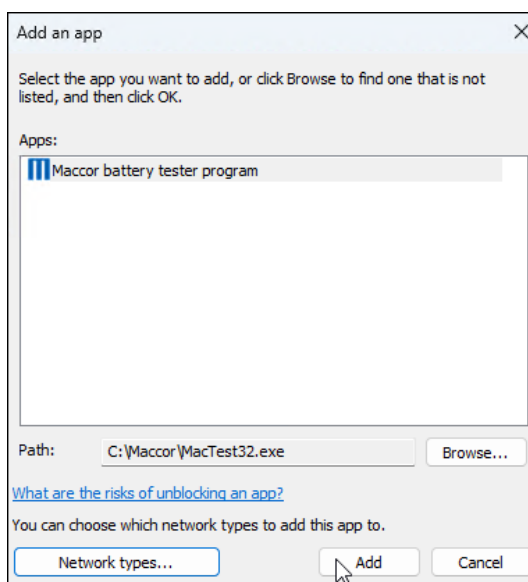

- j. Repeat steps 4-9 by adding “MaccorCalibration”, “MacIP”, and “MacEVcontroller” from within Maccor folder.
- k. Verify all four applications are listed, click [OK], then “X” out and close Windows Firewall.

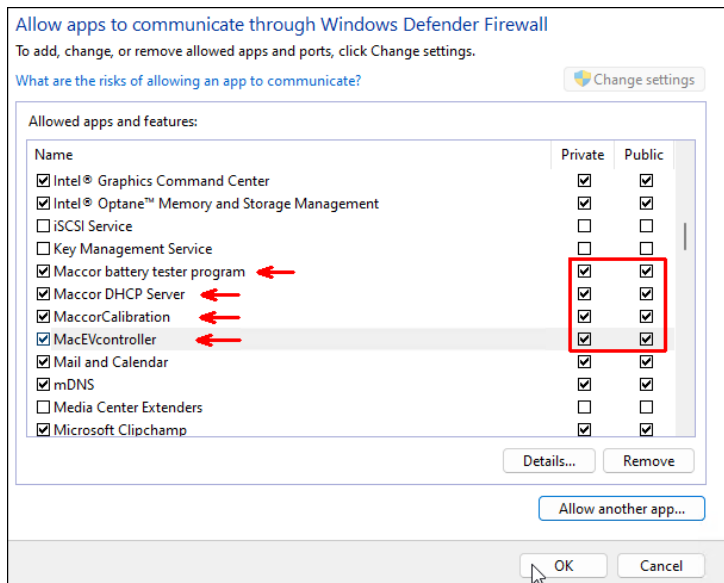


* Note: “MacIP” will appear in the list as “Maccor DHCP Server”


S. Local Group Policy Editor – Disable Windows Automatic Updates

1. Disable Automatic Updates


- a. On keyboard, press Windows *key* + *R* to open Run dialog, then type in *gpedit.msc*, press [Enter]

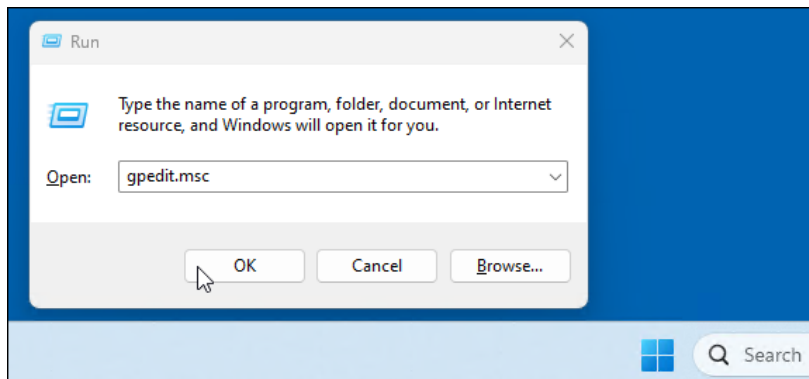


b. Expand Administrative Templates

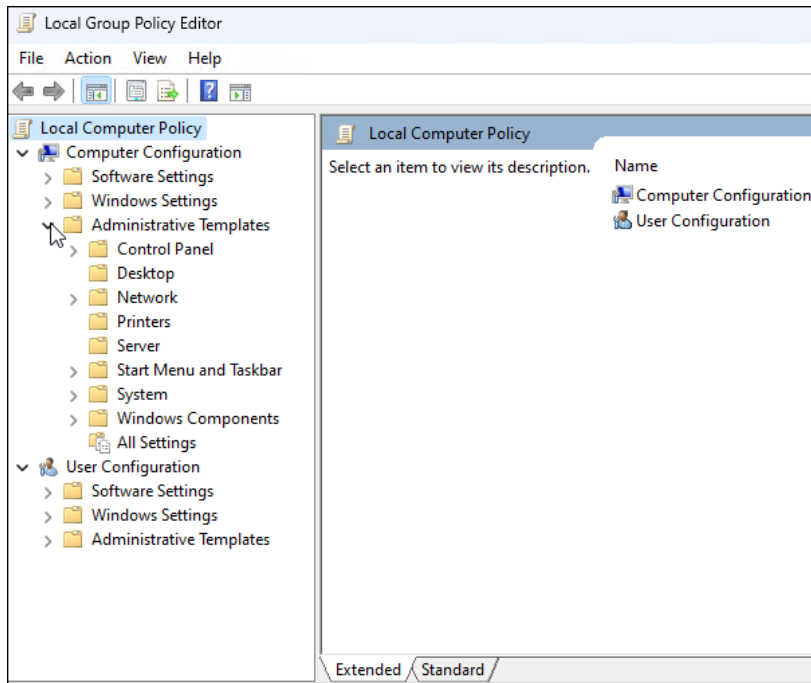


c. Expand Windows Components

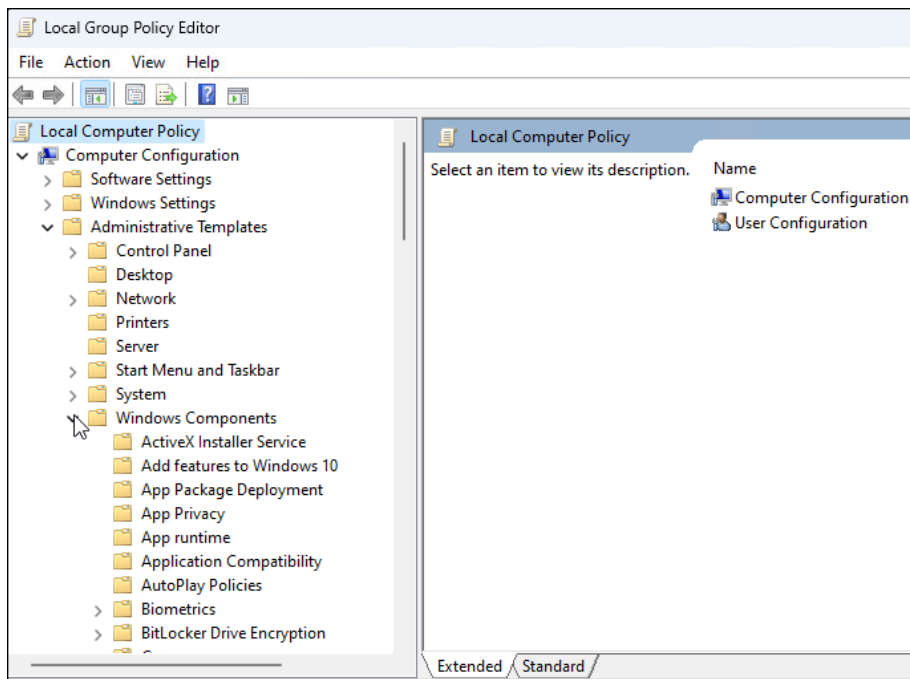


d. Expand Windows Update

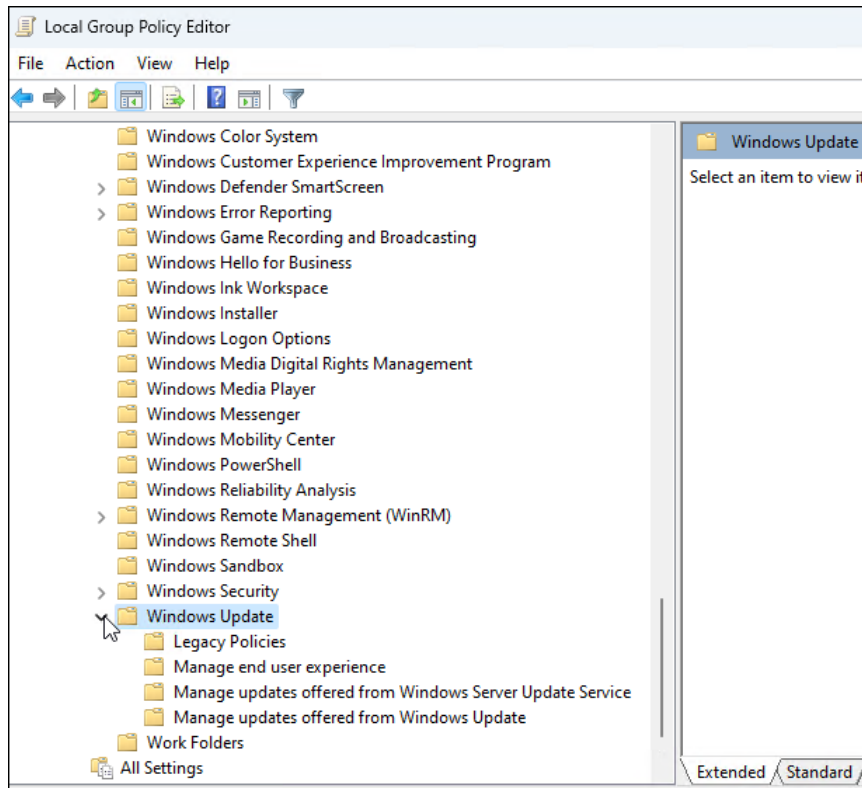


e. Select/highlight “Manage end user experience”

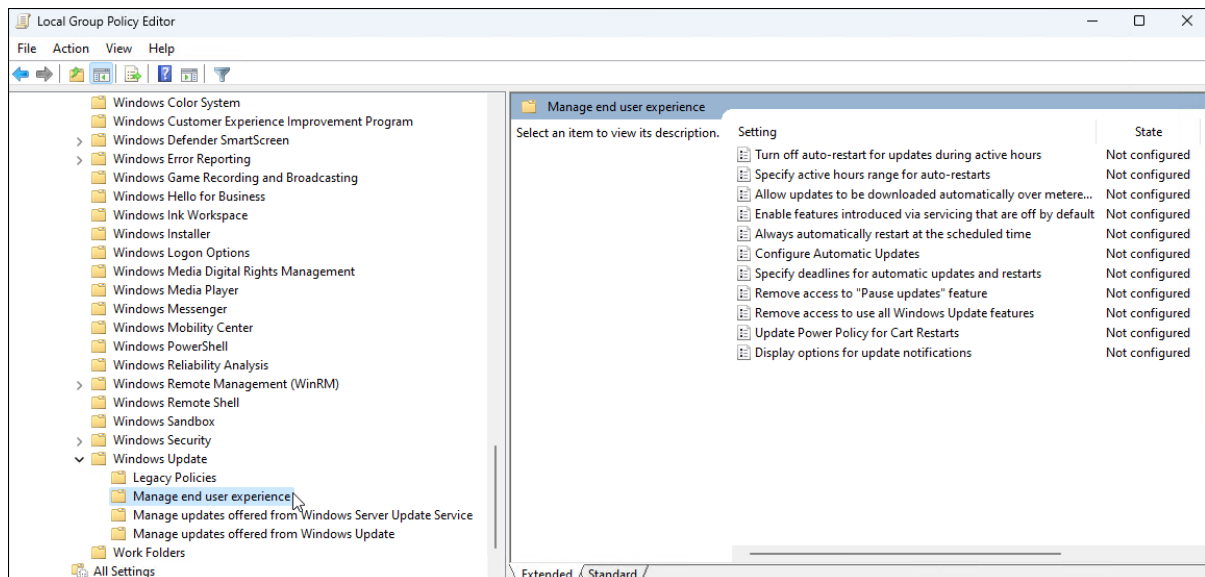

- f. Select/highlight “Configure Automatic Updates”, click to edit policy settings

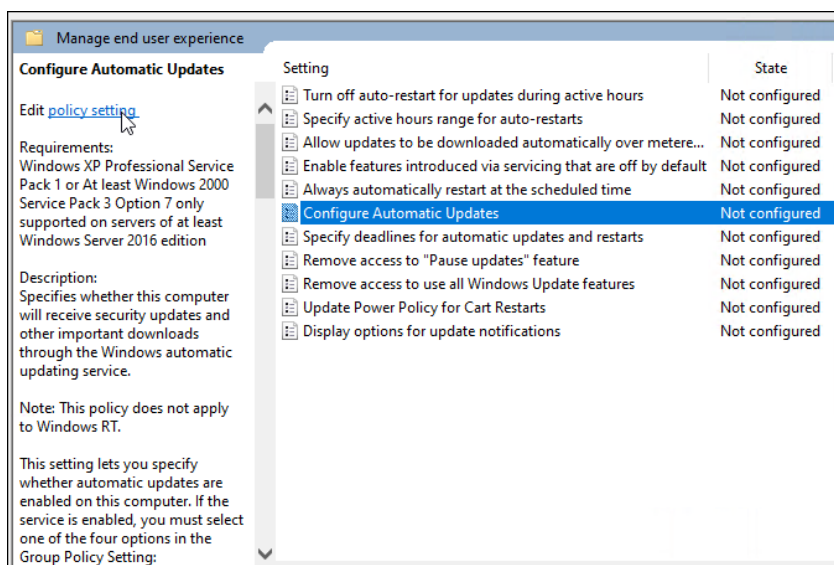


- g. Select “Disabled”, click [Apply], [OK].

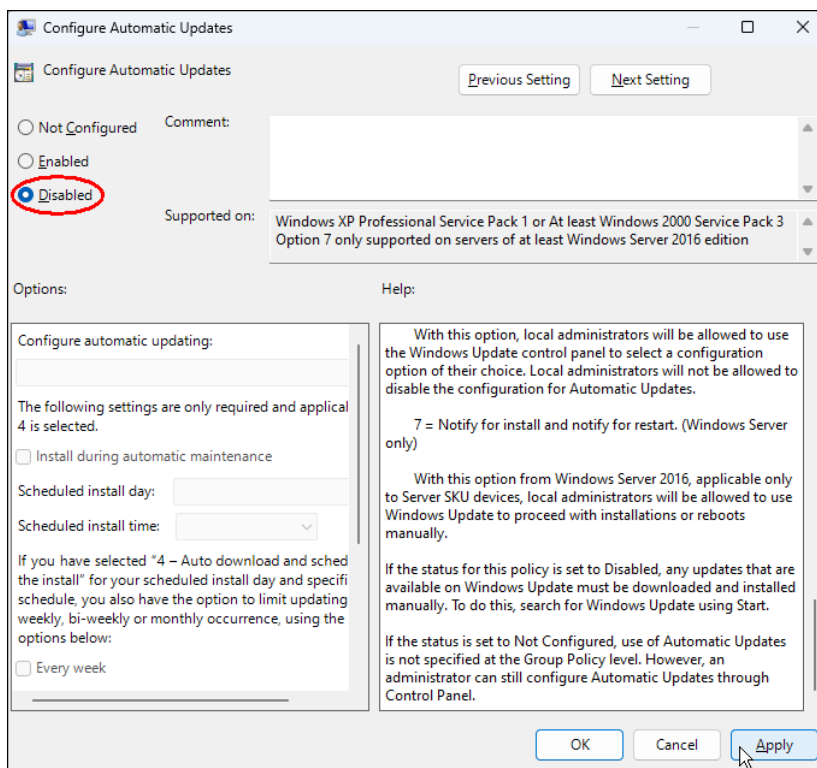


T. PC Performance Settings

1. Power Options


a. From Control Panel, select "Hardware and Sound"

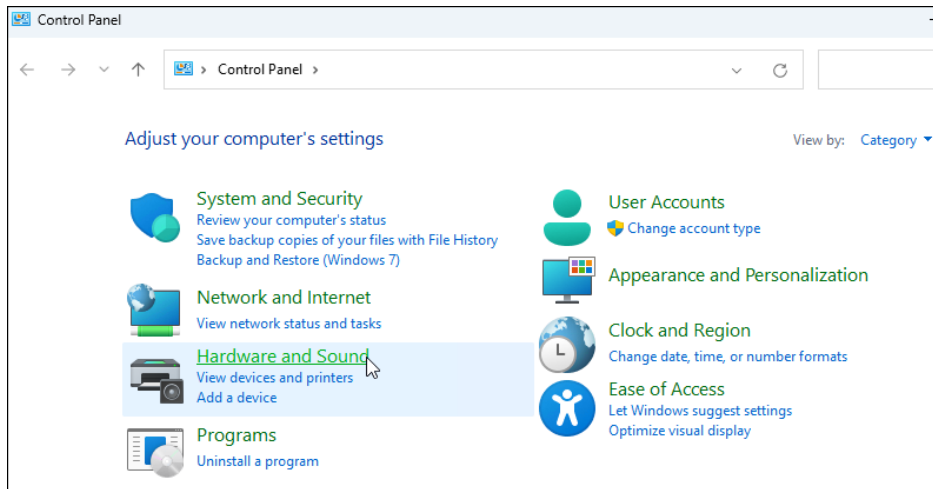


b. Select "Power Options"

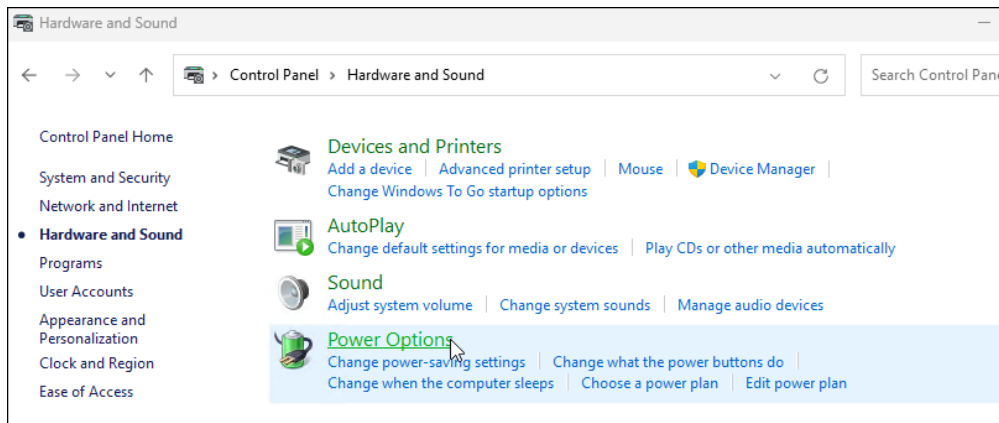


c. Expand hidden dropdown menu under "Show additional plans"

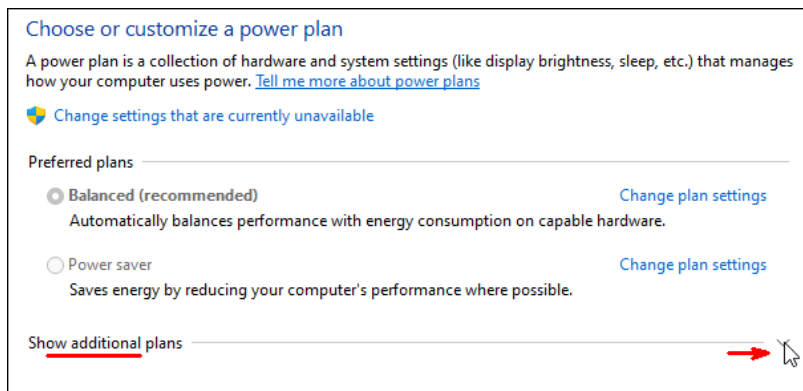


- d. Change to “High Performance” and click “Change plan settings”

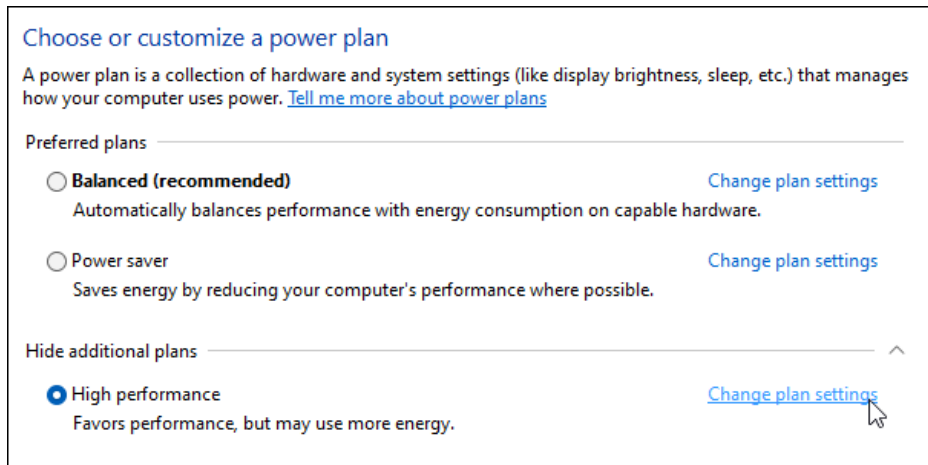


- e. Change to “Never”, then click “Change advanced power settings”.

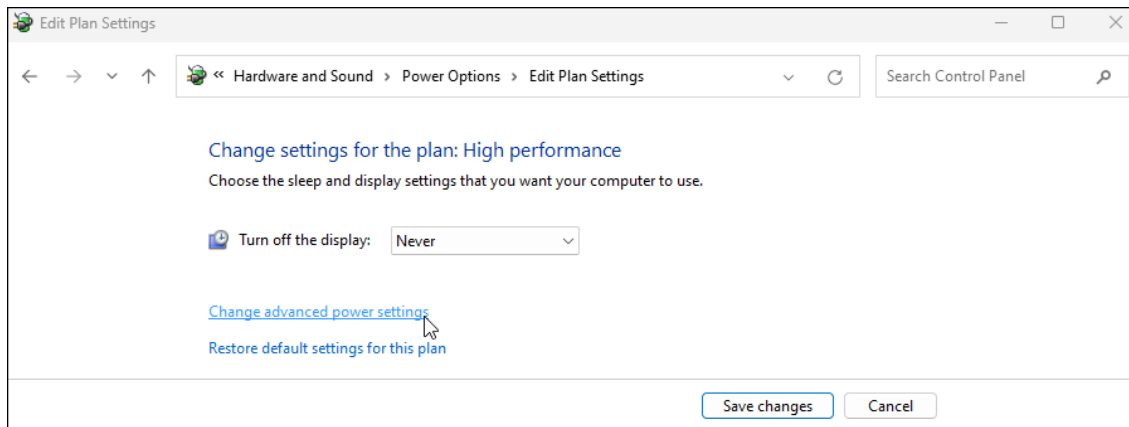


- f. Change “Hard disk” and “Hibernate after” to **Never**.

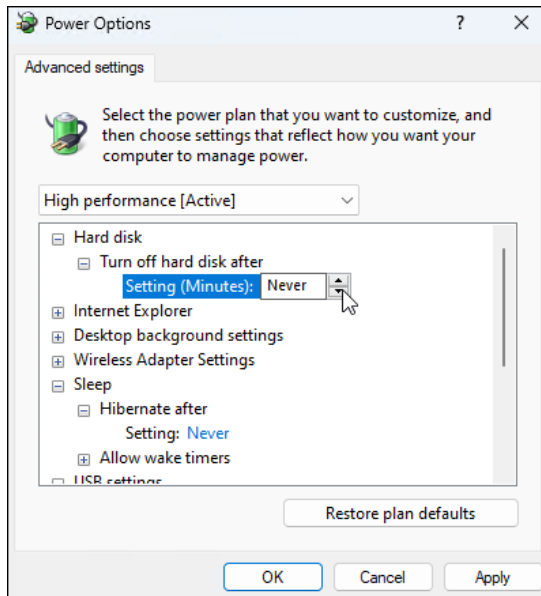


- g. Set USB selective suspend to **Disabled**, click [Apply], [OK]

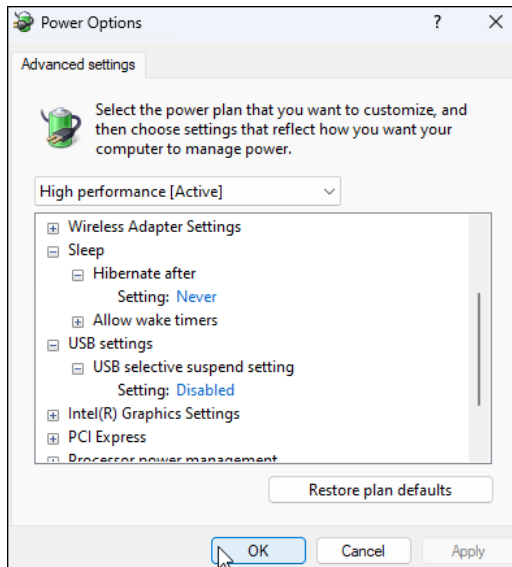

h. Click [Save changes]

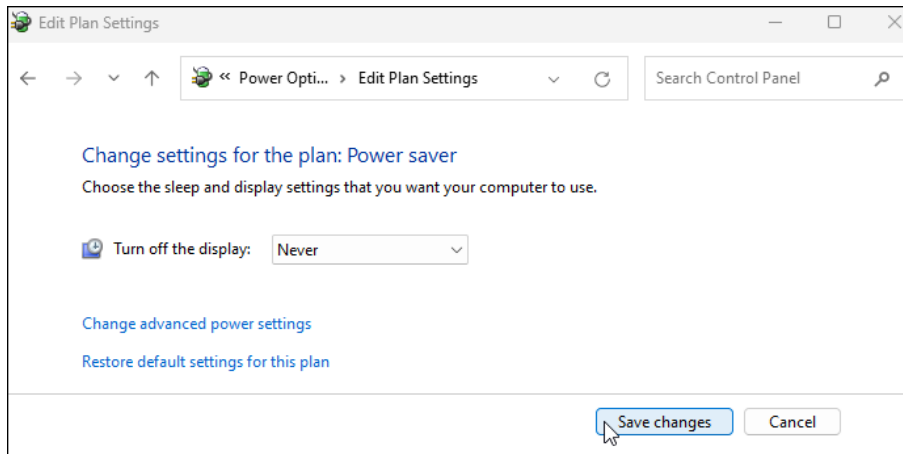


i. "X" out and close

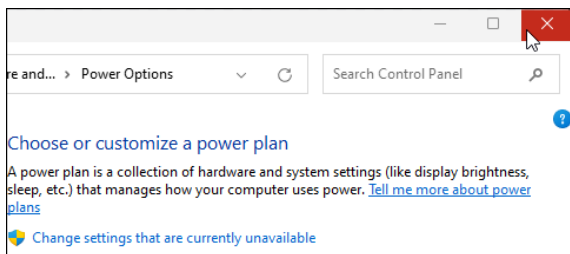


U. Disable System Protection

1. Instructions


- a. At Windows search, type “system protection”, then click “Create a restore point” under “Best match”

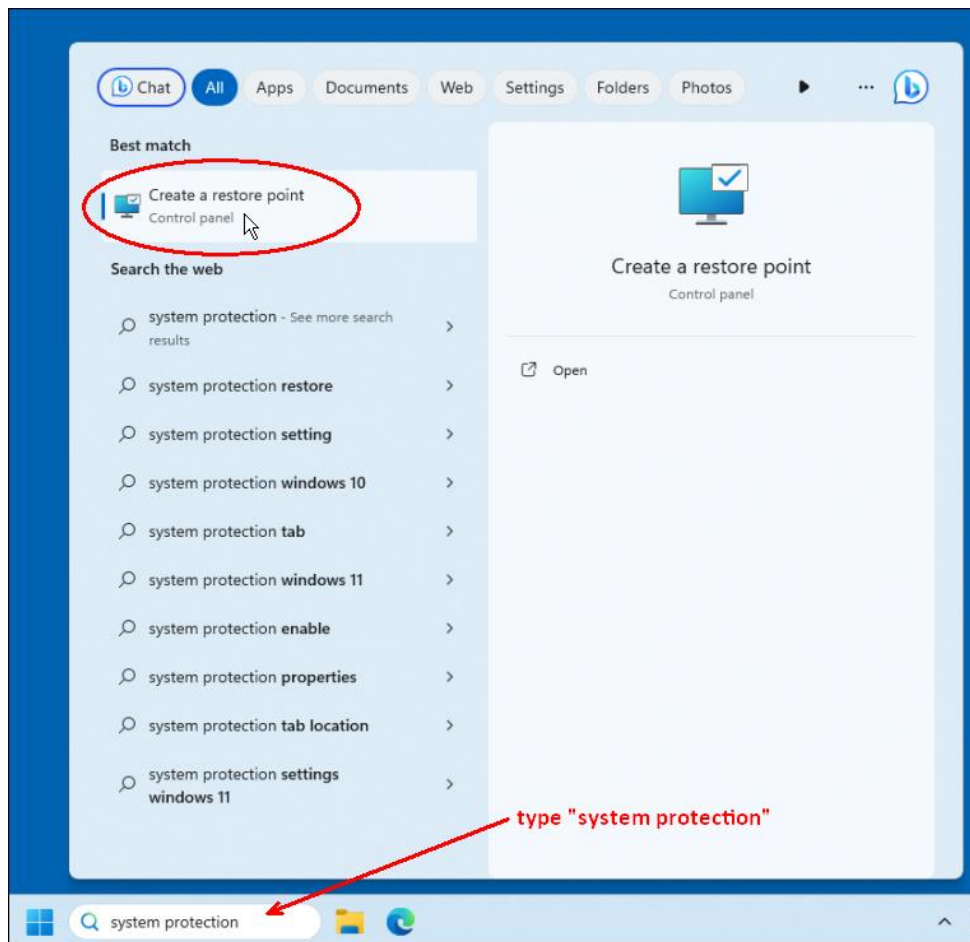


- b. Click [Configure]

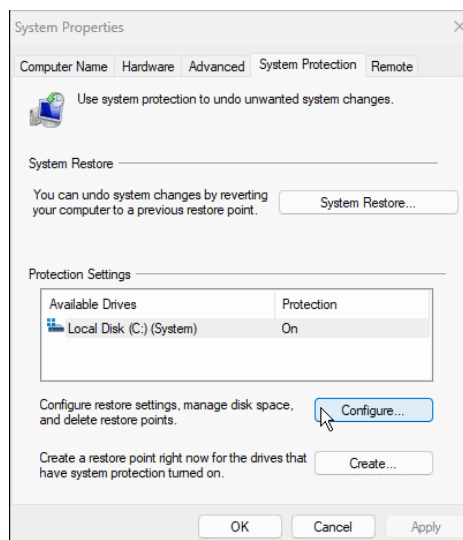


- c. Select “Disable system protection”, click [Apply]

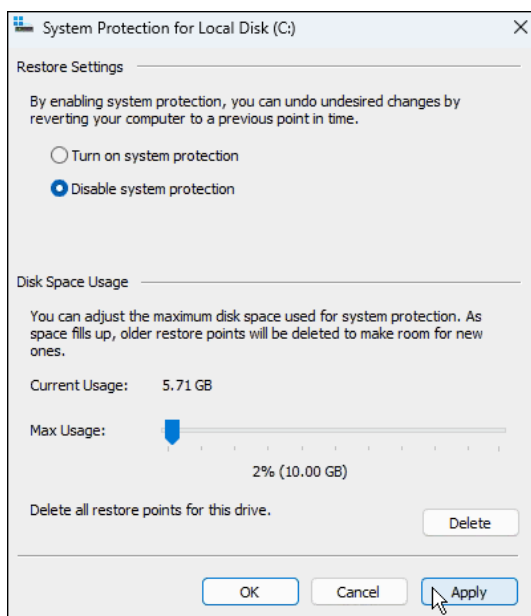


- d. Click [Yes]

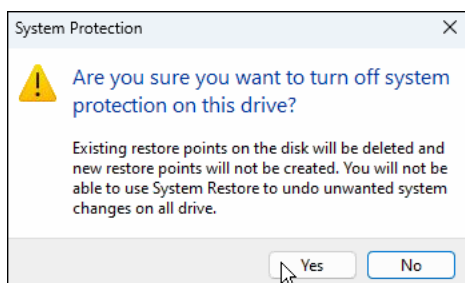

- e. Click [OK]

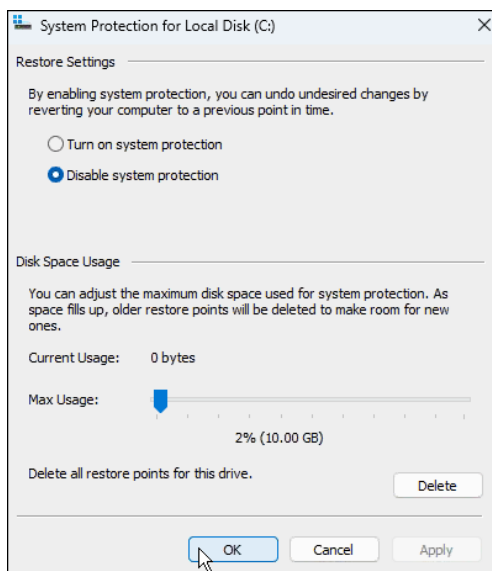


f. Click [OK]

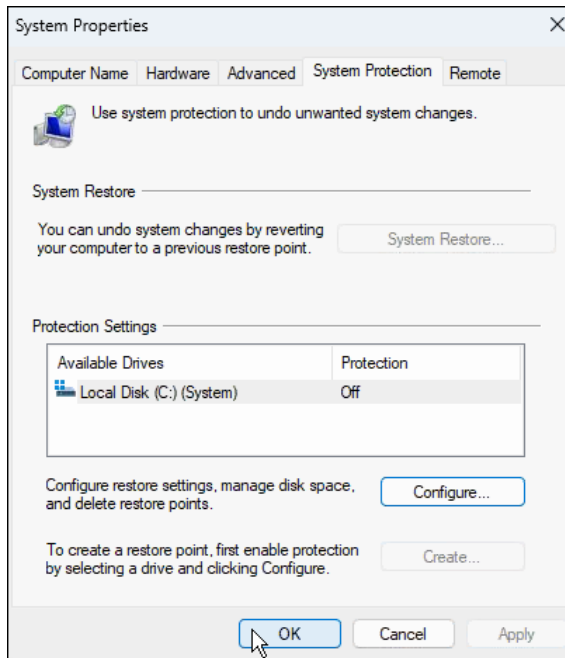


V. Modify “File Extensions and Hidden File” settings.


1. In desktop search bar, type “Control Panel”, click [Control Panel] under “Best match”

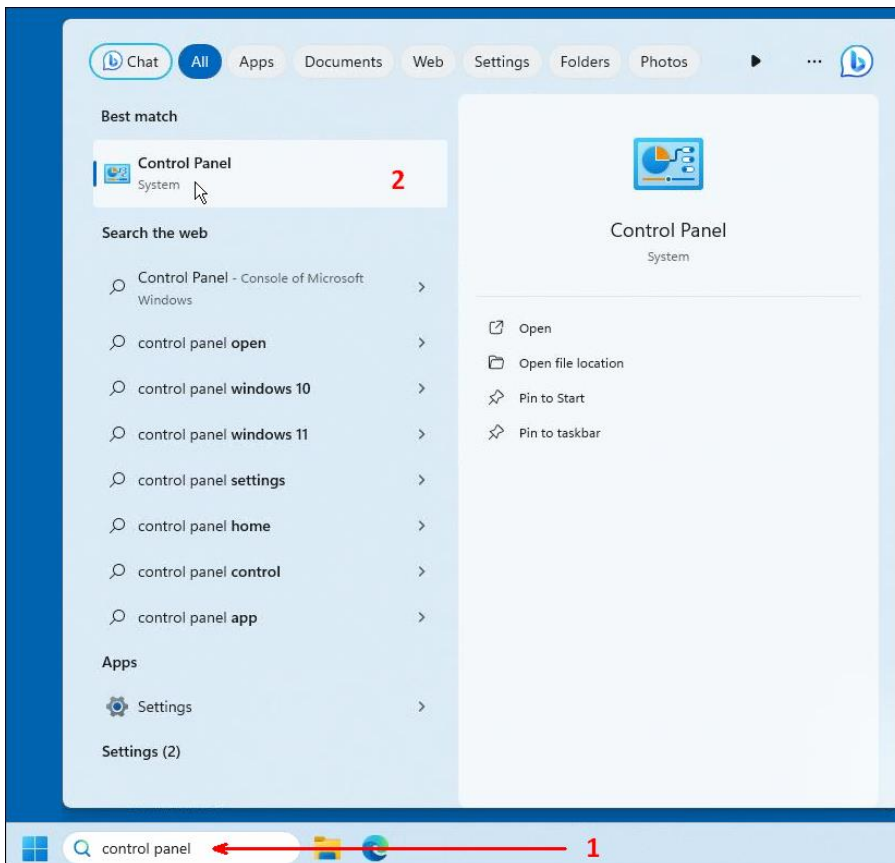

2. With View set to “Large” icons, select “File Explorer options”

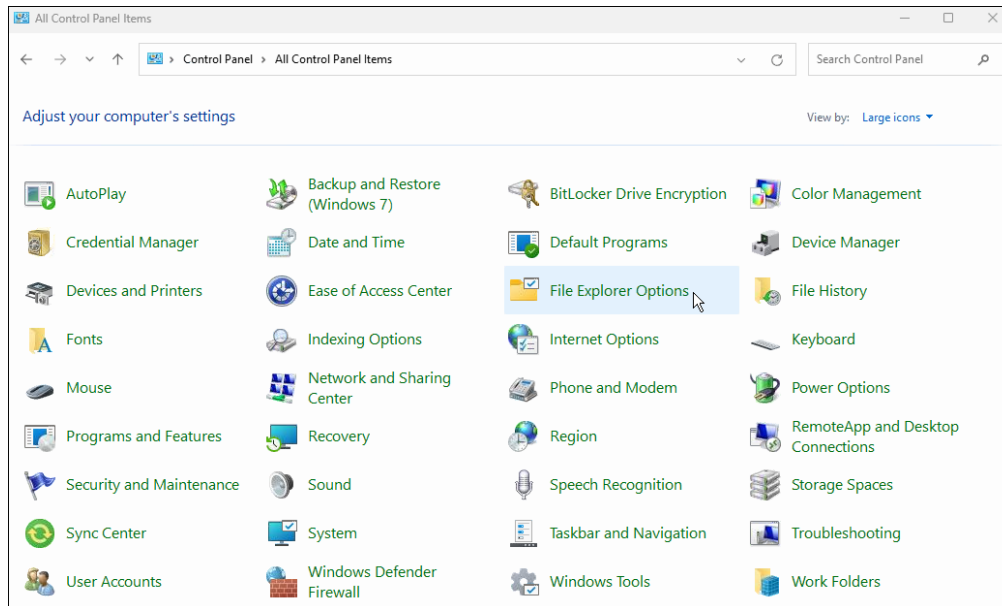

3. With “View” tab in focus, verify settings are as follows and click “Apply,” “Ok”

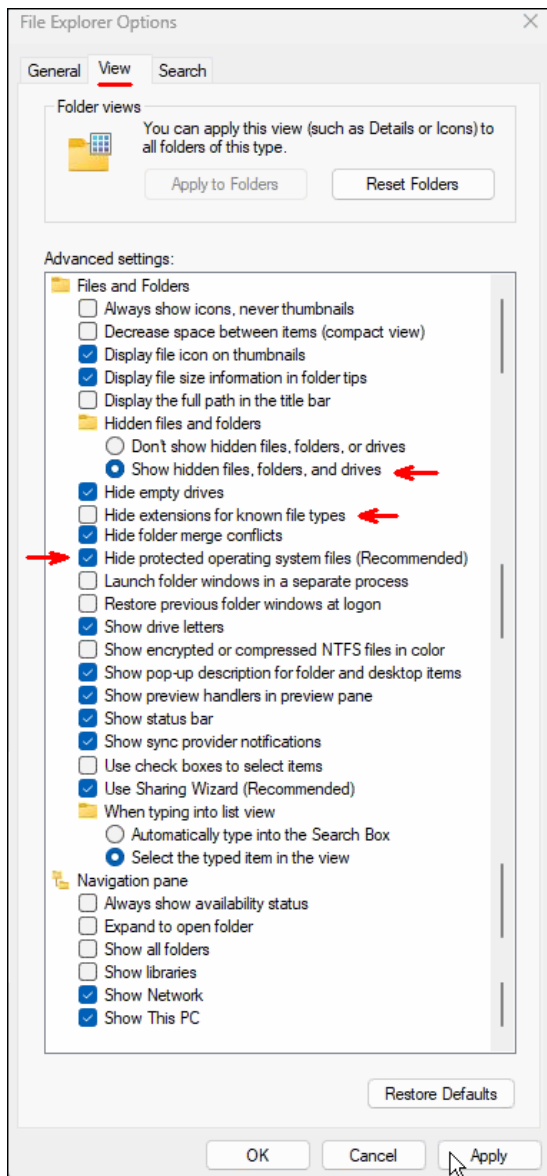


* A total of two changes should be made; the remaining selections are default and left unchanged:


- Show hidden files, folders, and drives
- Un-check box for “Hide extensions for known file types”

W. Disable Windows Auto-Defragmentation


1. At Windows search, type “defragmentation”, click [Defragment and Optimize Drives]

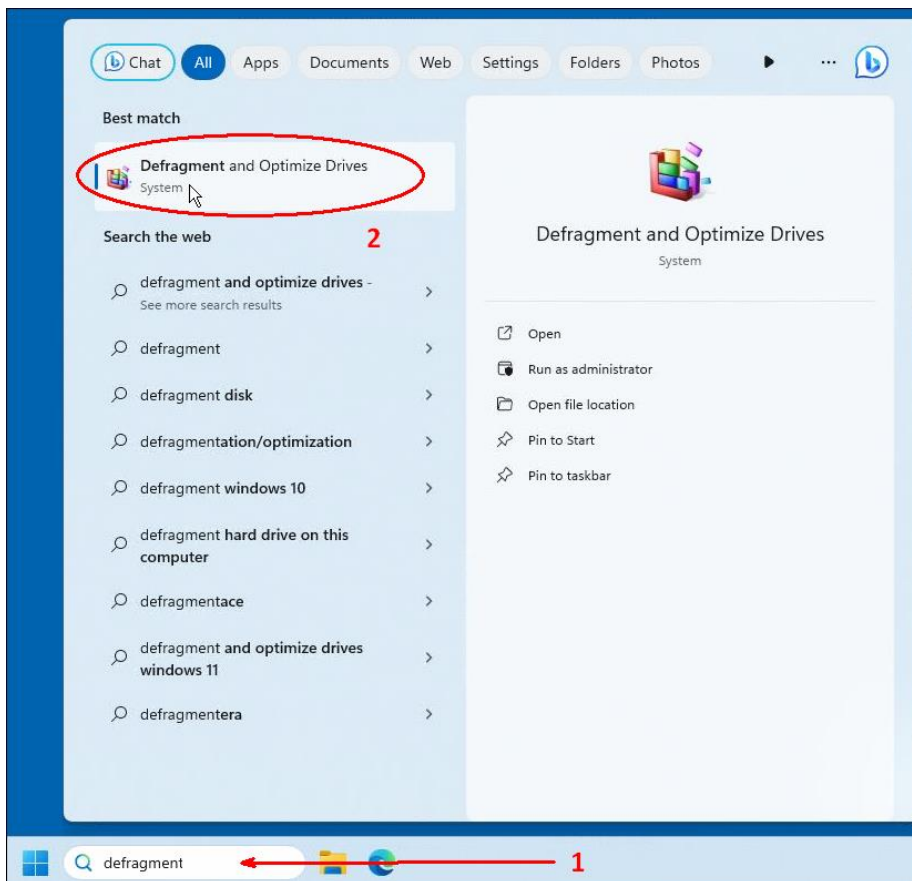


2. Click [Change settings]

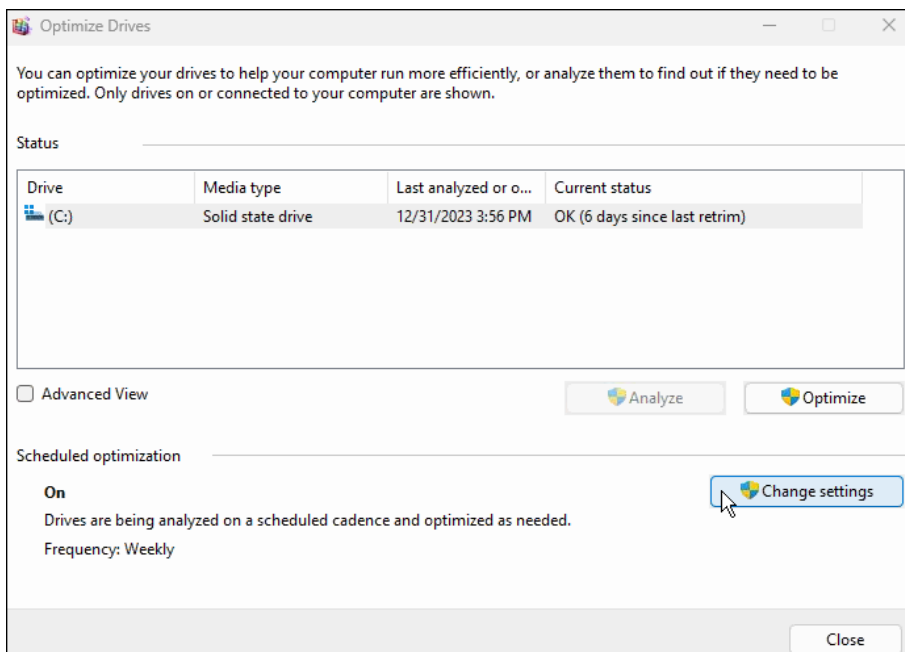

3. Uncheck box for “Run on a schedule”, click [OK]

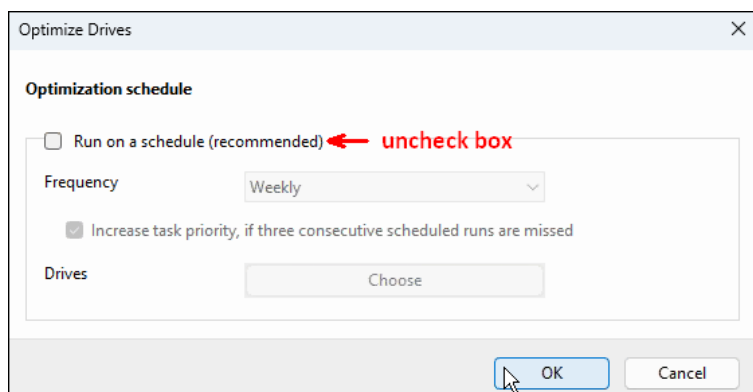

4. Click [Close]

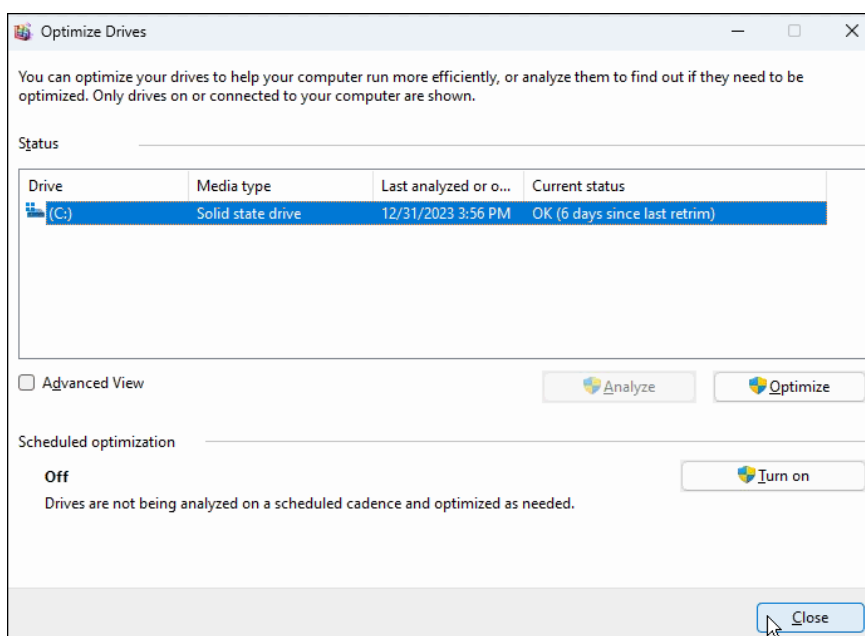


- * Auto-Defragmentation is disabled to prevent Fragmentation from occurring while active tests are running which may lead to a “No Heartbeat” condition.
- ** Defragmentation may be performed manually during scheduled lab and PC maintenance while active channels are suspended or cleared.

X. Appendix A – Installing Support for ParStat, Solartron, or Modulab EIS


The .NET Framework 3.5 must be installed on the PC or the EIS component driver installation will be prevented. Windows 11 has the .NET Framework 3.5 disabled by default and must be enabled. The instructions below will show how to first enable the feature which will then allow Windows update to retrieve the required software. After the .NET Framework (3.5) has been installed, if a ParStat or VersaStat is to be used, Maccor Software Installation with support for Parstat must be selected.

1. Installing .NET Framework 3.5


- a. At Windows search, type “Control Panel”, click [Control Panel]

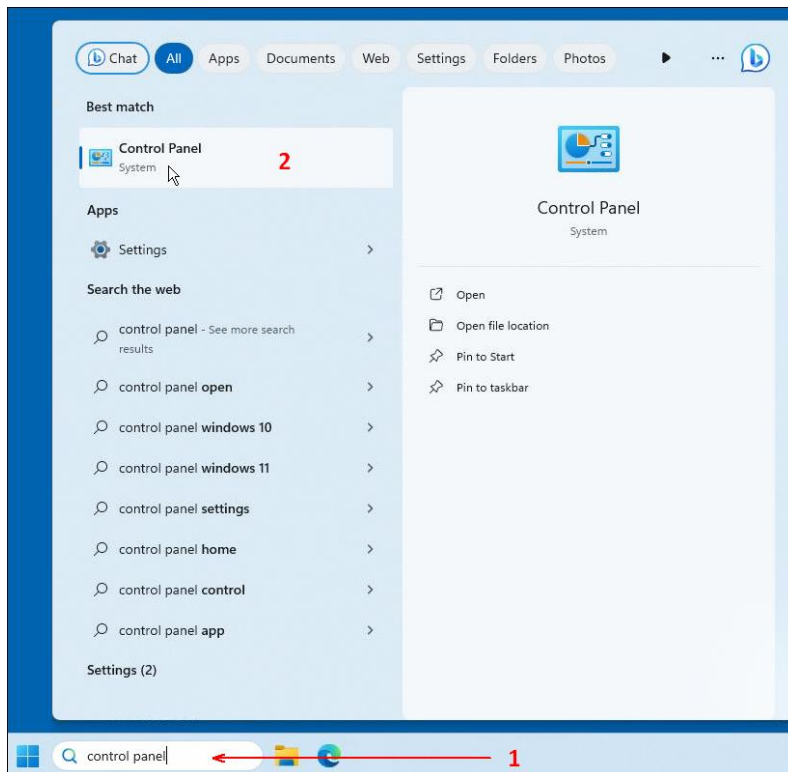


- b. View by category, click “Programs”.

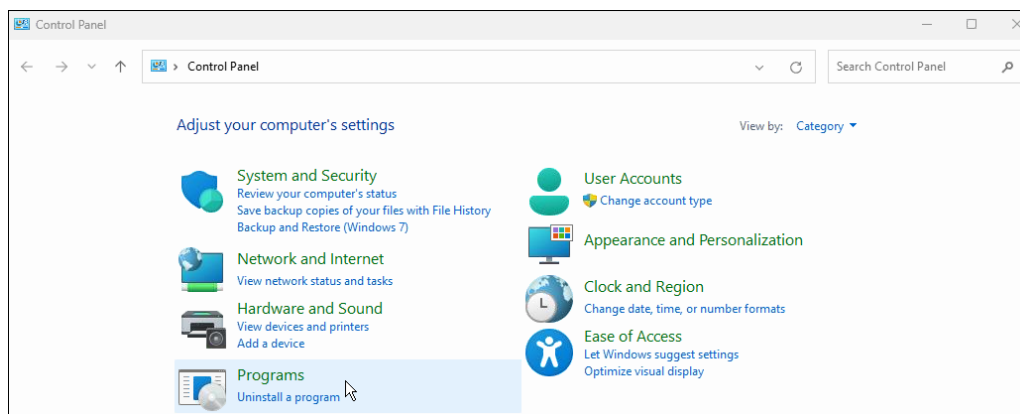


- c. Click “Turn Windows features on or off”

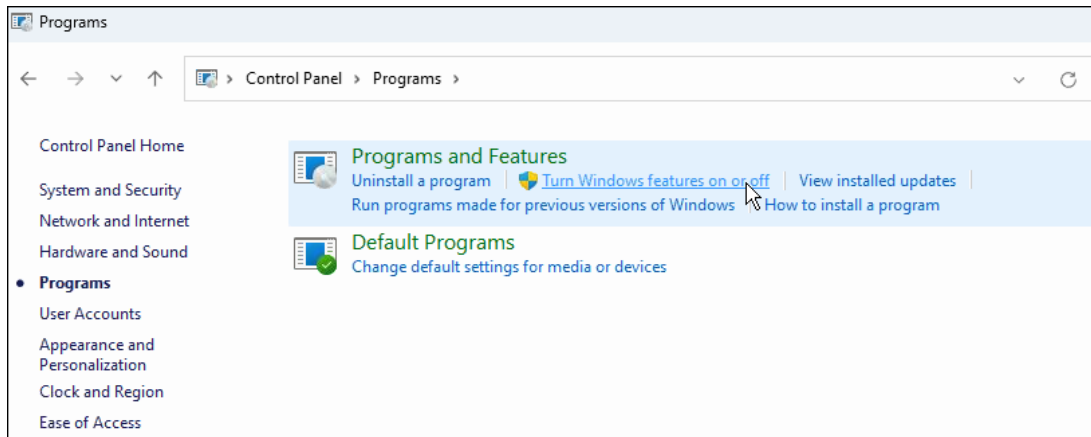


- d. Check box for .NET Framework 3.5, click [OK]

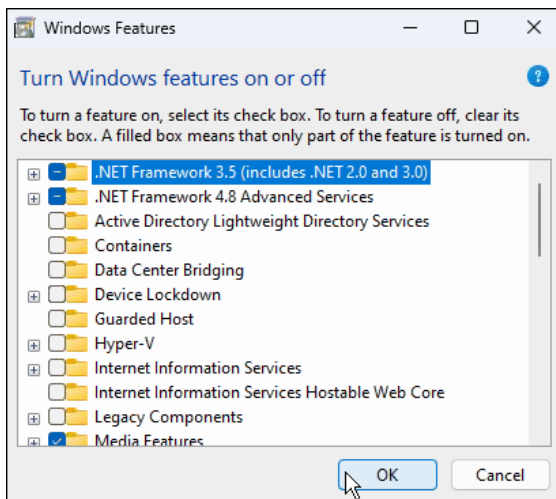


- e. Select “Let Windows Update download the files for you”

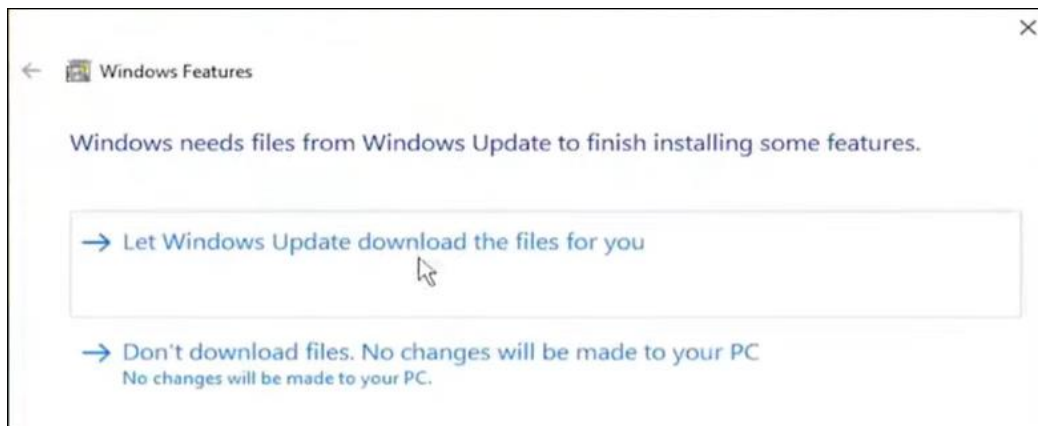

- f. Windows will download required files and apply changes

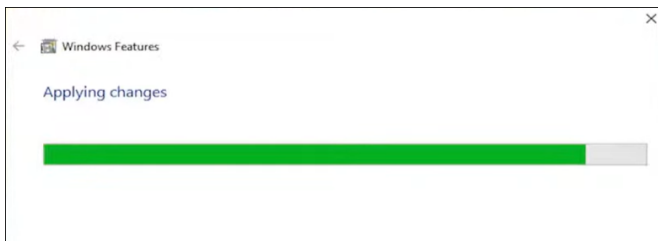

- g. Click [Close] after Windows completes the install

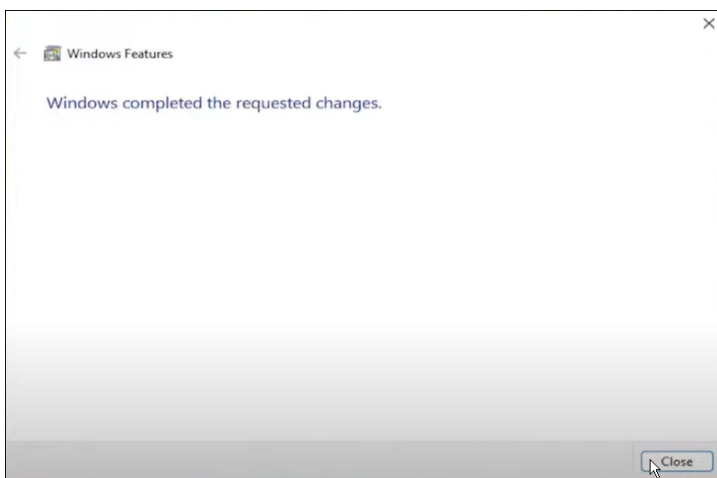

- h. Restart PC

** Maccor Software with ParSTAT support can now be installed.*

